

Oslo Pendant

65160 | 1.1

GENERATION LIGHTING

SAVE THESE INSTRUCTIONS!

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

 
Incandescent version may be dimmed with a standard incandescent dimmer.
LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.


CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

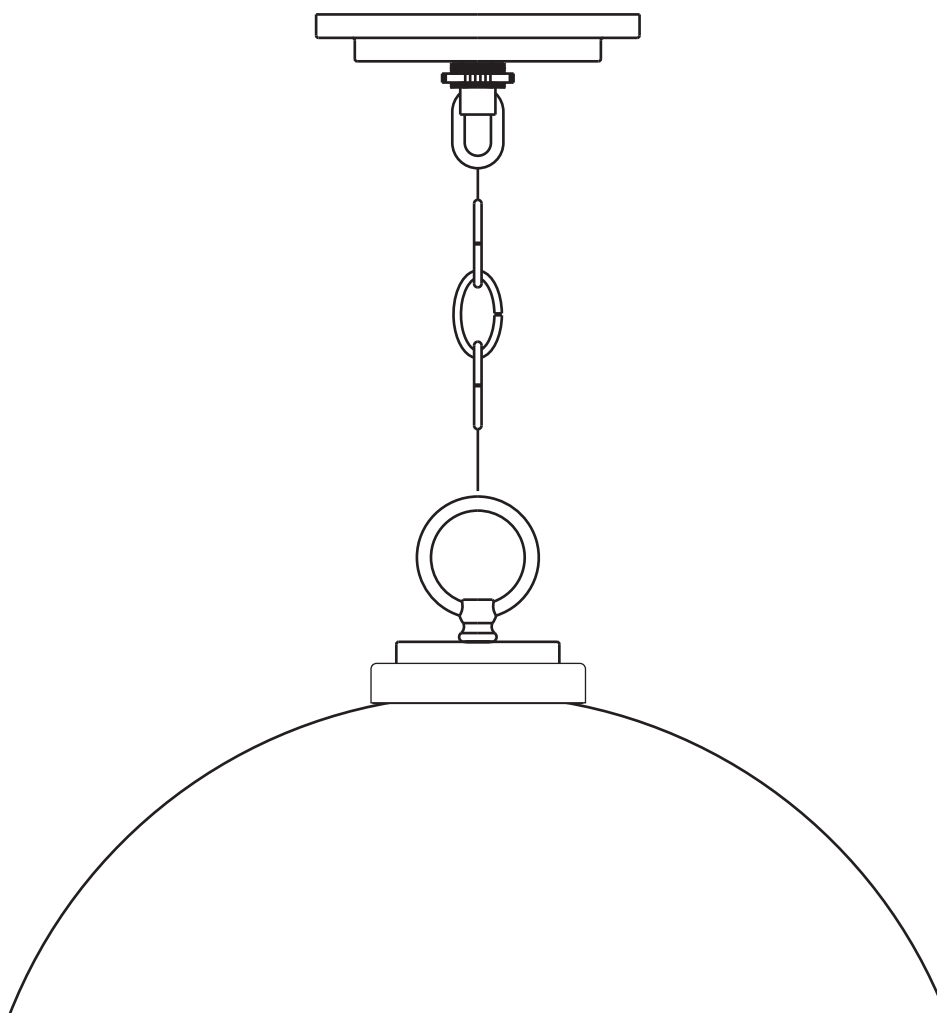

Install the Fixture

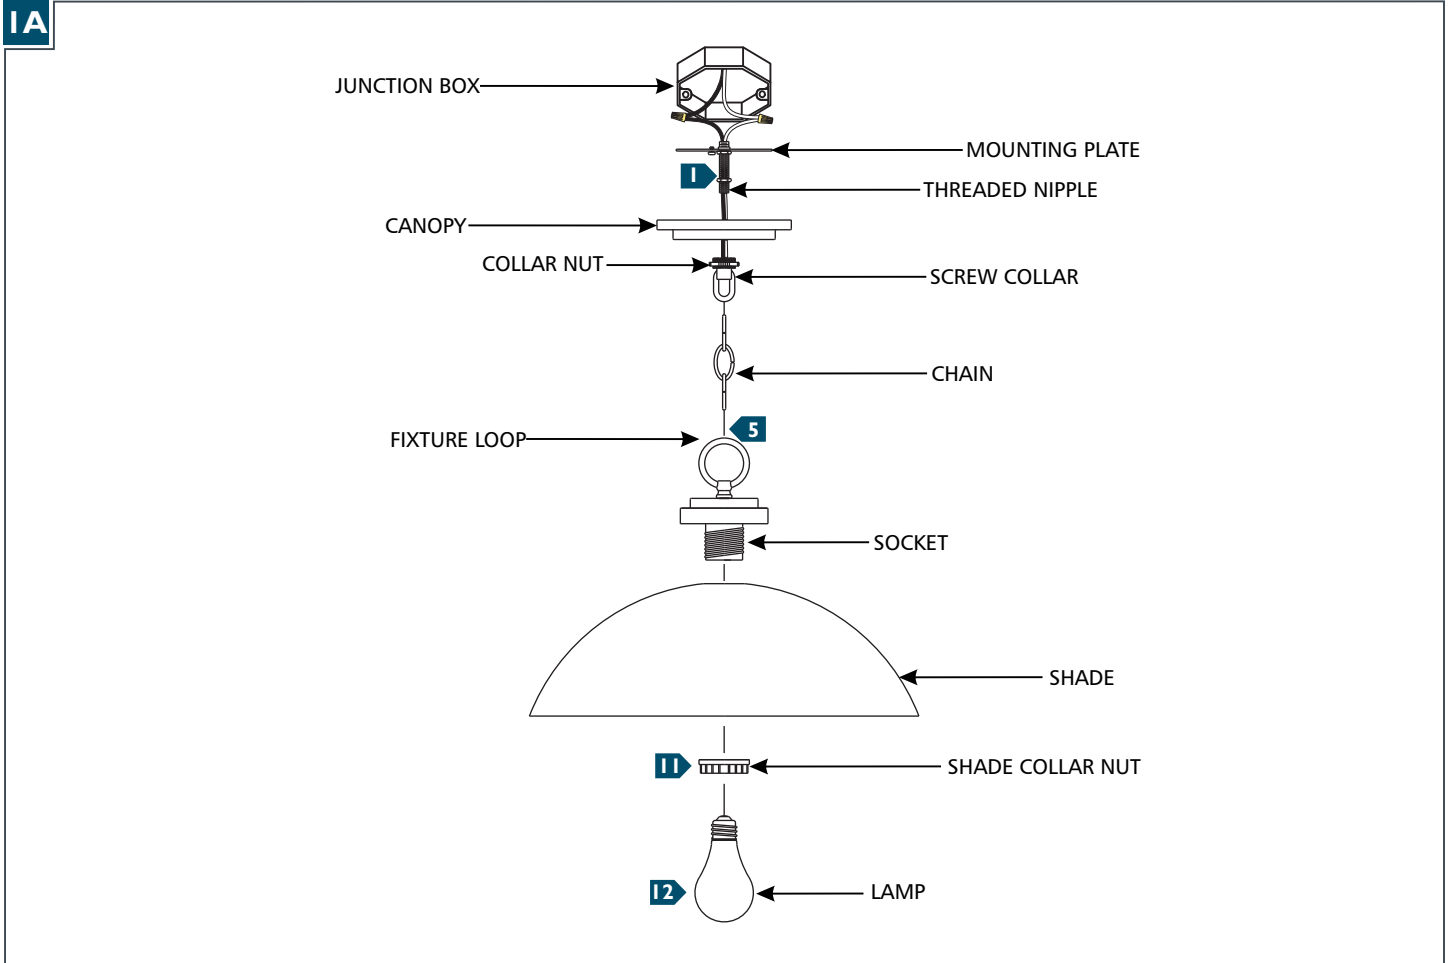 

- 1** Screw the shorter end of the threaded nipple tightly onto the mounting plate.
- 2** Secure the mounting plate to the junction box.
- 3** Screw the screw collar tightly onto the threaded nipple.
- 4** Determine the wanted height of the fixture and remove a portion of the chain by opening a link and removing it from the bottom.
- 5** Install the canopy and the collar nut onto the chain (in that order), then install the open link onto the fixture loop and secure it in place by closing the link.
- 6** Weave the cord through the chain, screw collar, canopy, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 7** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 8** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 9** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 10** Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly onto the screw collar.
- 11** Place the shade onto the socket and secure it in place by installing and screwing in the shade collar nut.
- 12** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage information.