 
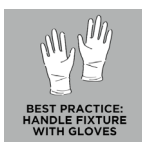 
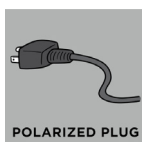 
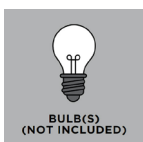 


## FANNY SLIM TABLE

HT1061

### General Product Information

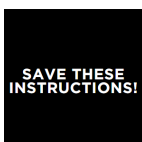

### Safety Information

 
#### IMPORTANT SAFETY INSTRUCTIONS

 
This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

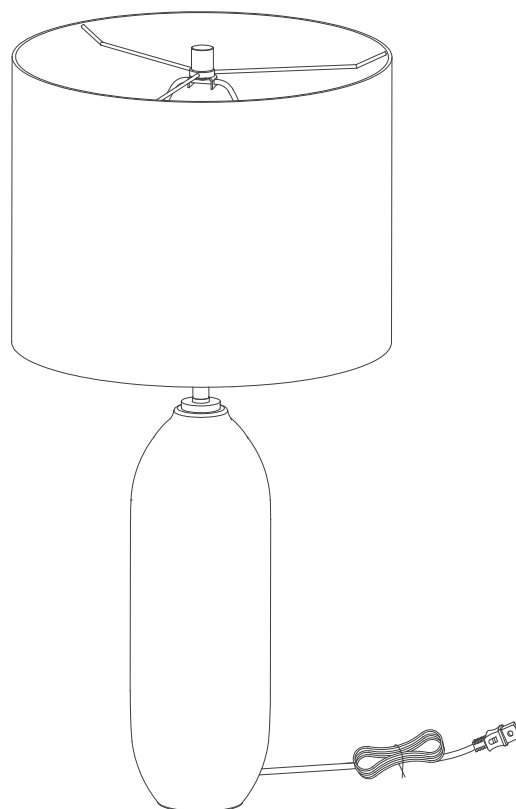

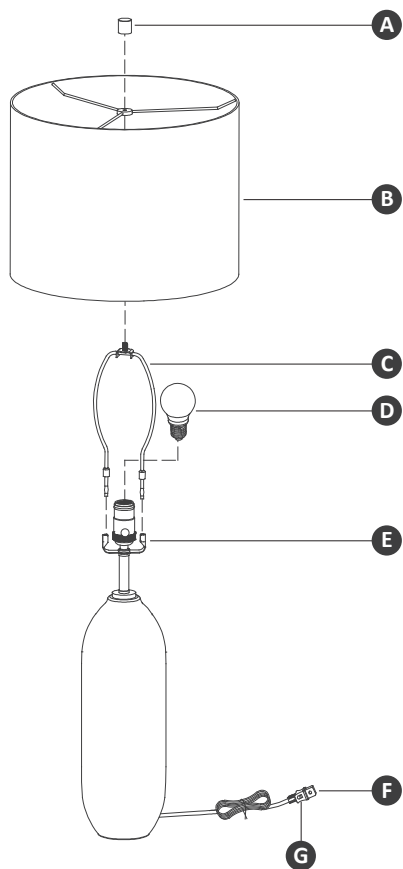

## FIXTURE PARTS

- A. Finial
- B. Shade
- C. Harp
- D. Light Bulb (Not Included)
- E. Saddle
- F. Protective Cover
- G. Plug

## INSTRUCTIONS

1. Unbox and inspect all items included in the fixture's packaging. Carefully place all parts on a clean, soft surface.
2. Squeeze the harp and insert it into the top of the saddle to install it.
3. Remove the finial from the harp.
4. Remove the shade from the packaging and install it to the harp using the finial.

**NOTE:** If the shade has additional packaging, carefully cut from interior of the shade to avoid damage.

5. Install the bulb (not included) into the socket. Refer to the socket label for the maximum wattage rating.
6. Remove the protective cover from the plug.
7. Plug the lamp into a functioning electrical outlet and test its operation.