


FANNY WIDE TABLE LAMP

HT1071

General Product Information:

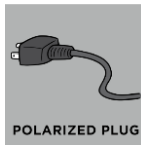

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.




Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.



FIXTURE PARTS

- A. Finial
- B. Lamp Shade
- C. Harp Nipple
- D. Harp
- E. Bulb (Not Included)
- F. Socket
- G. On/Off Switch
- H. Saddle
- I. Lamp Base
- J. Power Cord with Polarized Plug

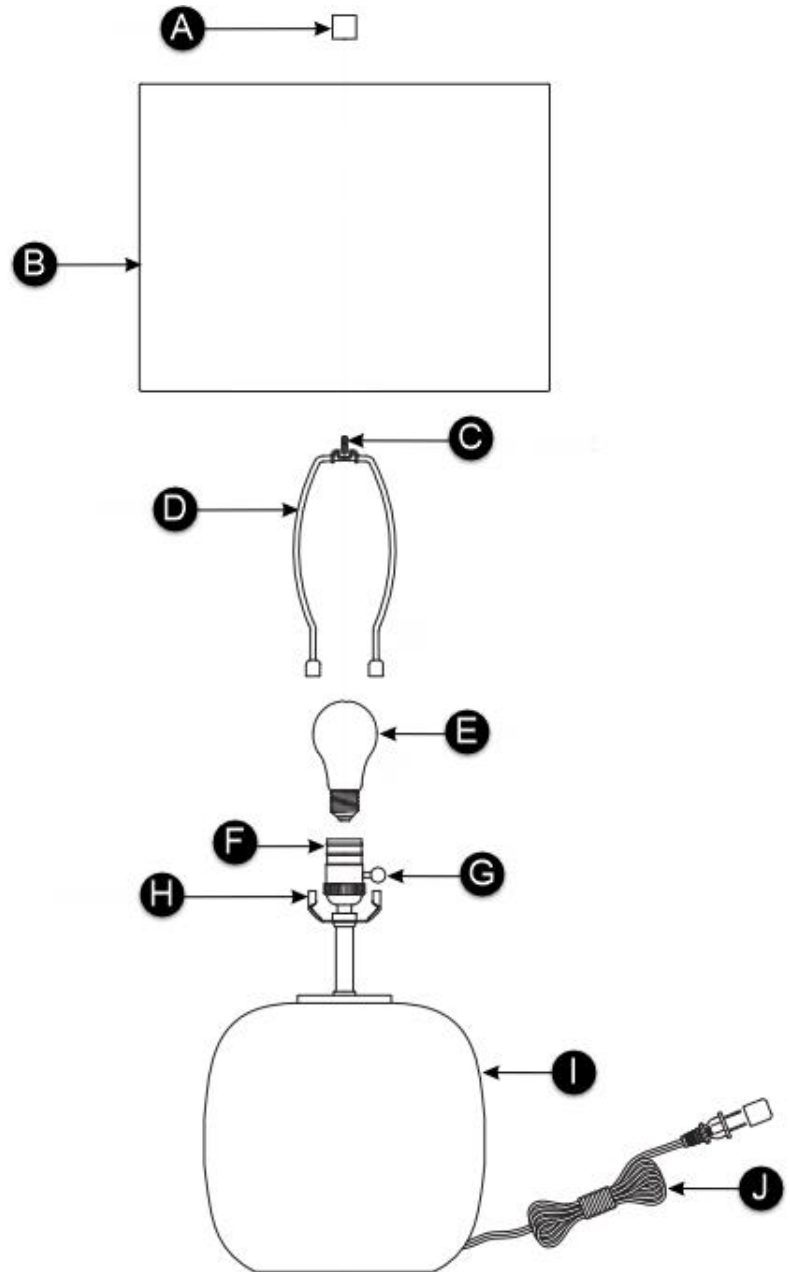

INSTRUCTIONS

1. Carefully unbox and examine all the items included in the packaging of the lamp.
2. Install the harp by squeezing it together and inserting it into the top of the saddle.
3. Remove the finial from the harp.
4. Next, remove the shade from its packaging and affix it to the harp.
5. Secure the finial to the lamp.
6. Screw the light bulb into the socket. Refer to the label on the socket for max wattage information.
7. Plug the lamp into a working electrical socket.
8. Use the switch to turn the lamp on/off to test for proper functioning.