

ESSWC-4-WH/AL-ENG

Installation & Operating Instructions

Ceiling Fan Slide Wall Control

WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

1. SAFETY PRECAUTIONS:

WARNING: To avoid fire, shock, and serious personal injury, follow all instructions carefully. Read your Owner's Manual carefully before installing the ceiling fan control. Retain Owner's Manual for future reference.

2. To avoid possible electrical shock, be sure electricity is turned off at the main fuse box or circuit breaker panel before wiring.

3. This control is designed to operate only one ceiling fan and not an accessory light kit. **This wall control is rated for 1.25 amps at 120 volts. If your ceiling fan is equipped with a variable speed pull chain switch control, make sure to set it at the highest speed before installing the wall control. This will avoid erratic speeds and possible damage to your ceiling fan.**

4. Make certain no bare wires are exposed outside the connectors.

5. All wiring must conform to National and Local Electrical Codes. If you feel you do not have enough electrical wiring knowledge or experience, have your fan control installed by a licensed electrician. Any electrical work not described in this manual should be performed by a licensed electrician.

6. Use of this control with some ceiling fans could result in fire, shock and serious personal injury. Use this fan control only with capacitor speed controlled ceiling fans.

INSTALLATION

1. After electricity has been turned off at the main fuse box or circuit breaker panel, remove the existing wall plate and switch.

2. Proceed to make the wire connections as follows: (make sure the switch is in the "OFF" position). Connect one of the Black wires from the ESSWC-4 wall control to the fan lead wire. Connect the second Black wire from the ESSWC-4 wall control to the 120v AC hot wire. Use wire connectors provided to secure the connections.

NOTE: Refer to the Schematic on the back of the wall control.


3. Secure the ESSWC-4 wall control to the outlet box using the two 6-32" x 3/4" screws provided.

4. Secure the face plate over the wall control with the two 6-32" x 1/4" screws provided.

5. Ground from wall control to ground coming into outlet box.

WARNING! HOOK UP "IN SERIES" ONLY!

Do not connect to hot and common wire of electrical circuit or switch will be damaged. Refer to diagram below

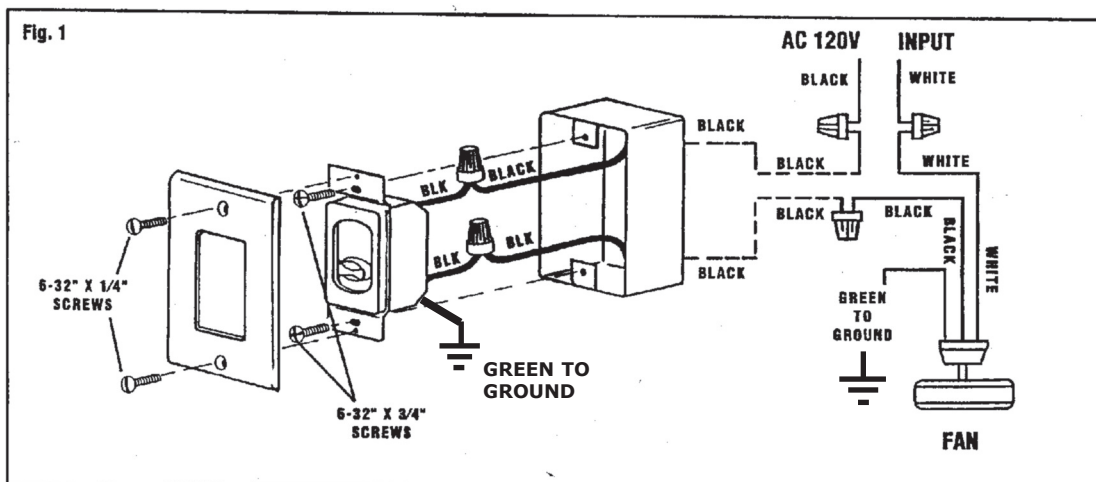

Customer Service
800-969-3347

Customer Service Center
7400 Linder Ave.
Skokie, IL 60077
www.montecarlofans.com

8/19/04 REV.0

ESSWC-4-WH-AL

Mar.2012 New logo
May.2020 branding