


Rhythm Table Lamp

Model # 3202-15

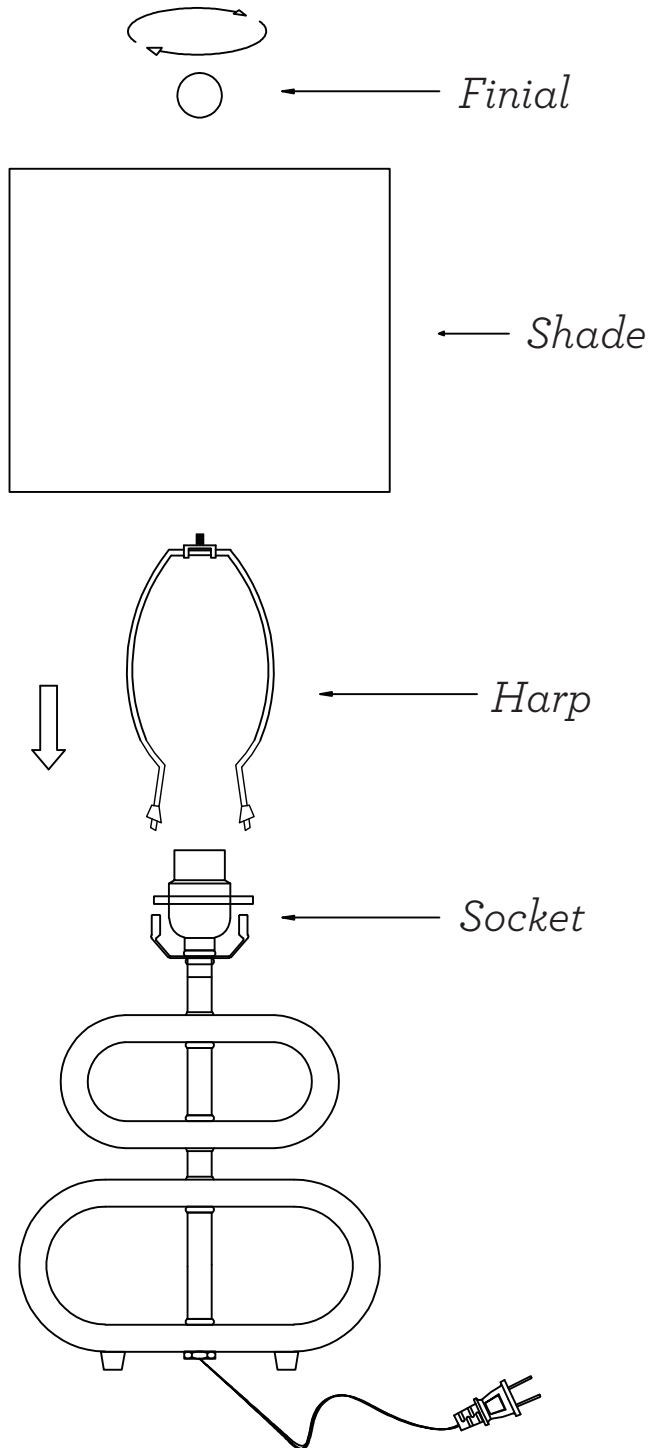

1. Remove all parts and lay on a flat surface.
2. Attach the harp on the socket.
3. Set the shade on the harp and tighten clockwise with the finial.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 60 watt incandescent or 13 watt CFL equivalent. (not included)