


ASSEMBLY INSTRUCTIONS FOR Kirby Shelf Floor Lamp

Model # 3056-12
3056-15

3056-12
3056-15

1.0

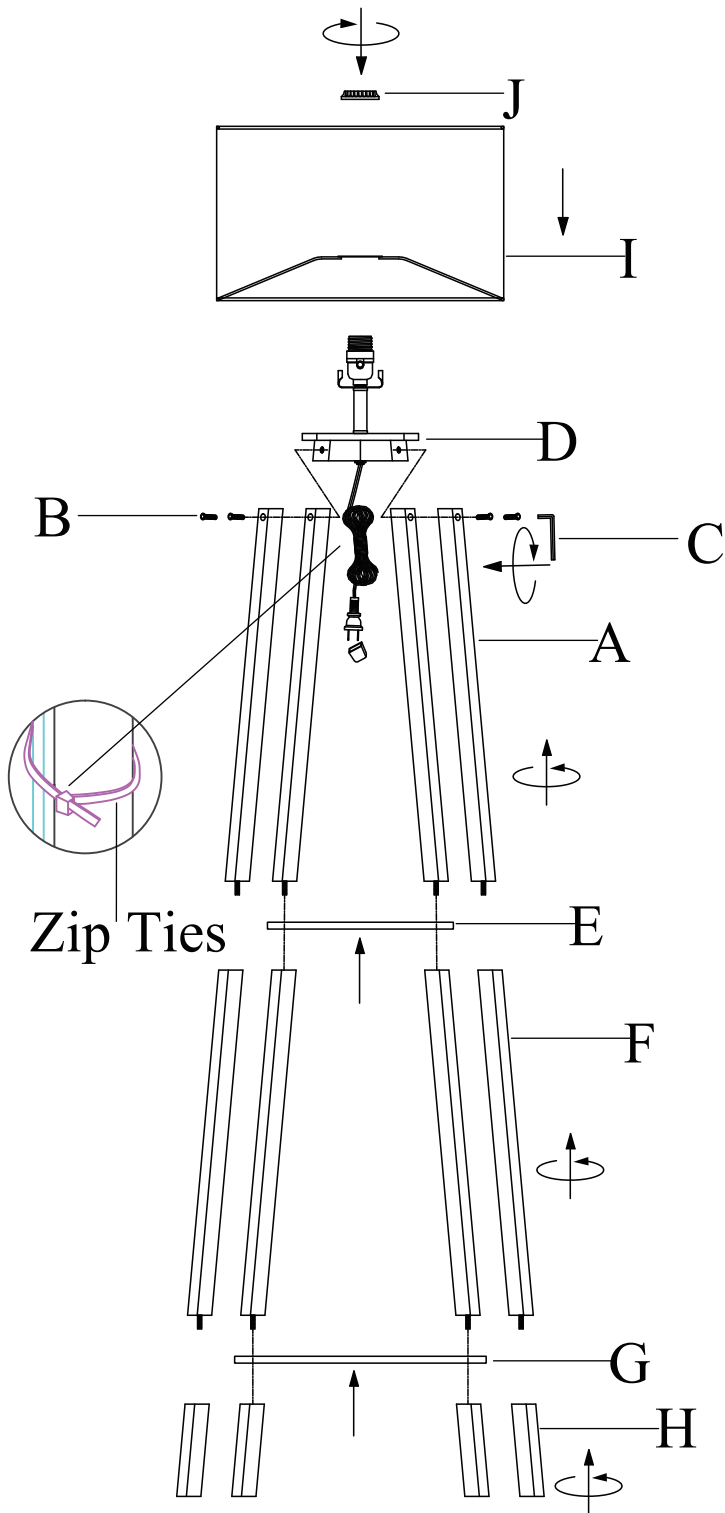

1. Set the four poles(A) into the part(D) then tighten screws(B) with a allen wrench(C) to secure the pole(A).
2. Place the plate(E) onto the pole(A).
3. Screw the four poles(F) clockwise into the pole(A) to tighten.
4. Place the plate(G) onto the pole(F).
5. Screw the four poles(H) clockwise into the pole(F) to tighten.
6. Socket ring(J) comes pre-assembled to the socket. Before assembling the shade, please unscrew this socket ring(J). Set shade(I) onto socket and tighten clockwise with socket ring(J) to secure shade.
7. Use zip ties to hide the cord along 1 pole for a cleaner overall look.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



 
IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150 watt 3-way maximum incandescent or 18 watt 3-way maximum equivalent LED bulb.(not included)

PARTS DIAGRAM:

(1) allen wrench(C)



(4) Screws (B)



(4) Zip Ties

