

ASSEMBLY INSTRUCTIONS FOR Connie LED Cordless Table Lamp

3178-12
3178-15
3178-01

1.0

Model # 3178-12

3178-15

3178-01




PLEASE READ AND SAVE THESE INSTRUCTION:

PRODUCT USAGE INSTRUCTIONS:


1. 2W LED, 160 Lumens, 2700K (included), 4-way touch switch. Use the touch switch to change the levels of light.
2. This lamp uses a Type C cord which is 39 inch long (Included).
3. Use the DC 5V 1A driver (not included) or USB to supply power.
4. Insert the USB cord into the USB port interface of the lamp base and check lamp if fully charged. The light will turn red when the cord is plugged in while charging the battery. The charging light will turn blue when the battery is fully charged.
5. The product must be placed upright and must not be tilted or knocked down.

BATTERY INFORMATION

1. Requires (2pcs) - 2000MAH 18650 battery holder Included.
2. The battery is not replaceable.
3. Charging time is approx. 10-12 hours (5w charger) to full charge.
4. You can use approx. 12-14 hours (100% brightness) or 18 hours (20% brightness) after a full charge.

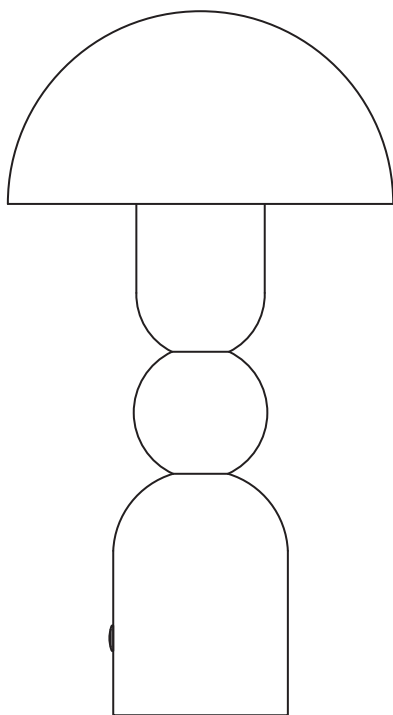

Maximum size: 10.75 in.H x 6 in.W

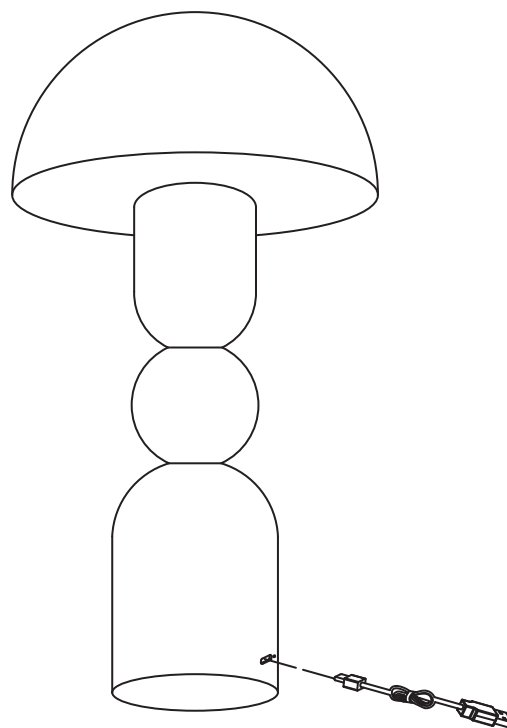

Use the DC 5V 1A driver or
USB to supply power.

CARE INSTRUCTIONS

1. Place the unit on a flat, dry and sturdy surface.
2. To clean the unit, use a dry cloth. DO NOT submerge in water.
3. DO NOT open the case of the unit as there are no user replacement parts.
4. This product is intended for personal indoor household use only - DO NOT use outdoor.
5. Keep product out of reach of small children and pets. THIS IS NOT A TOY.
6. Handle product with care.
7. Always unplug the LED unit from the charger when it is fully charged or when not in use.
8. Important - Use only recommended power source and USB charge cable supplied with this product.
Other propriety USB cables may not be compatible this table lamp.
9. If you are in any doubt, please consult a qualified electrician.