

ASSEMBLY INSTRUCTIONS FOR Wood Framed Neon Table/Wall Lamp

SL3720-12
SL3721-12
SL3722-12

1.0

Model # SL3720-12

SL3721-12

SL3722-12

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING AND KEEP THIS MANUAL FOR FUTURE USE & REFERENCE.

PACKAGE CONTENTS:

 
1. Infinity Neon Table/Wall Lamp.
2. Requires (3) - 1.5V AA batteries (not Included).
3. 8 feet USB cord (Included).

PRODUCT USAGE INSTRUCTIONS:


1. Use by battery power (see Battery Info section) OR plug in with included adaptor. If you use both at the same time, the power will come from the adaptor.
2. The product must be placed upright and must not be tilted or knocked down.

BATTERY INFO


1. Use (3) - 1.5V AA batteries or MAXIMUM DC 5V 300-400mA output adapter to power this product.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.
4. Take the split battery box out, insert the batteries in battery compartment according to the "+, -" marked on the battery box, then insert the battery case back into the battery compartment.

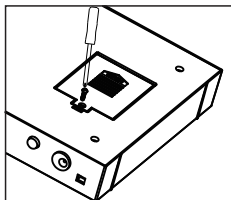


Open the screw of the battery cover.

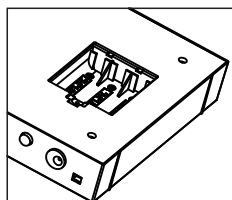 

 Put 3*AA battery into the battery case according to the positive and negative marks.

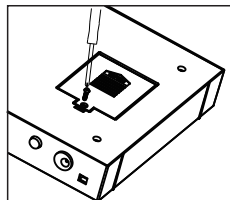

 
Twist the screw of the battery cover on fully.

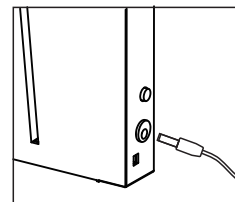

Also can use the DC 5V 300-400mA drive or USB to supply power.

WALL MOUNT ASSEMBLY INSTRUCTIONS

 1. Drill one light hole, then align holes with plastic bolts and attach with 1 screws. Secure screws with a Phillips head screwdriver
2. Hang the lamp onto the wall

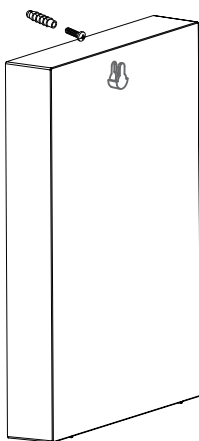

CARE INSTRUCTIONS

1. Place the unit on a flat, dry and sturdy surface
2. To clean the unit, use a dry cloth. DO NOT submerge in water
3. DO NOT open the case of the unit as there are no user replacement parts.
4. This product is intended for personal indoor household use only - DO NOT use outdoor
5. Keep product out of reach of small children and pets. THIS IS NOT A TOY.
6. Handle product with care.
7. A note on packaging: Due to the fragile nature of this product, we have chosen to use Styrofoam only where it is needed to protect it and deliver the best quality product to our customer. We are aiming to reduce the use of plastic and styrofoam in the packaging of our products where possible and are investigating more environmentally friendly alternatives to use. We hope you enjoy your purchase!

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:

Read all instructions before using (this furnishing).

DANGER – To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
7. Never drop or insert any object into any opening.
8. Do not use outdoors.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. To disconnect, turn all controls to the off position, then remove plug from outlet.

SAVE THESE INSTRUCTIONS

SERVICING OF DOUBLE-INSULATED PRODUCTS