


ASSEMBLY INSTRUCTIONS FOR Sonora Floor Lantern

3011-15

1.0

Model #3011-15

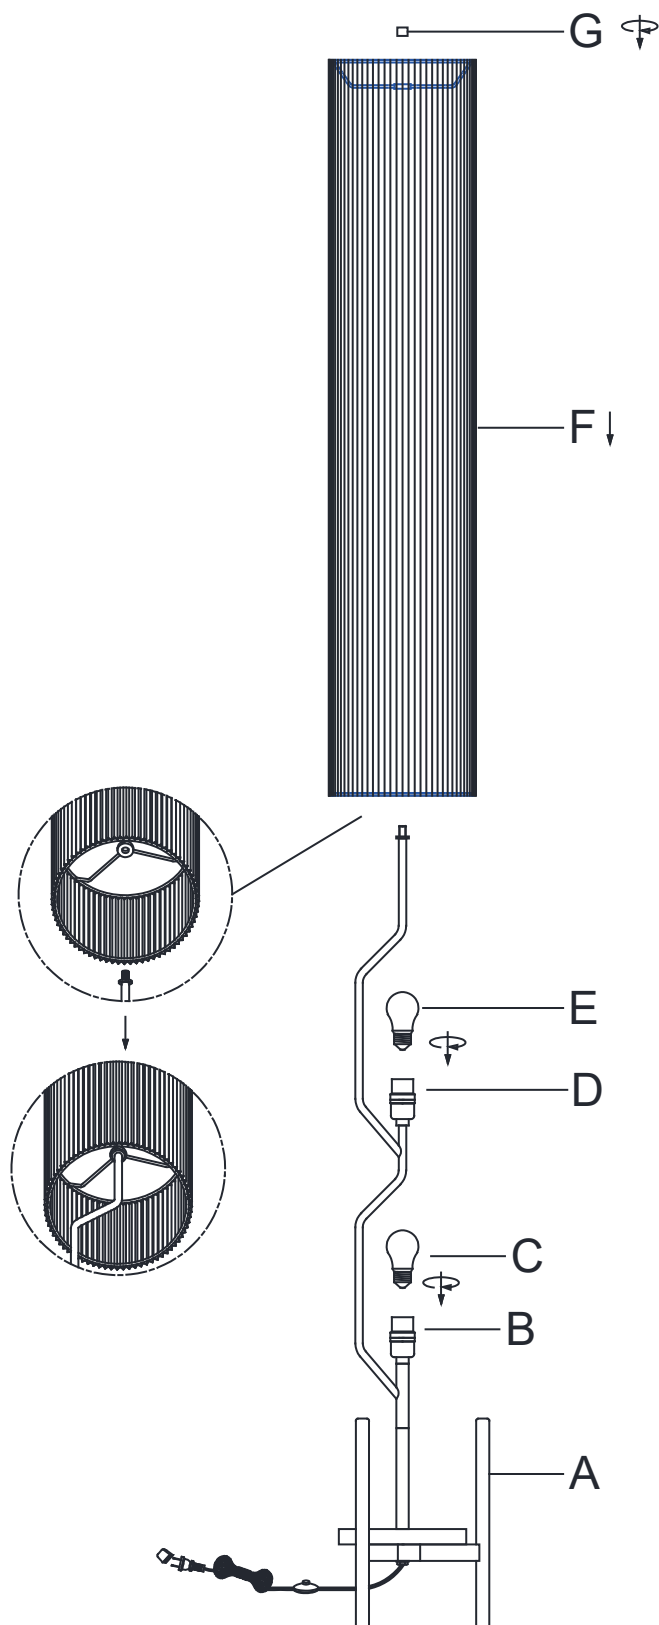

1. Screw bulb (C) clockwise into socket (B) to tighten. Bulb (C) not included.
2. Screw bulb (E) clockwise into socket (D) to tighten. Bulb (E) not included.
3. Set the shade (F) on the top of lampbody (A) and attach the shade bottom into the lampbase.
4. Screw the finial (G) clockwise into the top of the lampbody (A) to tighten.

A note on packaging: Due to the fragile nature of this product, we have chosen to use Styrofoam only where it is needed to protect it and deliver the best quality product to our customer. We are aiming to reduce the use of plastic and styrofoam in the packaging of our products where possible and are investigating more environmentally friendly alternatives to use. We hope you enjoy your purchase!

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (2) 60 watt incandescent or 9 watt LED bulb (not included)