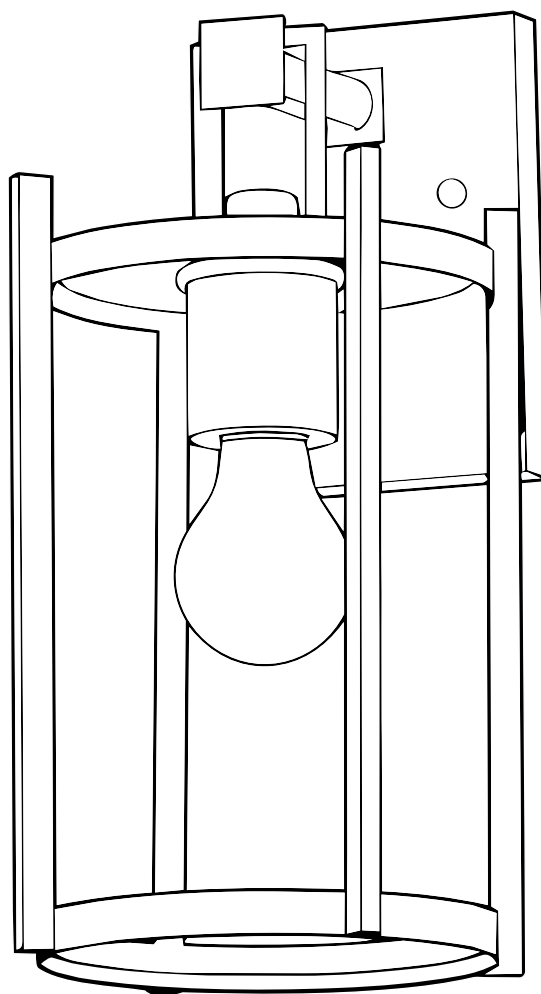




Item/Model Number: 30062 / MSP
Belfry 1-Light Wall Sconce w/ MSP



Lamping | Ampoule: 1 x E26 60W (Not Included)









Please consult a qualified electrician prior to install
Veuillez consulter un électricien qualifié pour suspendre le luminaire et le câblage.




Made in China | Fabrique en Chine | Hecho en China

OUTDOOR INSTRUCTIONS

English Before Getting Started	Français Avant de Commencer	Espanol Antes de Comenzar
Read the instructions carefully prior to assembling the product.	Lire attentivement les instructions avant d'assembler le produit.	Lea atentamente las instrucciones antes de ensamblar el producto.
When you open the package with a sharp tool like a box knife, be careful not to damage the components inside.	Lorsque vous ouvrez le paquet avec un outil pointu comme un couteau de coupe, veillez à ne pas endommager les composants à l'intérieur.	Cuando abra el paquete con una herramienta afilada como un cuchillo de corte, tenga cuidado de no dañar los componentes dentro.
Carefully remove all packaging materials and retain for future use.	Retirez soigneusement tous les matériaux d'emballage et conservez-les pour un usage ultérieur.	Retire con cuidado todos los materiales de embalaje y consérvelos para usarlos en el futuro.
Keep all hardware parts and packaging out of reach of children.	Conservez toutes les pièces matérielles et les emballages hors de portée des petits enfants.	Mantenga todas las piezas y embalajes de hardware fuera del alcance de los niños pequeños.
Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.	Choisissez une zone d'assemblage propre, de niveau et spacieuse. Évitez les surfaces dures qui pourraient endommager le produit.	Elija una zona de ensamblaje limpia, nivelada y espaciosa. Evite superficies duras que puedan dañar el producto.
Ensure that you have all required contents for complete assembly.	Assurez-vous que vous avez tous les contenus requis pour l'assemblage complet.	Asegúrese de que tiene todos los contenidos necesarios para el ensamblaje completo.
Take care when lifting. Assemble the product in close proximity to where you intend to install it.	Prenez soin de soulever. Assemblez le produit à proximité de l'endroit où vous comptez positionner l'élément.	Tenga cuidado al levantar. Ensamble el producto cerca de donde tiene la intención de posicionar el artículo.
Do not over tighten the screws and bolts as this may damage the threads.	Ne serrez pas trop les vis et les boulons car cela pourrait endommager les filets.	No apriete excesivamente los tornillos y pernos, ya que esto puede dañar los hilos.
Do not let children play with this product.	Ne laissez pas les enfants jouer avec ce produit.	No permita que los niños jueguen con este producto.
 Risk of suffocation! Keep packaging materials away from children.	 Risque asphyxie! Tenez tous les matériaux emballage à l'écart des enfants	 Riesgo de sofocación! Mantenga los materiales de embalaje lejos de los niños.
Lamp Care Instructions	Entretien de la Lampe	Instrucciones de Lámparas
Carefully read through the instruction sheet before assembly and using the product.	Avant de procéder à l'assemblage et à l'utilisation de la lampe, lisez attentivement le mode d'emploi.	Lea cuidadosamente la hoja de instrucciones (si fue proporcionada) antes de armar y utilizar la lámpara.
 Caution there is a risk of shock! Disconnect from power source before assembling or cleaning.	 Pour éviter tout risque d'électrocution, débranchez la lampe de la prise électrique avant de procéder à l'assemblage ou au nettoyage de la lampe.	 Peligro por descarga eléctrica. Desconecte la lámpara de la fuente de electricidad antes de armarla o limpiarla.
Switch off, unplug and allow bulb to cool before replacing bulb or cleaning.	Avant de remplacer ou de nettoyer l'ampoule, éteignez et débranchez la lampe.	Apáguela, desenchúfela y deje que la bombilla se enfríe antes de reemplazarla o limpiarla.
Only use the recommended bulb type and do not exceed the maximum wattage as it could cause fire.	Afin d'éviter tout risque de feu, utilisez le type et la puissance d'ampoule recommandés.	Solo utilice el tipo de bombilla recomendado y no exceda la potencia eléctrica máxima ya que puede causar un incendio.
Check the product cord to be sure is free torn or frayed.	Ne branchez pas la lampe si son cordon d'alimentation est déchiré ou effiloché	No conecte la lámpara si el cable eléctrico está dañado o deshilachado.
 WET LOCATION: For outdoor use, caulk around fixture with silicone sealant to prevent water intrusion. Leave a gap at the bottom to allow moisture to escape.	LUMIÈRE EXTÉRIEURE: Pour une utilisation en extérieur, calfeutrage autour de l'appareil avec du scellant en silicone pour empêcher l'intrusion d'eau. Laissez un espace au fond pour permettre à l'humidité de s'échapper.	 LUZ EXTERIOR: Para uso en exteriores, selle el sellador alrededor del accesorio con sellador de silicona para evitar la intrusión de agua. Deje un espacio en la parte inferior para permitir que la humedad escape.
Cleaning & Maintenance	Nettoyage et Maintenance	Limpieza y Mantenimiento
On polished finishes, often using talc powder can reduce the appearance of fingerprints and other smudges.	Sur les finitions polies, souvent en utilisant la poudre de talc réduit l'apparence des empreintes digitales et d'autres taches.	En acabados pulidos, a menudo usando polvo de talco reduce la aparición de huellas dactilares y otras manchas.
For respective shade surfaces, use the appropriate cleansers, i.e. glass cleaner, stone polish, & wood polish.	Pour les surfaces d'ombrage respectives, utilisez les nettoyeurs appropriés, c'est-à-dire le nettoyeur pour vitres, vernis à pierre et le vernis à bois.	Para las respectivas superficies de sombra, utilice los limpiadores apropiados, es decir, limpiador de vidrio, esmalte acrílico y pulido de madera.
Clean with soft cloth and a mild detergent. Do not use abrasive or harsh cleaners.	Nettoyer avec un chiffon doux et un détergent doux. N'utilisez pas de nettoyant abrasif.	Utilice un trapo limpio, suave y seco que no raye ni manche la superficie cuando quite el polvo.
Periodically (every 90-180 days) make sure that the screws are fully tightened.	Périodiquement (tous les 90-180 jours), assurez-vous que les vis sont bien serrées.	Periódicamente (cada 90-180 días) asegúrese de que los tornillos estén bien apretados.
Prolonged exposure to heat sources may cause glazing, melting and scorching, or even cause color to fade.	Si le tissu subit une exposition prolongée aux sources de chaleur, il pourrait commencer à reluire, à roussir, à s'estomper ou même à se décolorer.	La exposición prolongada a las fuentes de calor causa cristalización, derretimiento, quemadura y decoloración del tapizado.

English PARTS	Francais PIÈCES	Espanol PARTES
Before getting started, ensure the package contains the following components:	Antes de comenzar, asegurese de que el paquete contenga los siguientes componentes:	Avant de commencer, assurez-vous qu le paquet contient les composants suivants:

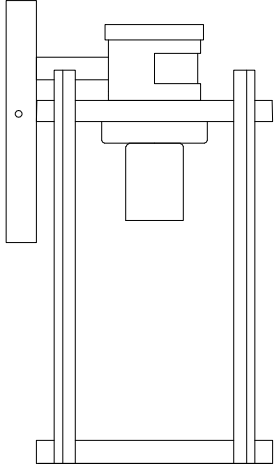  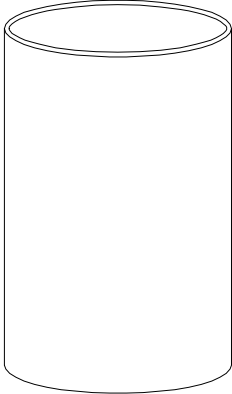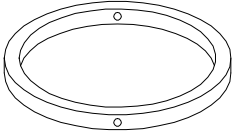   A		x1	E		x1
			F	 #8-32 × 1 1/4"	x2
B	 GLS30062CL - MSP	x1	G		x2
C		x1	H	 #8-32 × 1/2"	x2
D	 M4 × 5/8"	x2	I		x2

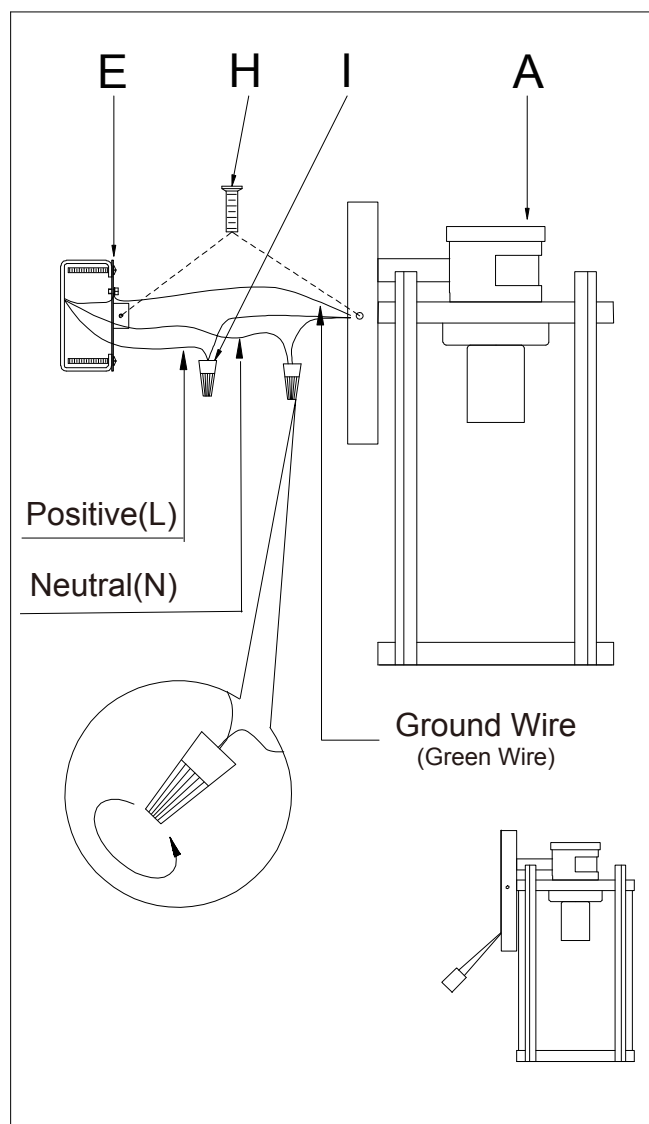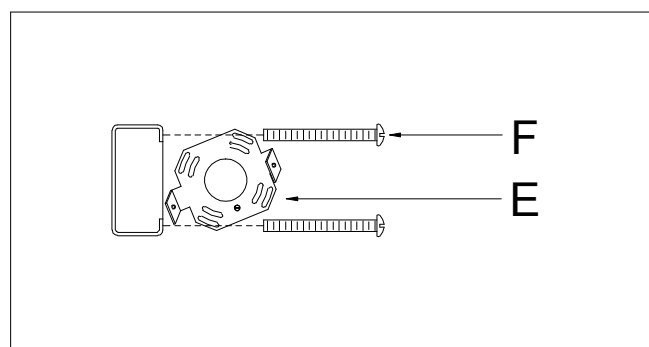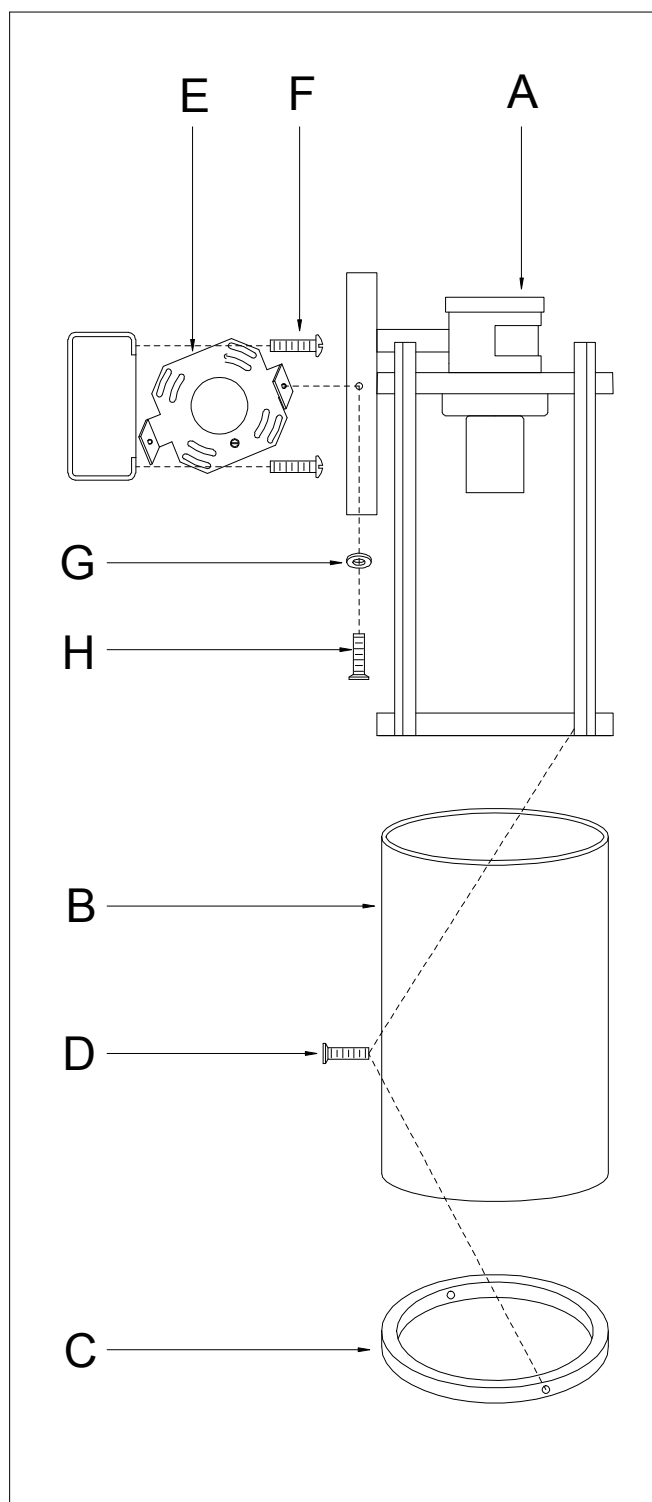


For outdoor use, caulk around fixture with silicone sealant to prevent water intrusion. Leave a gap at the bottom to allow moisture to escape.

Pour une utilisation à l'extérieur, calfeutrez autour du luminaire avec un scellant en silicone pour empêcher l'intrusion d'eau. Laissez un espace au fond pour permettre à l'humidité de s'échapper.

Para uso en exteriores, selle el accesorio alrededor del sellador de silicona para evitar la intrusión de agua. Deje un espacio en la parte inferior para permitir que la humedad escape.

Confirm the mode before installing the lighting fixture;
The default mode is High Mode.

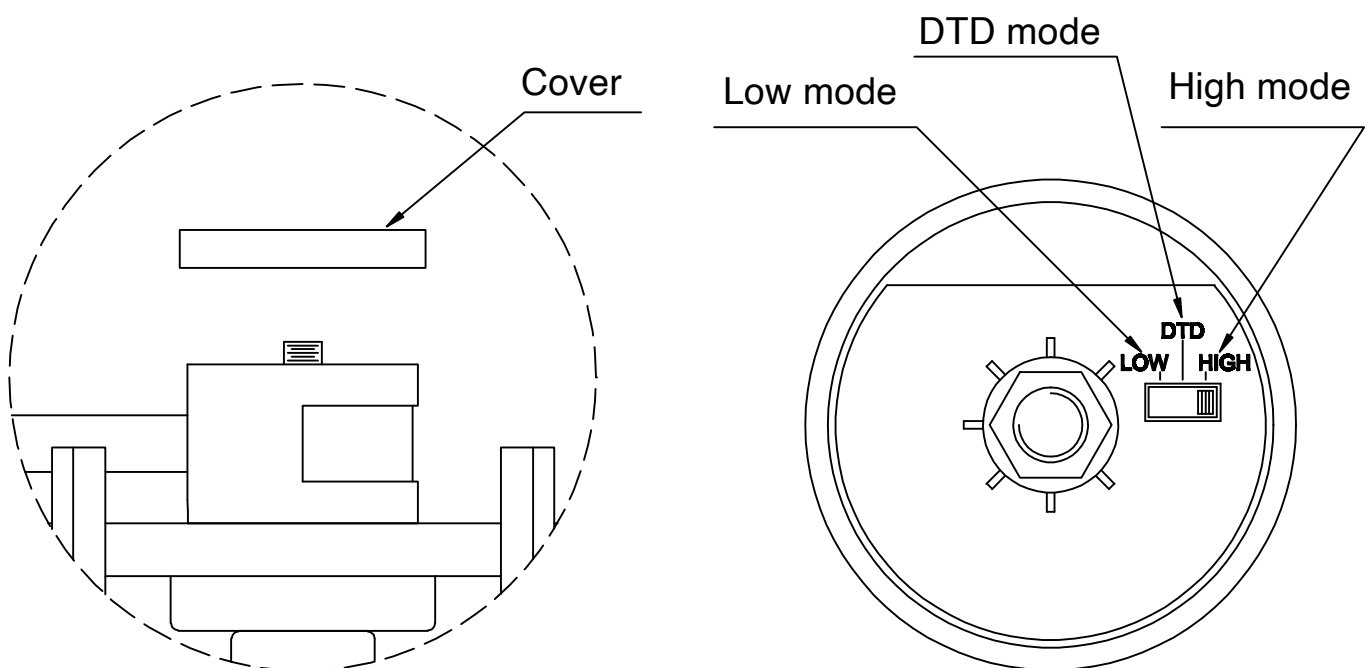The default selected mode is High mode. Before installing the light fixture, first determine if it is the desired mode. If not, remove the cover and select the desired mode before installing the light fixture. For detailed instructions on the mode function, please refer to the manual "MODES OF OPERATION"



Function and Operation

Note: If the test is done during the daytime, after completing the warm-up, the fixture will not light up during the daytime, and the sensor only work at dusk.

MODES OF OPERATION

Mode	Explanation
High Mode (40%brightness-100%brightness-40%brightness)	Slide the switch to select High mode: The fixture need to go through stand-by mode and test mode, then enter auto mode high mode, please be patient for about 3 minutes after power on! Detailed instructions are as follows: 1. Stand-by Mode: no matter day or night after turning on the power to enter the power on warm-up, about 15 ± 5 seconds after lights turn off, warm-up is complete; 2. Test Mode: After power on warm-up is completed, enter the test mode when motion is detected, the lights turn on 5 ± 3 seconds after motion is no longer detected turn off, the test time reaches 120 ± 20 seconds to auto enter the auto mode that has been selected high mode, the LED indicator light flashes 4 times. 3. Enter Auto Mode High Mode(40%-100%-40%): At dusk, the light will turn on at low-level brightness(40%). When motion is detected, at dusk, the light will turn to high-level brightness(100%), and stady on as long as the motion is continuing. The light will revert to low-level brightness(40%) about 120 ± 20 seconds after motion is no longer detected.
Low Mode (OFF-100%brightness-OFF)	Slide the switch to select Low mode: OFF-100%brightness-OFF The fixture need to go through stand-by mode and test mode, then enter auto low mode, please be patient for about 3 minutes after power on! Detailed instructions are as follows: 1. Stand-by Mode: no matter day or night after turning on the power to enter the power on warm-up, about 15 ± 5 seconds after the lights turn off, warm-up is complete; 2. Test Mode: After power on warm-up is completed, enter the test mode, when motion is detected, the lights turn on 5 ± 3 seconds after motion is no longer detected turn off, the test time reaches 120 ± 20 seconds to auto enter the auto mode that has been selected low mode, the LED indicator light flashes 4 times. 3. Enter Auto Mode Low Mode(4OFF-100%-OFF): At dusk, the light will turn on at low-level brightness(40%). When motion is detected, at dusk, the light will turn on at high-level brightness (100%), the lights turn on 120 ± 20 seconds after motion is no longer detected turn off.


DTD Mode (Dusk to Dawn)	Slide switch to select DTD mode (dusk to dawn): 1. Stand-by Mode: no matter day or night after turning on the power to enter the power on warm-up, about 15 ± 5 seconds after the lights turn off, warm-up is complete; 2. Enter the auto mode DTD mode, auto turn on at dusk, auto turn off at dawn. Note: If the test is done during the daytime, after completing the warm-up, the fixture will not light up during the daytime, and the sensor only work at dusk.
Manual Override 8H Mode (100% brightness)	At dusk, in auto high mode or auto low mode operation: Turn off the power switch and then turn it on again (OFF-ON), will enter the locking Manual Override mode (100% brightness), No need motion sensing required, the fixture will last light up $8H \pm 1H$ (100% brightness), on time the fixture will auto turn off; If at dawn, not arrived enough 8 hours, the fixture also will auto turn off. Note: If you want to exit the manual mode and back to the auto high mode or auto low mode operation, please turn off the power again and then turn it on again (OFF-ON).

LED Indicator:

When entering Auto Mode, the LED will flash 4 times;
When entering human activity, the LED will flash 1 times;
When entering lock, the LED will flash 6 times;
When exiting lock, the LED will flash 3 times;
The LED will blink 3 times when exiting the locking mode.

NOTE:

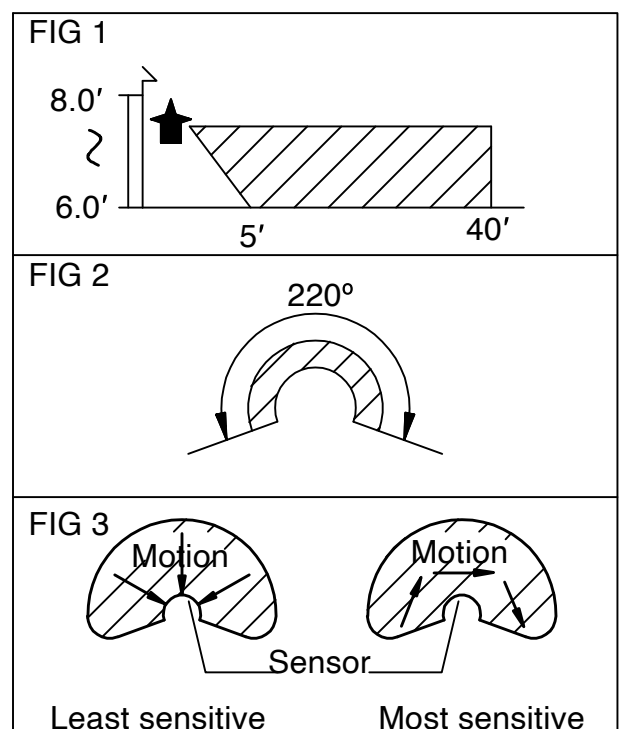1. The sensitivity of the motion sensor will increase as the environmental temperature gets cooler. For best performance, gently clean the lens with a soft cloth every 1 or 2 months to assure maximum sensitivity.
2. For best performance, install fixture at least 6 feet above the ground. At such a height, the lantern will provide a detection distance of up to 40 feet at 77 degrees Fahrenheit. (See FIG 1)
3. The sensor detects across a detection range of 220 ± 20 degrees. (See FIG 2)
4. The sensor will be more sensitive to motion across its detection path than motion directly towards it. (See FIG 3)
5. To reduce possible nuisances, do not mount the fixture near a heat source like an air conditioner, vent or furnace exhaust, or in a direction facing any reflecting object or other light source.



Troubleshooting

SYMPTOM	Possible cause	Solution
The light doesn't work in Test Mode	Wall switch or circuit breaker is off. The wiring mistake.	Turn on a switch or circuit breaker. Check wire connections.
In Auto mode (Low Mode/High Mode), the lighting fixture does not turn on when there is motion	Wall switch or circuit breaker is off.	Turn on a switch or circuit breaker.
	Light bulb may be dead.	Test the light bulb in a known working light fixture.
	Light bulb is loose.	Tighten the light bulb in the socket.
	Incorrect or loose wire connections.	Check wire connections.
	Too much sunlight is shining into the Dusk-Dawn sensor in the early evening.	Relocate fixture away from a western facing wall.
	Too much light is shining onto the Dusk-to-Dawn sensor due to another light source, such as a street lamp or other light fixture.	Eliminate or turn off other light source, block other light source from shining onto Dusk-to-Dawn sensor, or relocate fixture.
In Auto mode (Low Mode/High Mode), the lighting fixture stays on at 100% brightness continuously	False triggering caused by a heat source, such as a heater or dryer vent, or air conditioning vent, or heated swimming pool.	Eliminate heat source or relocate fixture.
The lighting fixture comes on at 100% brightness for no apparent reason.	Also triggering caused by a heat source, such as a heater or dryer vent, or air conditioning vent, or heated swimming pool.	Eliminate heat source or relocate fixture.
The lighting fixture comes on during the daytime or too early in the evening.	The fixture may be installed in a shaded area, such as under a porch or eave, preventing daylight from shining onto the photocell sensor.	Relocate the fixture.
The LED bulb or fluorescent bulb flickers when the lighting fixture is dimmed down to the stand-by dimming level.	Non-dimmable LED bulb or fluorescent bulb is used on the lighting fixture.	Replace dimmable LED bulb or incandescent bulb.
In manual override, the light stays on after dawn.	The ambient light level is too low.	Relocate the fixture.