
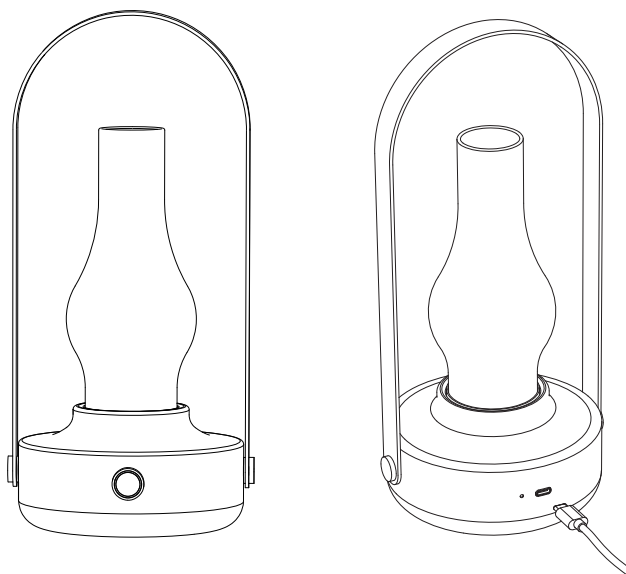


ASSEMBLY INSTRUCTIONS FOR EDDY LED CORDLESS TABLE LAMP

Model #6004

6004 1.0

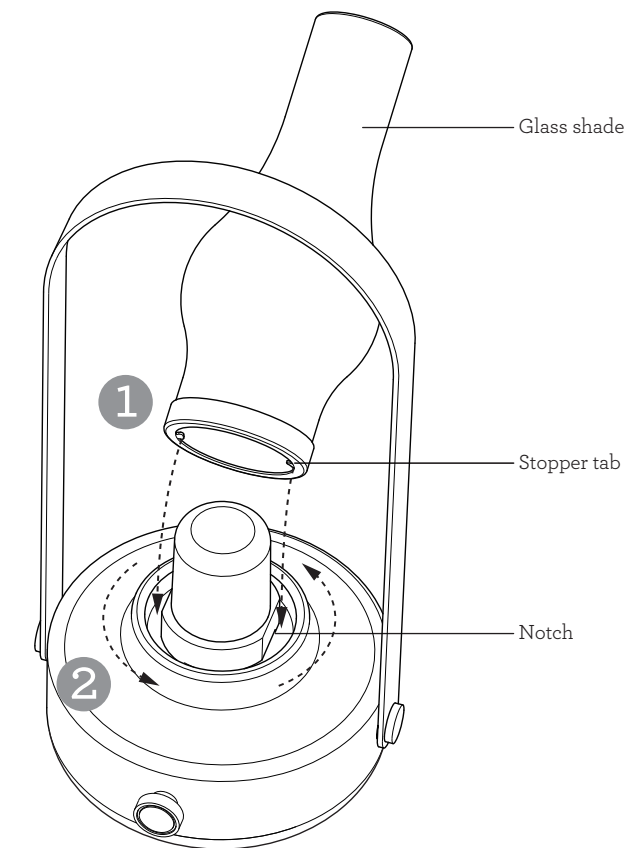

IP44

Protection against splashing of water.

Please wipe the glass shade and base with a dry cloth after exposure to water

ASSEMBLY:

1. Please the shade on top of the LED light housing by aligning the stopper tabs with the notches. Then turn clockwise to secure the shade.
2. Touch switch in the front to change the light brightness
3. Built-in rechargeable battery inside the base.
4. Handle fixed upward, do not rotate it.
5. The lamp may have low battery please charge it before using.

IMPORTANT SAFETY INSTRUCTIONS:

- LED module is not replaceable, please do not break or pull out LED.
- The light includes a built-in #18650 rechargeable battery (2600mAh) in the base, which is fixed and not replaceable, please do not break or pull out battery
- Recommends only adults should handle the recharging and children should use the lamp without the charger.
- Do not disassemble, it may cause burns, burst, or release of toxic materials.
- DO NOT DISPOSE OF THE LAMP IN FIRE. THE BATTERY INSIDE MAY EXPLODE OR LEAK.

CHARGING:

1. Connect the supplied type C of USB charging cord to the table lampbase, and then connect the other end to a power supply.
2. The battery will be full charged in 3 hours using a power supply of 5V 2A. The battery will last for a minimum of 6 hours.


ADESSO®

353 West 39th Street - 2nd Floor
New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com

INSTRUCCIONES DE ENSAMBLAJE PARA EDDY LAMPARA DE MESA LED INALAMBRICA

6004 1.0

Modelo #6004

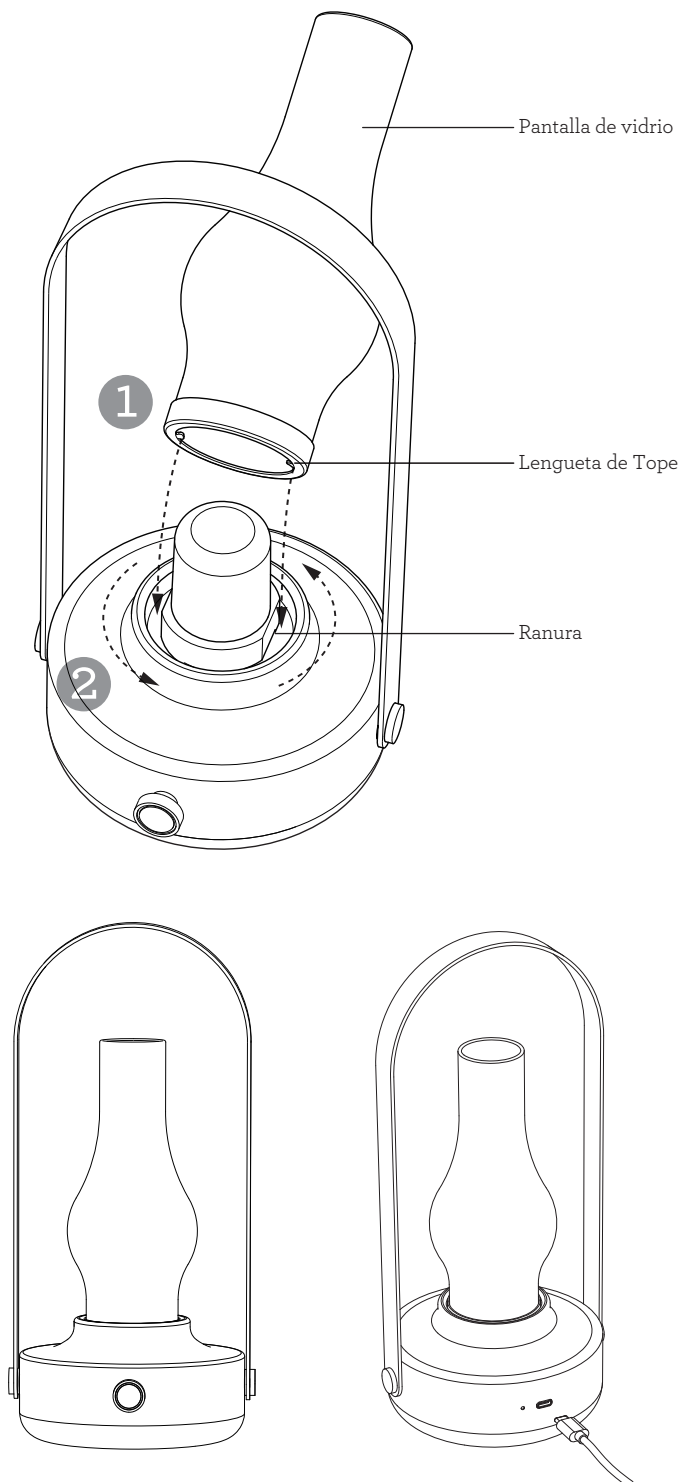

IP44

Protección contra salpicaduras de agua.

Por favor, limpie la pantalla de cristal y la base con un paño seco después de la exposición al agua.

ENSAMBLAJE:

1. Coloque la pantalla en la parte superior de la carcasa de la luz LED alineando las lengüetas de tope con las ranuras. Luego gire enrosque hacia la derecha para asegurar la pantalla.
2. Para cambiar el brillo de la luz toque el interruptor en la parte delantera.
3. La batería recargable está incorporada dentro de la base.
4. El mango está fijo hacia arriba, no lo gire.
5. La lámpara puede tener la batería baja, por favor cárguela antes de usarla.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD :

- El módulo LED no es reemplazable, no rompa ni saque el LED.
- La luz incluye una batería recargable #18650 (2600mAh) incorporada en la base, que es fija y no reemplazable, por favor no rompa ni saque la batería.
- Se recomienda que sólo los adultos se encarguen de la recarga y que los niños utilicen la lámpara sin el cargador.
- No desmontar, puede causar quemaduras, explosión o liberación de materiales tóxicos.
- NO TIRE LA LAMPARA AL FUEGO. LA BATERIA INTERIOR PUEDE EXPLOTAR O TENER FUGAS.

CHARGING:

1. Conecte el cable de carga USB tipo C suministrado a la base de la lámpara de mesa y luego conecte el otro extremo a una fuente de alimentación.
2. La batería estará completamente cargada en 3 horas usando una fuente de alimentación de 5V 2A. La batería durará un mínimo de 6 horas.

ADESSO®

353 West 39th Street - 2nd Floor
New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com