

Brentwood Outdoor Pendant

6025 | 1.0

GENERATION LIGHTING

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.


This product is safety listed for damp locations.

This product may be dimmed using a standard incandescent dimmer.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

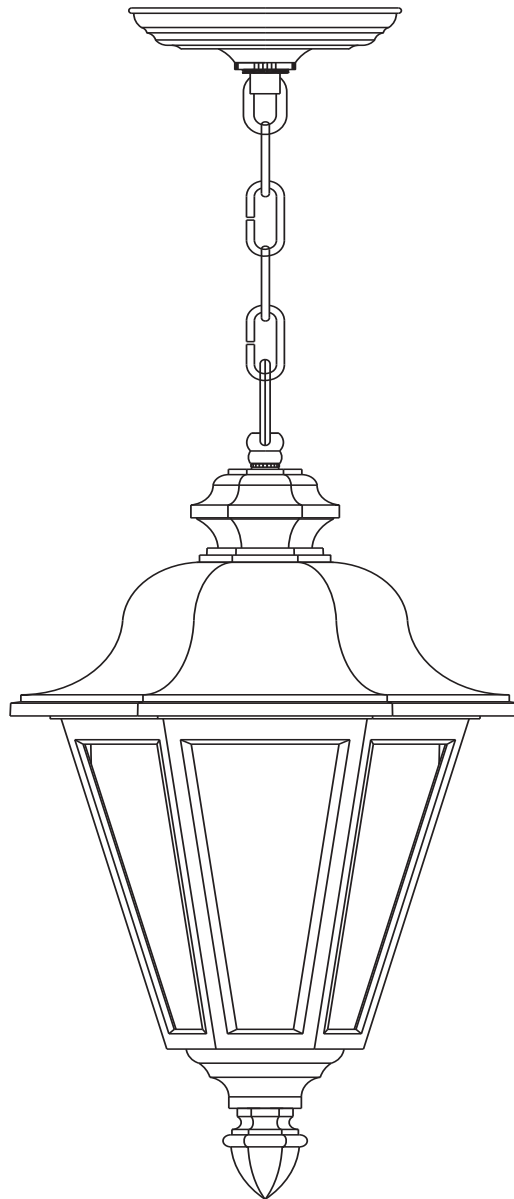

Install the Fixture

1A

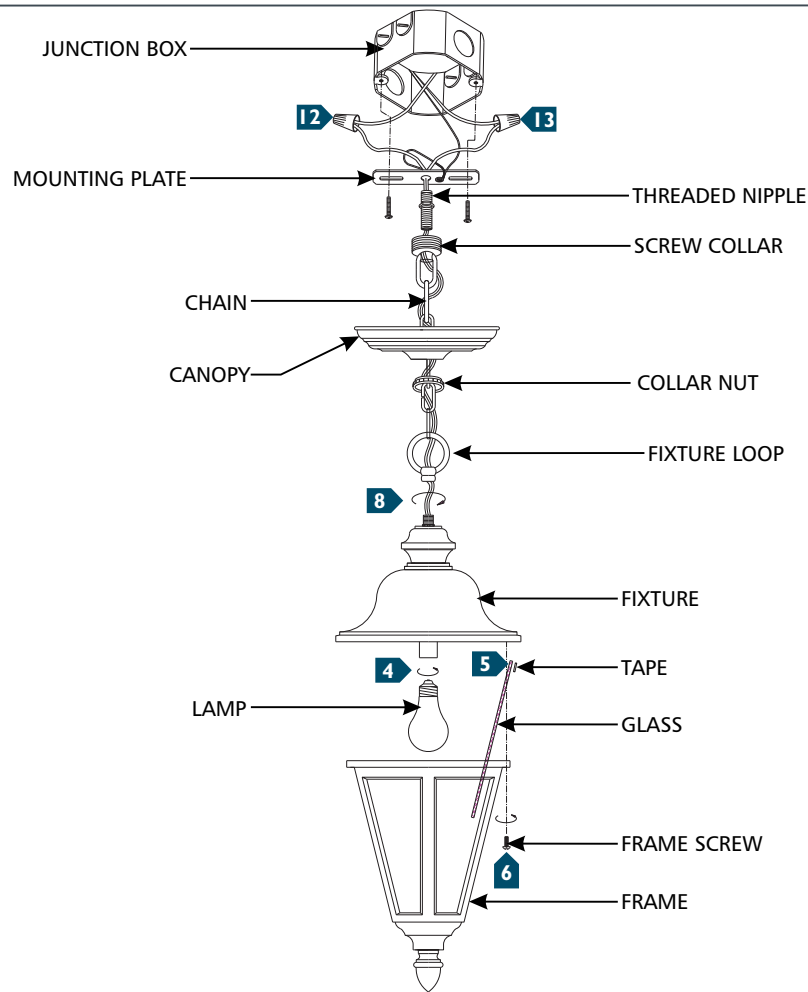

- 1** If necessary, screw the shorter end of the threaded nipple tightly onto the mounting plate.
- 2** Secure the mounting plate to the junction box.
- 3** Screw the screw collar tightly onto the threaded nipple.
- 4** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage information.
- 5** Install the provided tape to the ends of the glass, insert the glass into frame, and secure it by ensuring that the tape properly sticks onto the frame.
- 6** Install the frame to the fixture and secure it in place with the frame screws.
- 7** Determine the wanted height of the fixture and remove a portion of the chain by opening a link and removing it from the bottom.
- 8** Feed the fixture wires through the fixture loop and screw the fixture loop onto the fixture.
- 9** Install the canopy and the collar nut onto the chain (in that order), then install the open link onto the fixture loop and secure it in place by closing the link.
- 10** Weave the cord through the chain, screw collar, canopy, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 11** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 12** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 13** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 14** Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly onto the screw collar.