

Beckham Modern Wall

TW1042, TW1122, TW1132, TW1146 | 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes. **Use approximately 2"x4" single gang junction box.**


This product is safety listed for damp locations.

This instruction shows a typical installation.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

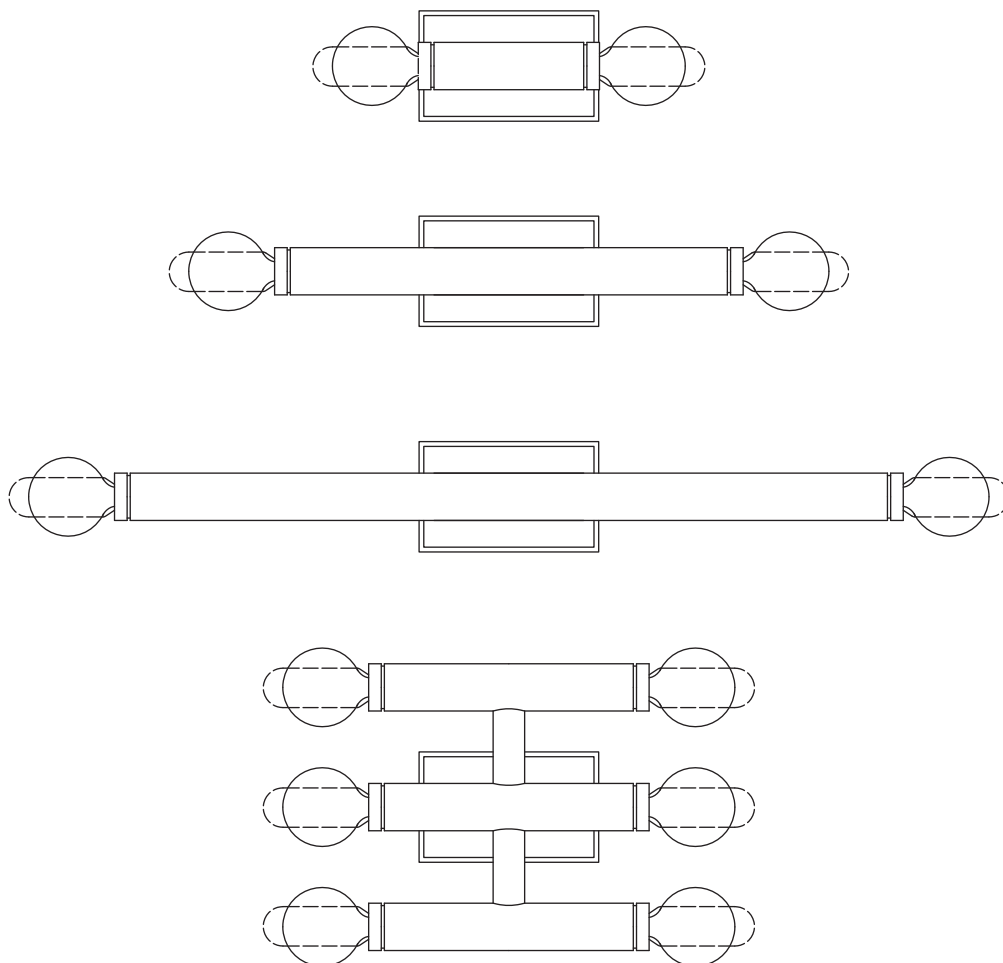SAVE THESE INSTRUCTIONS!

Install the Fixture

1A

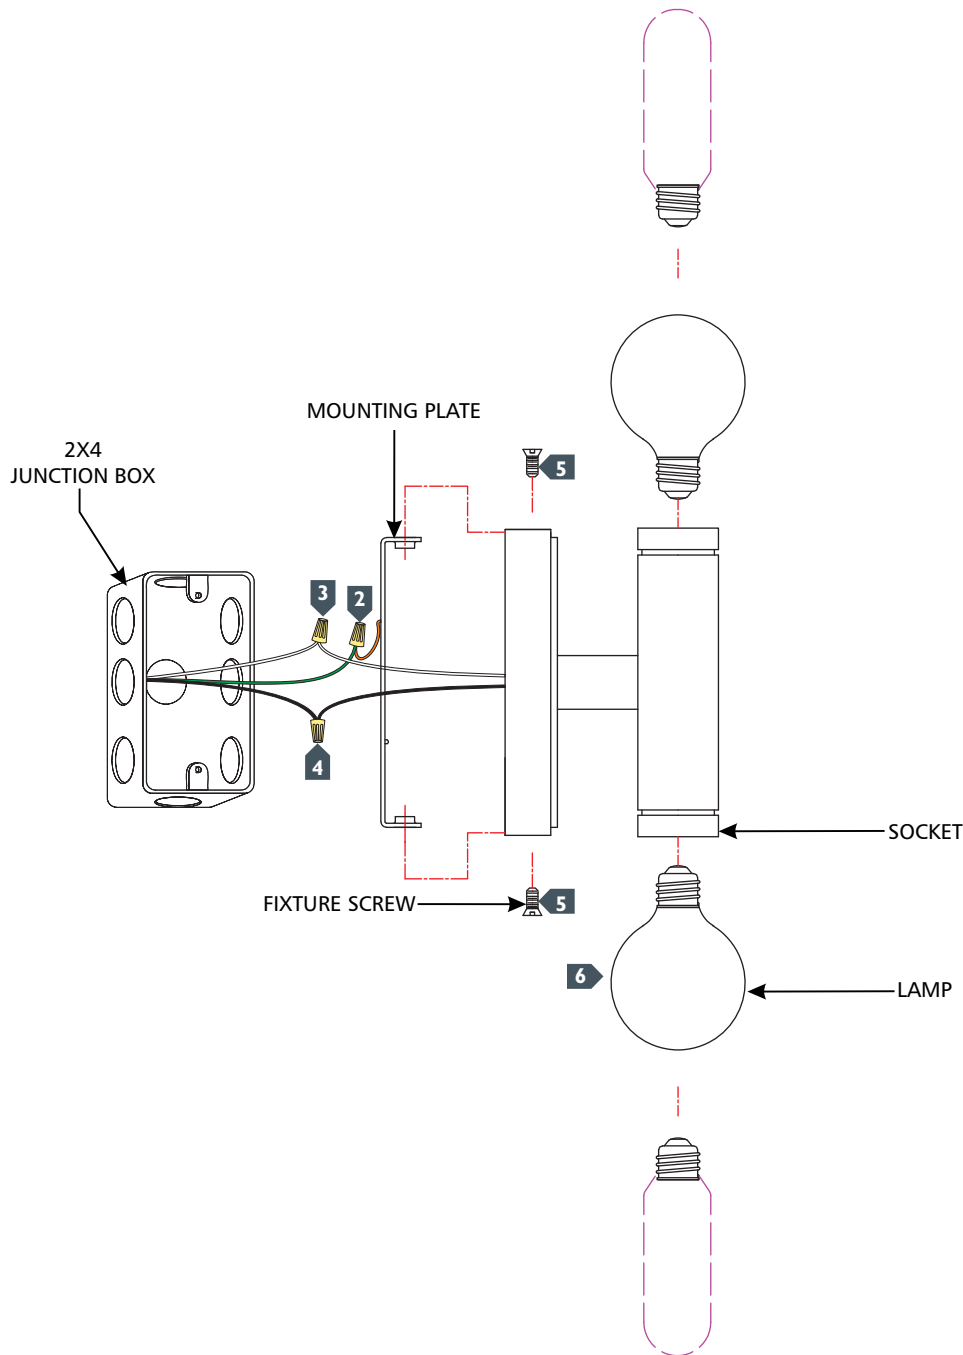

- 1 Secure the mounting plate to a 2X4 junction box.
- 2 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 3 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 4 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 5 Neatly place all the wires into the junction box, place the fixture base onto the mounting plate, and secure it in place with the fixture screws.
- 6 Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information.