

Lune Pendant

EP1341 | 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer.
LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

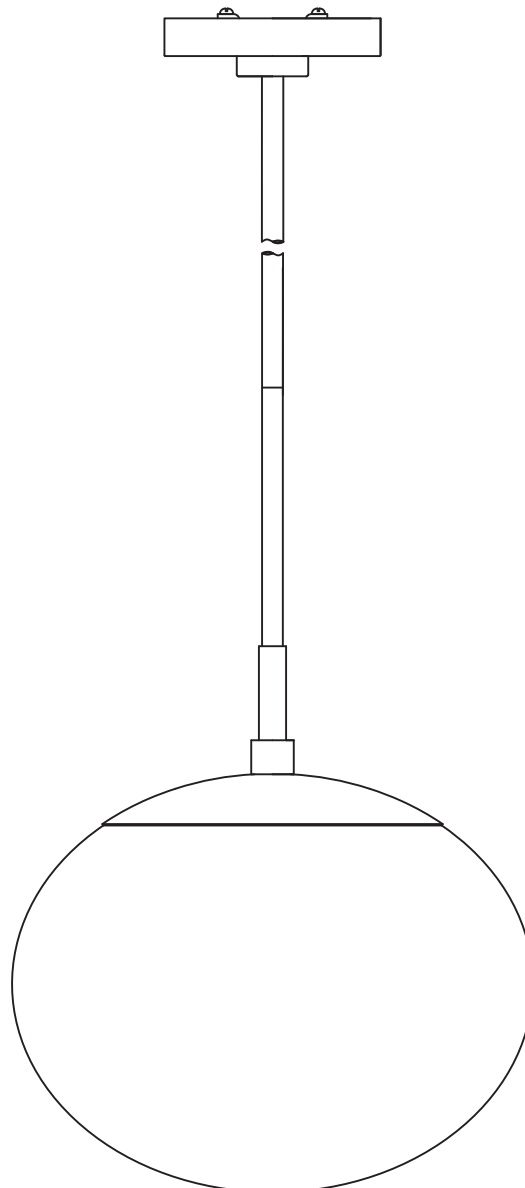

Install the Fixture

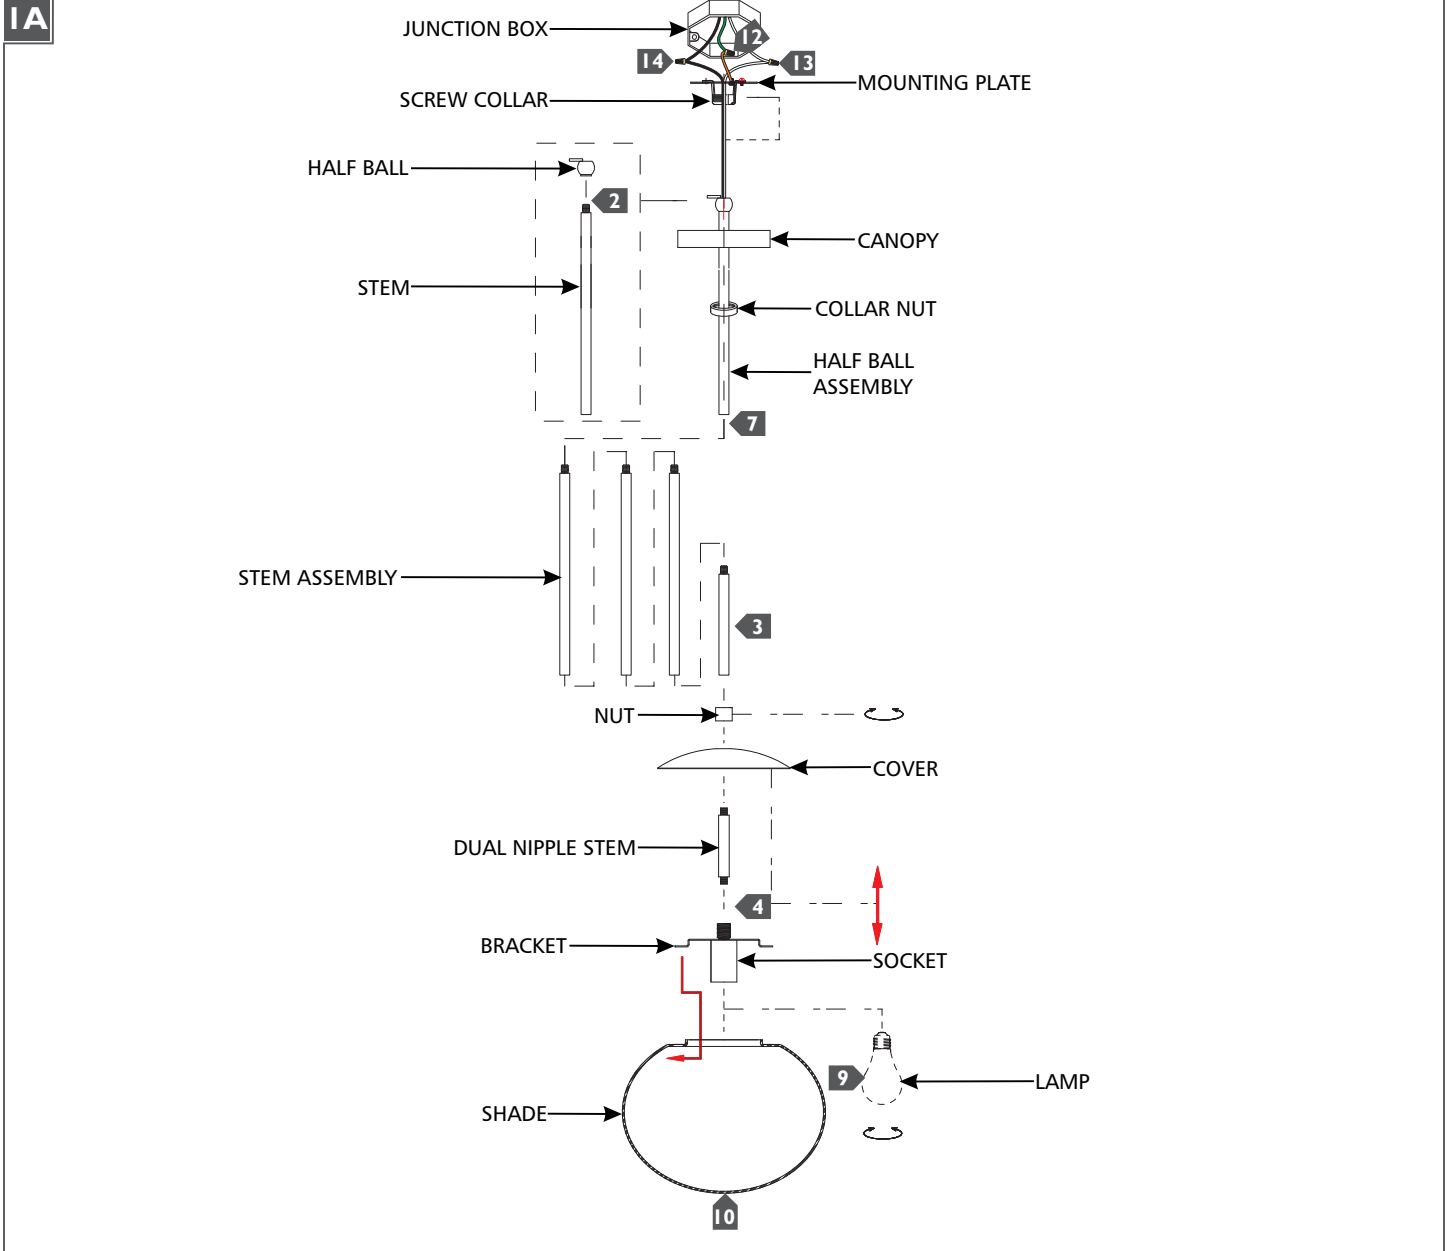

- 1** Secure the mounting plate to the junction box.
- 2** Screw the half ball to the stem which will be on top.
- 3** Determine the wanted height or look of the fixture with the provided stems, then assemble them by screwing them together.
- 4** Feed the fixture wires through the dual nipple stem, then screw it onto the socket.
- 5** Feed the fixture wires through the cover and nut and leave them loose on the dual nipple stem for now.
- 6** Feed the fixture wires through the stem assembly, then screw the stem assembly to the dual nipple stem.
- 7** Feed the fixture wires through collar nut, canopy, and the half ball assembly, then screw the half ball assembly onto the stem assembly.
- 8** Insert the bracket into the shade at an angle until fully inserted and keep supporting the shade until it is secured in step 10.
- 9** While supporting the shade, screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 10** Secure the shade between the bracket and cover by tightening the nut. Do not over tighten.
- 11** Slide the half ball assembly onto the screw collar on the mounting plate.
- 12** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 13** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 14** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 15** Neatly place all the wires into the junction box, place the canopy onto the mounting plate and secure it in place by screwing the collar nut tightly onto the mounting plate.