
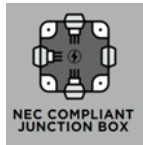


WITLEY MEDIUM POST LANTERN

SLO1092

General Product Information

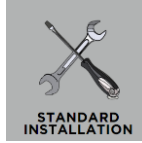

Suggested/Required Tools



Safety Information

CAUTION-RISK OF FIRE



This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

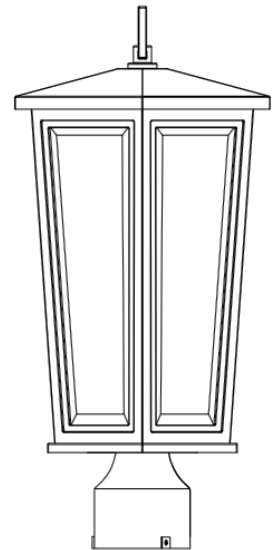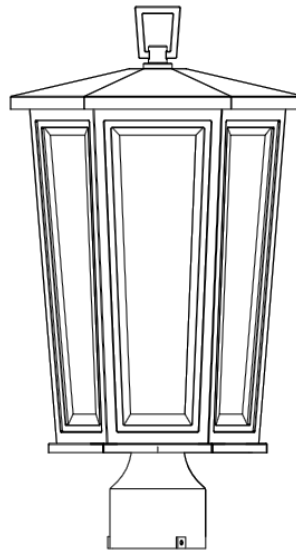

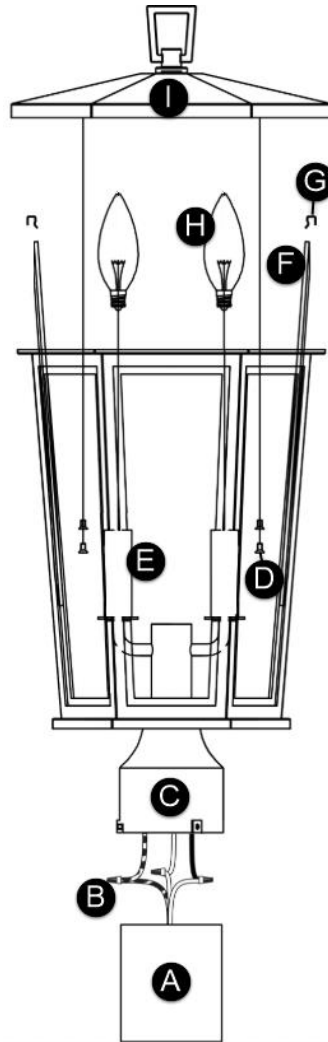

FIXTURE PARTS

- A. Post (not included)
- B. Wire Nut Connections
- C. Post Cup
- D. Cover Screws
- E. Sockets
- F. Glass Panels
- G. Glass Clips
- H. Bulbs (not included)
- I. Cover

INSTRUCTIONS

I. Preparing for Installation

1. Screw the lamps into the sockets. Refer to the socket label for max wattage information.
2. Install the glass panels by carefully sliding them into the cage with the bevel facing outwards and securing them in place with the glass clips.
3. Place the cover over the cage and secure it in place with the cover screws.
4. Place the post cup over the post and mark the hole positions in the post cup on the post.
5. Remove the post cup and expose the supply wiring from the above post. Drill 1/8" (3mm) diameter pilot holes into the post in the places marked in step 4.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) Hot fixture wire (black) and hot power line wire from the junction box (hot to hot)
 - b) Neutral fixture wire (white) and neutral power line wire from the junction box (neutral to neutral)
4. Carefully tuck all the wires into the post.

III. Installing the Fixture

1. Slide the post cup onto the post.
2. To complete the installation, align the holes in the post cup with the holes in the post and secure them together with the provided post screws.