

Alvin 3,5,&6 Light Chandelier

316810_ I.

VISUAL COMFORT & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

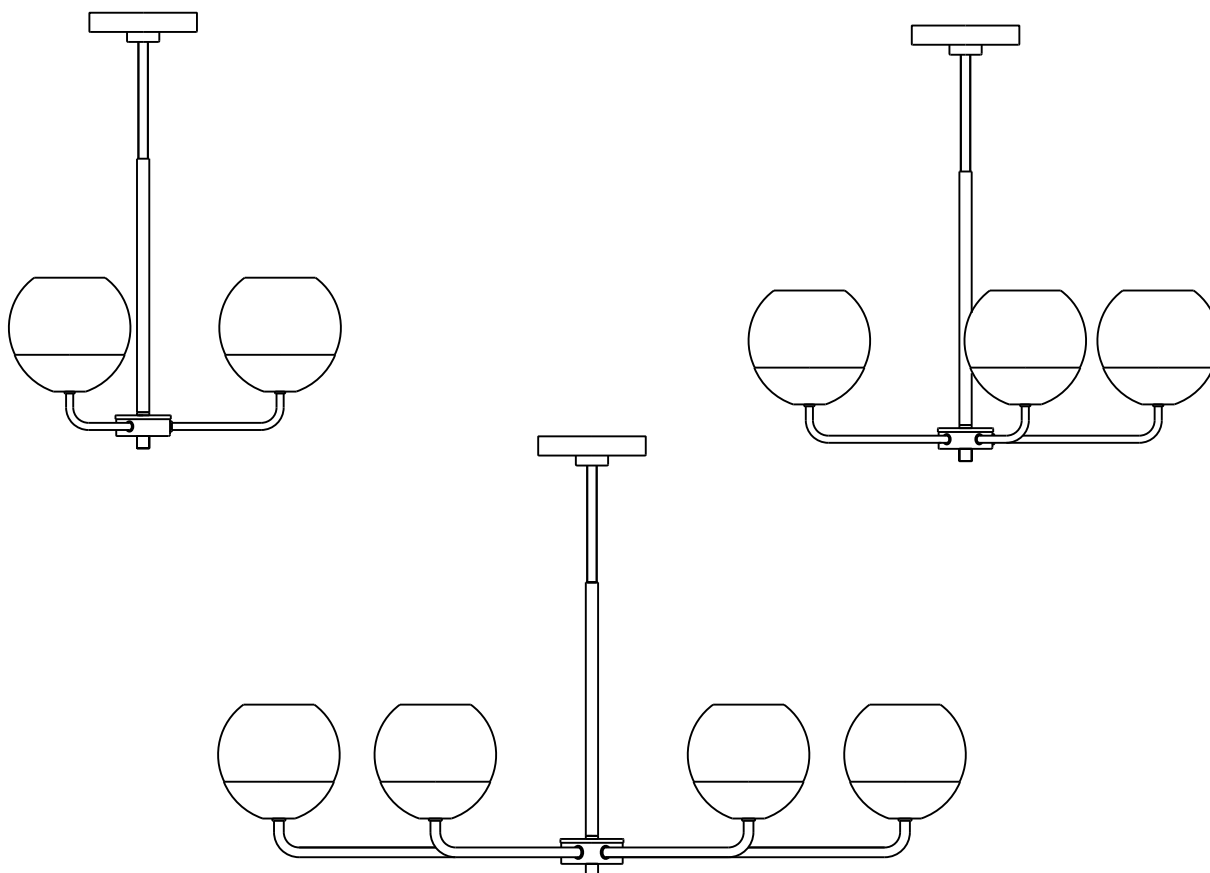

Install the Fixture

IA

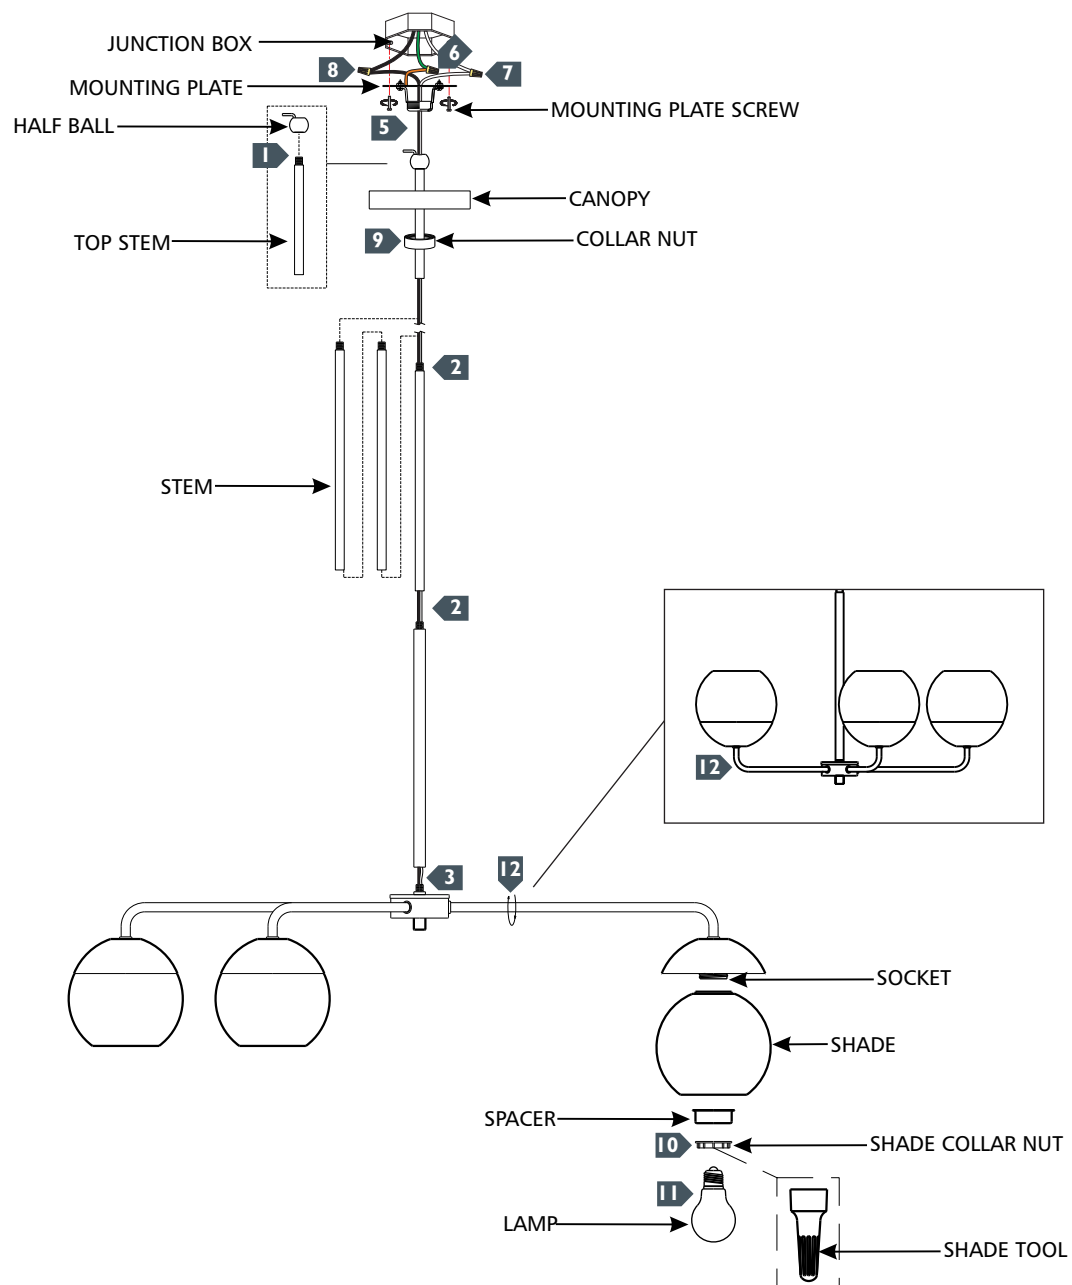

- 1** Screw the half ball to the stem which will be on top.
- 2** Determine the wanted height or look of the fixture with the provided stems, then assemble them by screwing them together; leave out the half ball assembly stem for now.
- 3** Feed the fixture wires through the stem assembly, then screw the stem assembly on top of the fixture.
- 4** Slide the collar nut, canopy, onto the stem assembly, feed the fixture wires through the half ball assembly stem, then screw it onto the stem assembly.
- 5** Install the mounting plate to the junction box, then slide the half ball assembly onto the mounting plate.
- 6** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 7** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 8** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 9** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the mounting plate.
- 10** The fixture arms may be rotated either as an uplight or a downlight. Do not exceed 180° rotation.
- 11** Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information.
- 12** Place the shade, then the spacer on to the socket and secure them in place by screwing the shade collar nut onto the socket using the shade tool. Do not over tighten. Repeat for all the other shades.