

Richmond Chandelier

CC11212, CC11312, CC14112 | 1.2

VISUAL COMFORT & Co.

STUDIO COLLECTION

General Product Information:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent lamps may be dimmed with a standard incandescent dimmer.


LED lamps may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

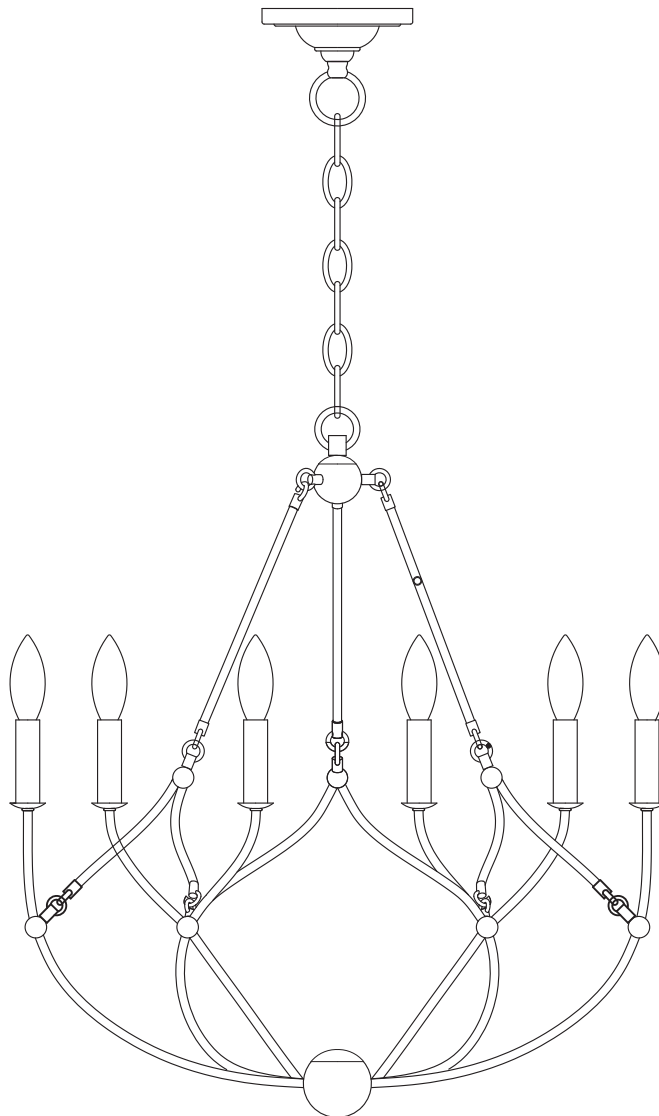

Assemble the Lamp

IA

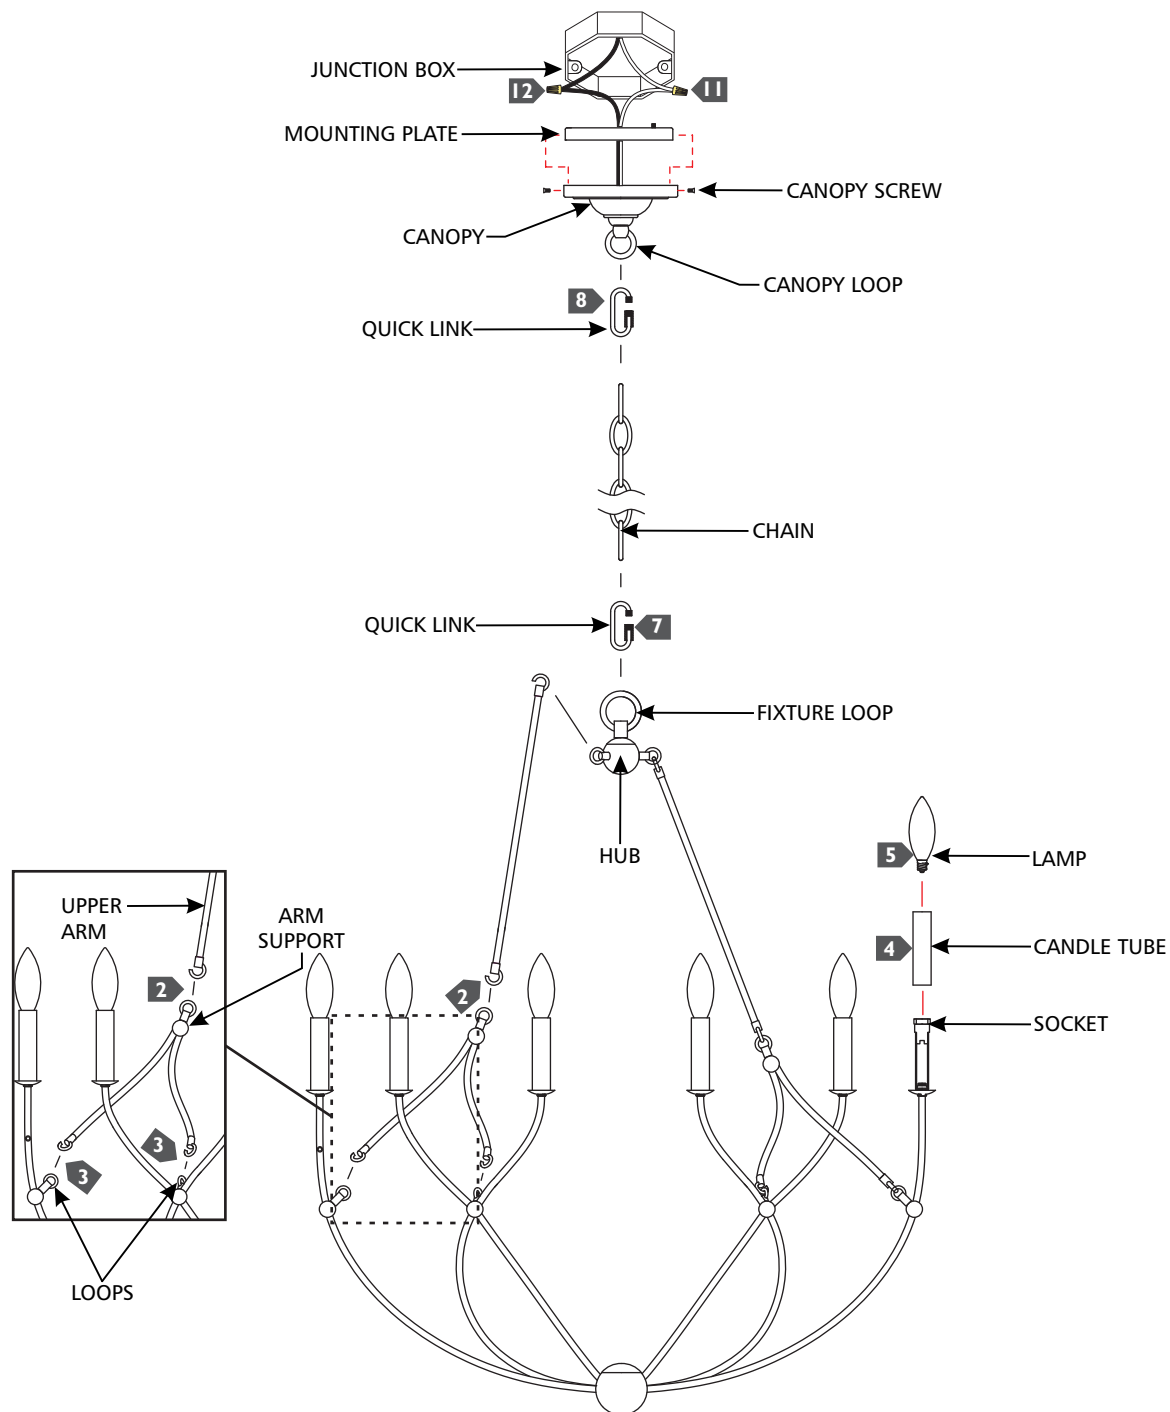

- 1** Secure the mounting plate to the junction box.
- 2** Install the upper arms by hooking one end to the hub, then install the arm support to the other end of the upper arm.
- 3** Install arm assembly to the upper arms by installing the two free ends of the arm support to the loops on the arm assembly.
- 4** Install the candle tube by sliding it over the socket.
- 5** Screw the lamp into the socket. Refer to the label on the lamp socket for Max Wattage information.
- 6** Determine the wanted height of the fixture and remove a portion of the chain from the bottom by opening a link with pliers.
- 7** Install a quick link to bottom end of the chain, then secure the quick link onto the fixture loop.
- 8** Install the other quick link onto the remaining end of the chain, then secure the quick link onto the canopy loop.
- 9** Weave the cord through the chain, canopy, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 10** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 11** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 12** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 13** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place using the canopy screws.