

RHODE 6 LIGHT CHANDELIER

DJC1166, DJC1156

General Product Information:






Safety Information:

CAUTION—RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
USE MINIMUM 90°C SUPPLY CONDUCTORS.

SAVE THESE INSTRUCTIONS!

DANGER! SHOCK HAZARD DANGER!
Turn off electrical current at the source before working with any lighting fixture or portable lamp.
Install and use this product in adherence with local electrical codes and regulations.

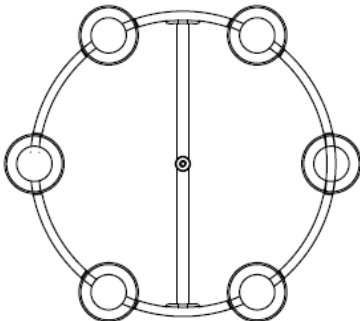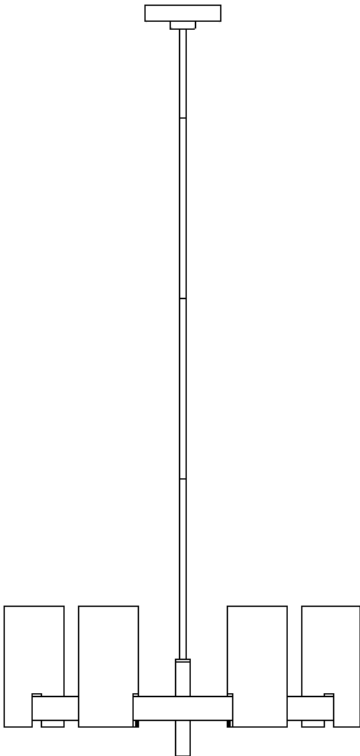

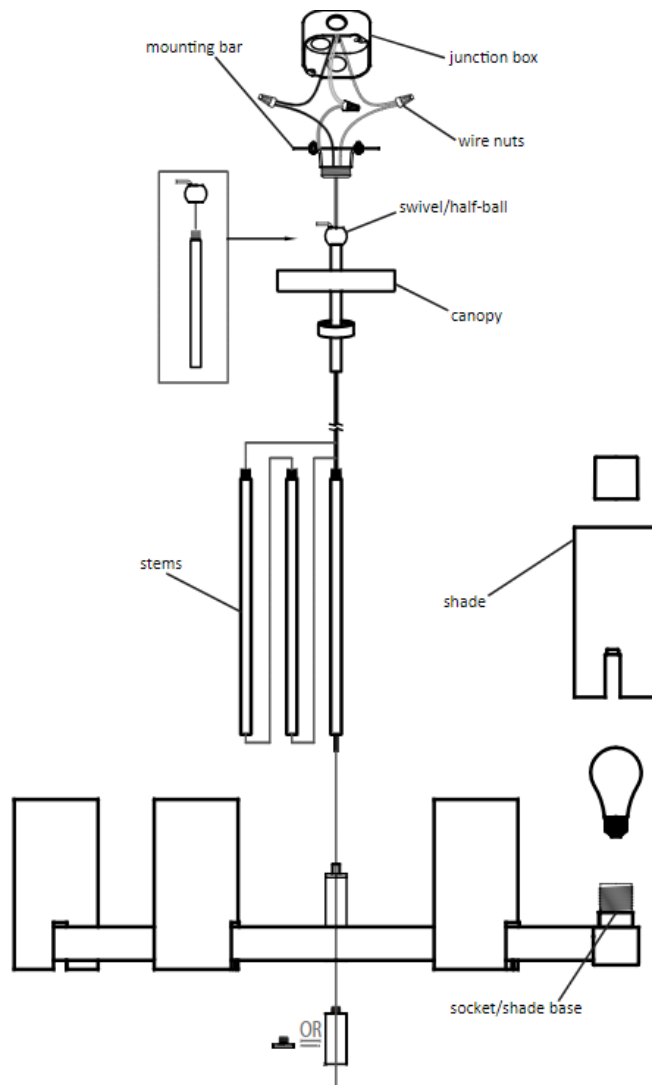

INSTRUCTIONS

I. Preparing the Fixture

1. Screw the half ball to the top stem.
2. Screw the stems together to the desired length.
3. Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
4. Feed the fixture wires through the collar nut, canopy, and half ball assembly; then screw it onto the stem assembly.
5. Secure the mounting plate to the junction box, then slide the half ball assembly onto the mounting plate.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) White fixture wire (square and/or rigid) to the neutral power line wire
 - b) Black fixture wire (round and/or smooth) to the hot power line wire
4. Carefully tuck all the wires into the junction box.

III. Installing the Fixture

1. Slide the canopy and the canopy cover over the mounting plate and secure it in place with the collar nut.
2. Screw the bottom finial into the fixture.
3. Install the shades onto the shade base. **Please note: be careful when installing the glass frames as the glass can easily scratch the frames if they rub up against each other.**
4. Install light bulbs into the sockets.