


RHODE 1 LIGHT VANITY SCONCE

DJV1101

General Product Information

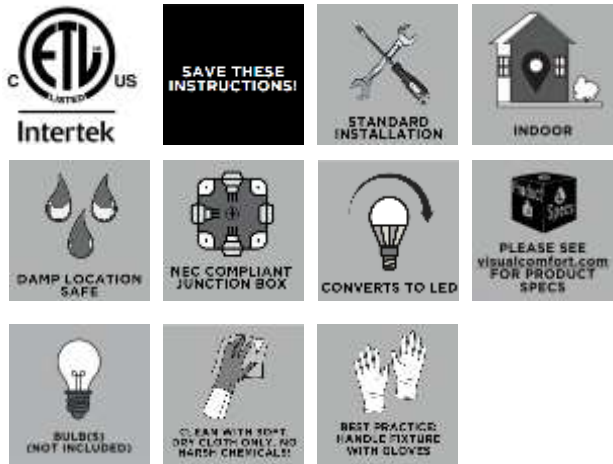

Safety Information

IMPORTANT SAFETY INSTRUCTIONS


This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.



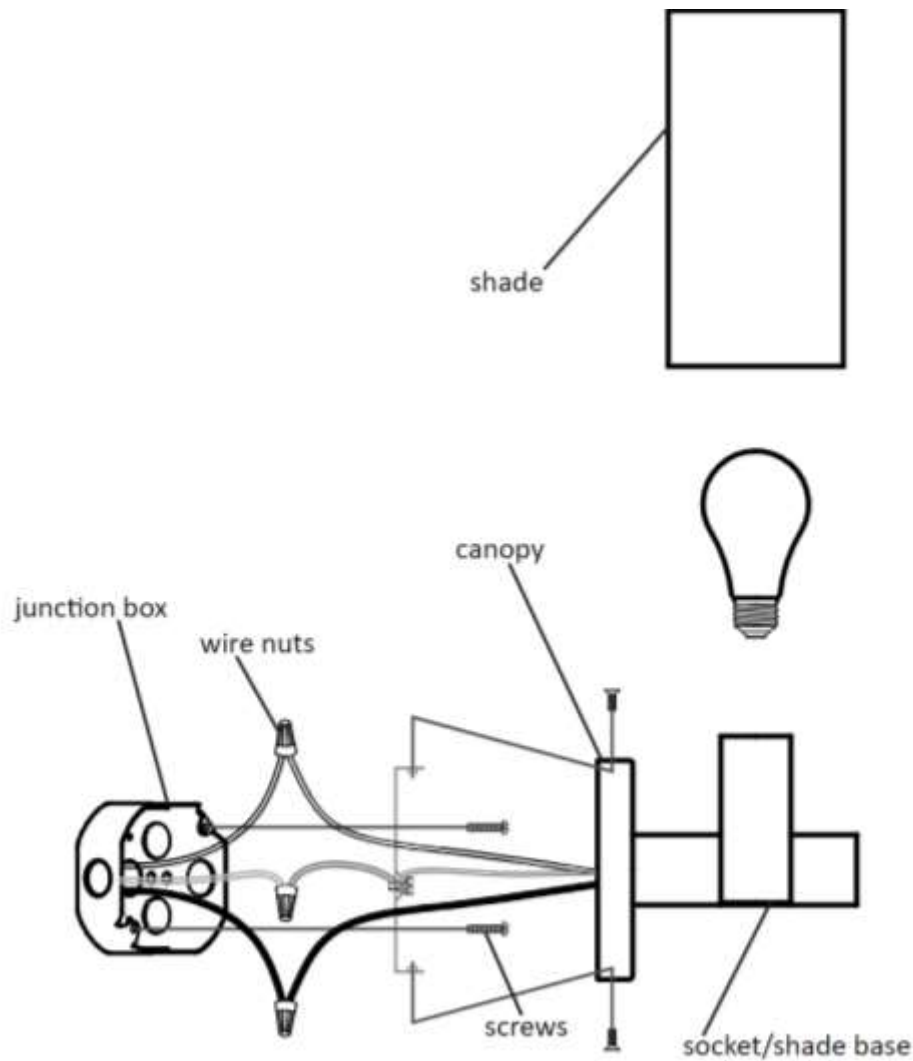

INSTRUCTIONS

I. Preparing the Fixture

1. Remove the mounting plate from the fixture body.
2. Install the mounting plate to the junction box.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green or bare copper wire without insulation).
3. Adjust the length of the wires using a wire stripper/cutter, if necessary.
4. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:

- a) White fixture wire (square and/or rigid) to the neutral power line wire
 - b) Black fixture wire (round and/or smooth) to the hot power line wire
5. Carefully tuck all wires into the junction box.

III. Installing the Fixture

1. Screw the mounting plate to the fixture body.
2. Insert bulbs into the sockets, then install the glass frames. Turn on the power. **Be careful when installing the glass frames as the glass can easily scratch the frames if they rub up against each other.**