

## Montour Wall

TFW1021 1.0

# VISUAL COMFORT & Co.

### STUDIO COLLECTION

#### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

#### CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

**Use minimum 90°C supply conductors.**

**SAVE THESE INSTRUCTIONS!**

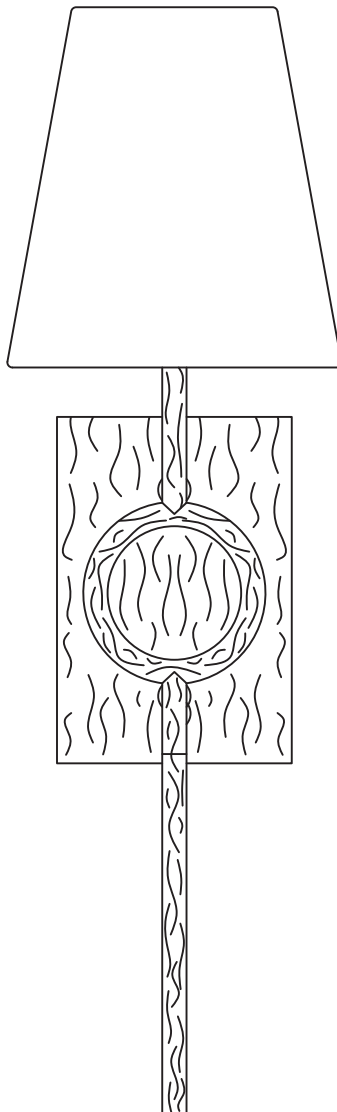

## Install the Fixture

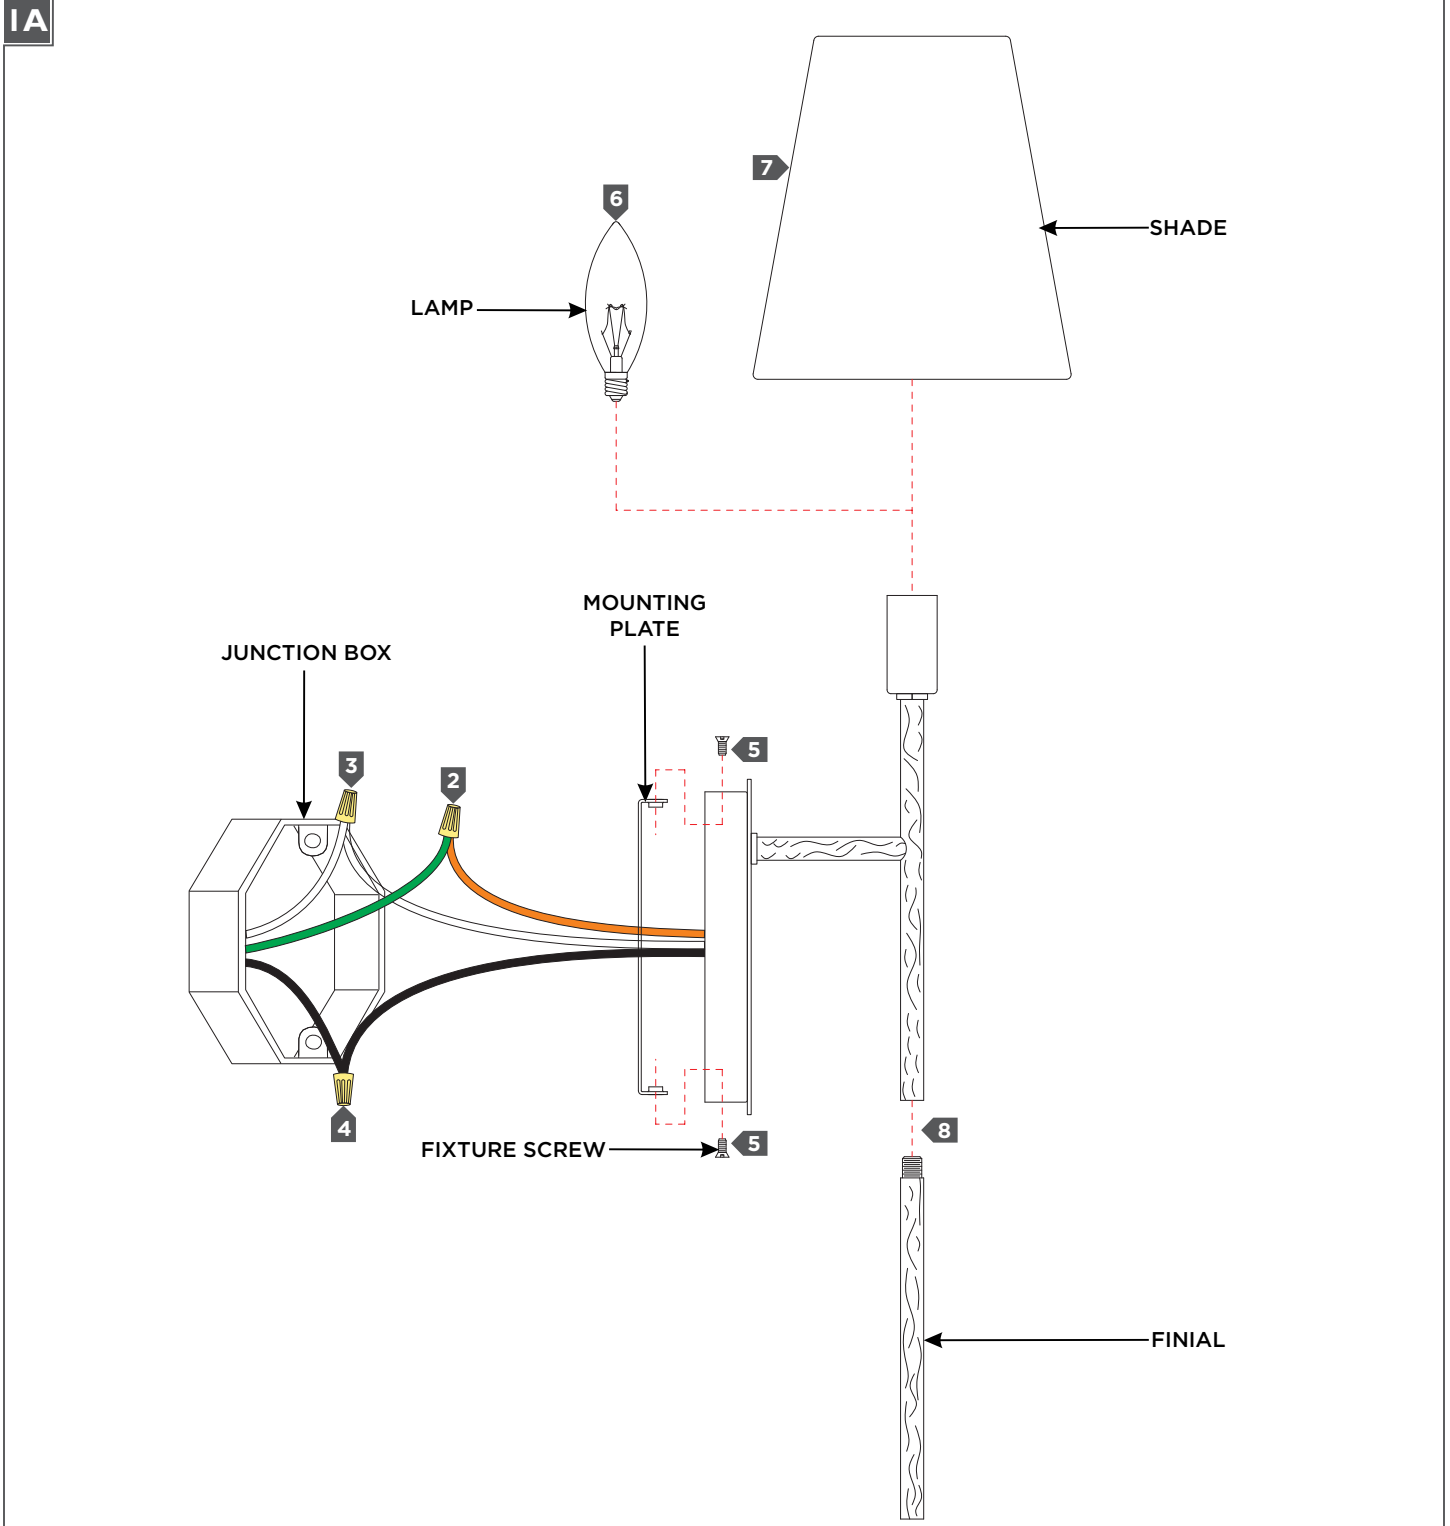

- 1 Secure the mounting plate to the junction box.
- 2 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 3 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 4 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 5 Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place using the fixture screw.
- 6 Screw the lamp into the socket. Refer to the label on the lamp socket for Max Wattage information.
- 7 Install the shade by carefully placing it onto the socket.
- 8 Screw the finial to the bottom of the fixture.