

Helios Pendant

AP1084 | 1.0

Pendant

VISUAL COMFORT & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.


This product is safety listed for damp locations.

Incandescent lamps may be dimmed with a standard incandescent dimmer. LED lamps may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

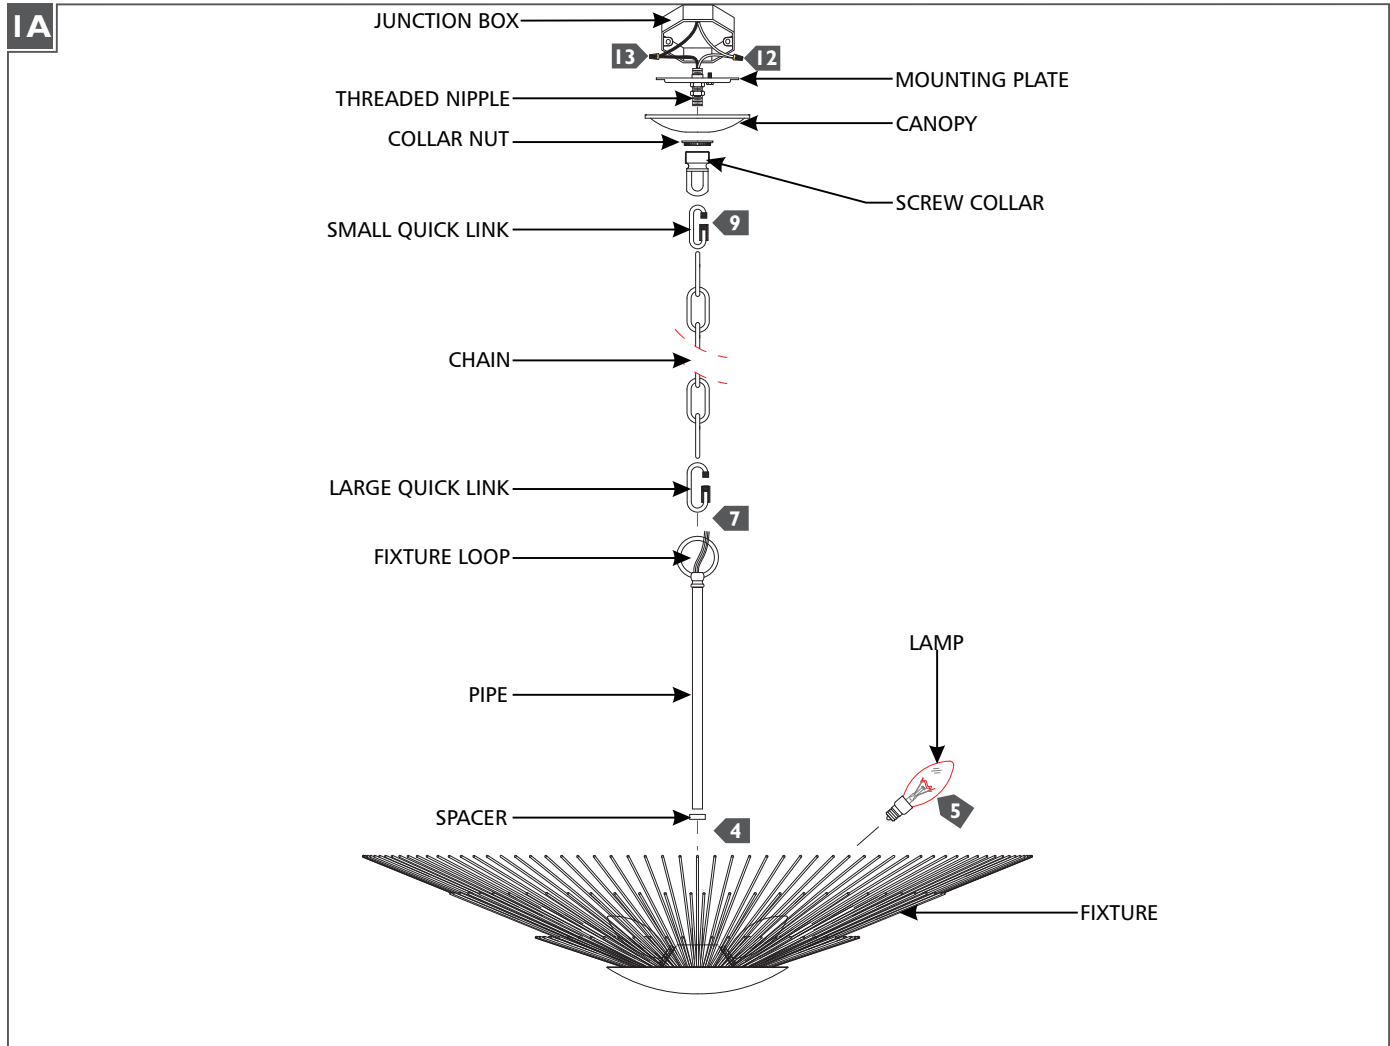

- 1 If necessary, screw the short end of the threaded nipple tightly onto the mounting plate.
- 2 Fasten the screw collar into the bottom end of the threaded nipple and lock into position by tightening the hex nut.
- 3 Secure the mounting plate to the junction box.
- 4 Feed the fixture wires through the spacer, pipe, and fixture loop, then screw the pipe onto the fixture.
- 5 Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 6 Determine the wanted height of the fixture and remove a portion of the chain from the bottom by opening a link with pliers.
- 7 Install the large quick link to bottom end of the chain, then secure the quick link onto the fixture loop.
- 8 Unscrew the collar nut from the screw collar, then install the collar nut, and the canopy onto the chain (in that order).
- 9 Install the small quick link onto the remaining end of the chain, then secure the quick link onto the screw collar.
- 10 Weave the cord through the chain, collar nut, canopy, screw collar, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 11 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 12 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 13 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 14 Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut onto the screw collar.

SAVE THESE INSTRUCTIONS!