

Southhold Linear Lantern

CC1036 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:


These fixtures are intended to be installed utilizing NEC compliant junction boxes. This product is safety listed for damp locations.

Incandescent lamps may be dimmed with a standard incandescent dimmer. LED lamps may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

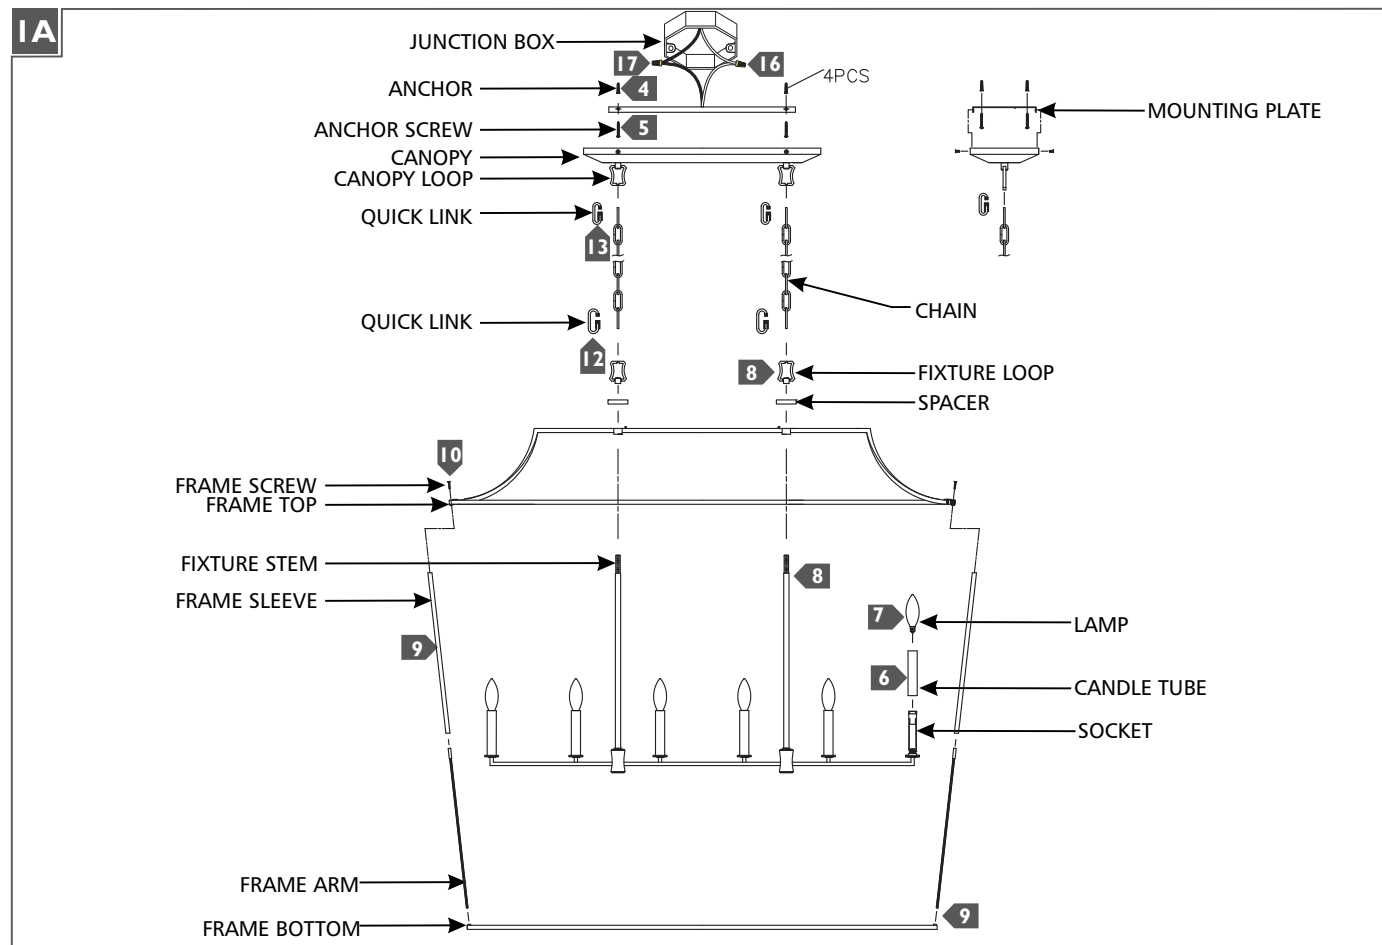

- 1 Temporarily install the mounting plate to the junction box.
- 2 Mark the anchor hole locations through the mounting plate, then remove the mounting plate.
- 3 Drill appropriate sized holes and install the anchors.
- 4 Secure the mounting plate to the junction box.
- 5 Screw the anchor screws into the anchors.
- 6 Install the candle tube by sliding it over the socket.
- 7 Screw the lamp into the socket. Refer to the label on the lamp socket for Max Wattage information.
- 8 Feed the cord through the frame top, spacer and fixture loop, then screw the fixture loops onto the fixture stems.
- 9 Screw the frame arms into the frame bottom, then place the sleeves over the frame arms.
- 10 Place the frame top on to the frame arms and secure in place with the frame screws.
- 11 Determine the wanted height of the fixture and remove a portion of the chain from the bottom by opening a link with pliers.
- 12 Install a quick link to bottom end of the chain, then secure the quick link onto the fixture loop.
- 13 Install the other quick link onto the remaining end of the chain, then secure the quick link onto the canopy loop.
- 14 Weave the cord through the chain, canopy and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 15 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 16 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 17 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 18 Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by using the provided canopy screws.

SAVE THESE INSTRUCTIONS!