


ASSEMBLY INSTRUCTION FOR

Rockwell Arc Lamp

Model# SL1170-01

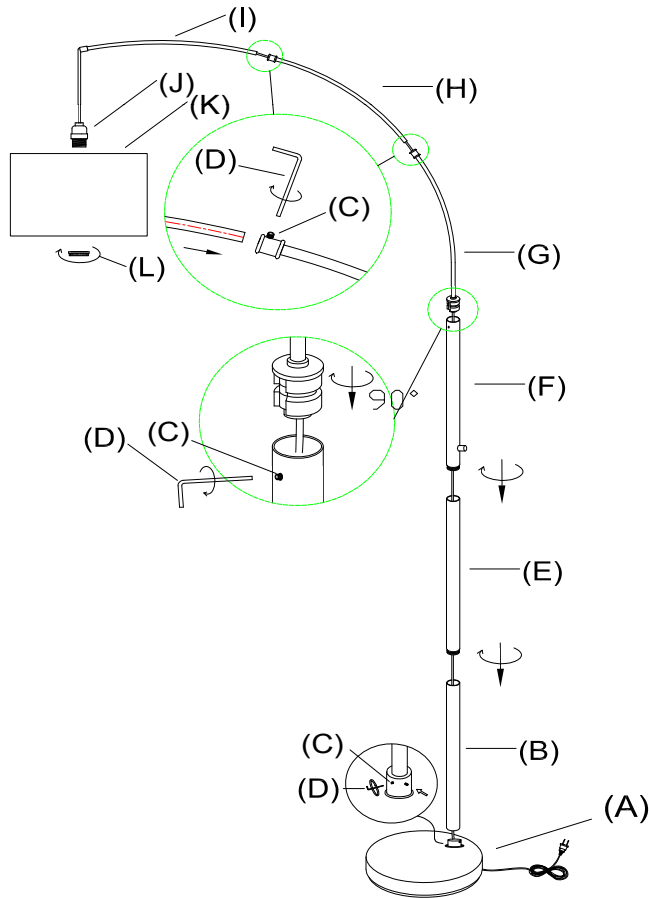

A note on packaging: Due to the fragile nature of this product, we have chose to use Styrofoam only where it is needed to protect it and deliver the best quality product to our customer. We are aiming to reduce the use of plastic and styrofoam in the packaging of our products where possible and are investigating more environmentally friendly alternatives to use. We hope you enjoy your purchase!

1. Screw pole (F) into pole (E).
2. Screw pole (E) onto pole (B).
3. Screw pole (B) onto base (A). The switch should be facing directly forward over the base of the lamp. If it is not facing forward, please unscrew the base pole (B) from the base just a little bit so that the switch is facing forward. Once in the correct position, secure pole (B) onto lamp base (A) with 2pcs screws (C) by using allen wrench (D). Gently pull cord out of lamp base (A)
4. Insert pole (I) into pole (H) and adjust the position of pole (I) so that there is a consistent curve. Then, fix pole (I) into pole (H) by inserting 1 set screw (C) into the hole on the top of pole (H) and screw it into pole (H) with allen wrench (D).
5. Insert pole (H) into pole (G) and adjust the position of pole (H) so that there is a consistent curve. Then, fix pole (H) into pole (G) by inserting 1 set screw (C) into the hole on the top of pole (G) and screw it into pole (G) with allen wrench (D).
6. Insert pole (G) into pole (F). Adjust the position of pole (G) by rotating it 90 degrees. Note: The assembled arm should be facing forward as in the sketch. Then, fix pole (G) into pole (F) by inserting 2 set screws (C) each into the holes on the top of pole (F) and screw each into pole (F) with allen wrench (D).
7. Remove socket ring (L) from socket (J) and place lamp shade (K) onto socket (J). Secure the shade by screwing back on socket ring (L).

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: Please use one 100 watt maximum incandescent bulb or equivalent CFL bulb (bulbs not included).


ADESSO

353 West 39th Street 2nd Floor NY, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com

INSTRUCCIONES DE ENSAMBLAJE PARA

Rockwell Lámpara de Arco

Modelo# SL1170-01

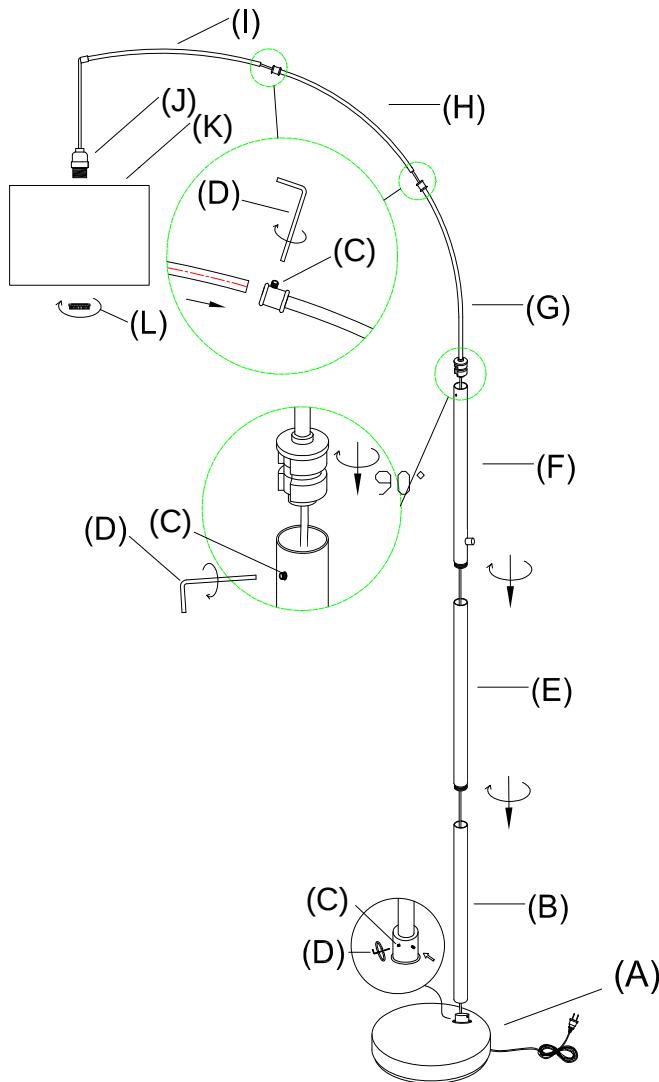

1. Enrosque el poste (F) en el poste (E).
2. Enrosque el poste (B) en la base (A). El interruptor debe estar orientado directamente hacia adelante sobre la base de la lámpara. Si no está mirando hacia adelante, desenrosque el poste de la base (B) desde la base sólo un poco para que el interruptor esté mirando hacia adelante. Una vez en la posición correcta, asegure el poste (B) en la base de la lámpara (A) con 2 tornillos (C) usando la llave Allen (D). Hale suavemente el cable desde la base de la lámpara (A).
3. Enrosque el poste (H) en el poste (G) y ajuste la posición del poste (H) para que haya una curva consistente. Luego, fije el poste (H) en el poste (G) insertando 1 tornillo de ajuste (C) en el orificio en la parte superior del poste (H) y atorníllelo en el poste (H) con una llave Allen (D).
4. Inserte el poste (I) en el poste (H) y ajuste la posición del poste (I) para que haya una curva consistente. Luego, fije el poste (I) en el poste (H) insertando 1 tornillo de ajuste (C) en el orificio en la parte superior del poste (G) y atorníllelo en el poste (G) con la llave Allen (D).
5. Enrosque el poste (H) en el poste (G) y ajuste la posición del poste (H) para que haya una curva consistente. Luego, fije el poste (H) en el poste (G) insertando 1 tornillo de ajuste (C) en el orificio en la parte superior del poste (G) y atorníllelo en el poste (G) con la llave Allen (D).
6. Enrosque el poste (G) en el poste (F). Ajuste la posición del poste (G) girándolo 90 grados. Nota: El brazo ensamblado debe mirar hacia adelante como en el dibujo. Luego, fije el poste (G) en el poste (F) insertando 2 tornillos de fijación (C) cada uno en los agujeros en parte superior del poste (F) y enrosque cada uno en el poste (F) con una llave Allen (D).
7. Quite el anillo (L) de la boquilla (J) y coloque la pantalla de la lámpara (K) en la boquilla (J). Asegure la pantalla enroscando de nuevo el anillo (L).

INFORMACION GENERAL DEL PRODUCTO:

Este producto es adecuado sólo para lugares secos.



INSTRUCCIONES IMPORTANTES DE SEGURIDAD:

Esta lámpara portátil tiene un enchufe polarizado (una paleta es más ancha que la otra), función de seguridad que reduce el riesgo de una descarga eléctrica. Este enchufe encajará en un tomacorriente polarizado en un sólo sentido. Si el enchufe no entra completamente en el tomacorriente, invierta el enchufe. Si aún así no encaja, llame a un electricista calificado. Nunca use un cable de extensión a menos que el enchufe pueda insertarse por completo. **NO MODIFICAR EL ENCHUFE.**

TIPO DE BOMBILLA: Utilice una bombilla incandescente de 100 vatios máximo o una bombilla equivalente a CFL (no incluida).

ADESSO

353 West 39th Street 2nd Floor NY, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com