


ASSEMBLY INSTRUCTIONS FOR Zane LED Floor Lamp

3958-01
3958-21

1.0

Model # 3958-01
3958-21

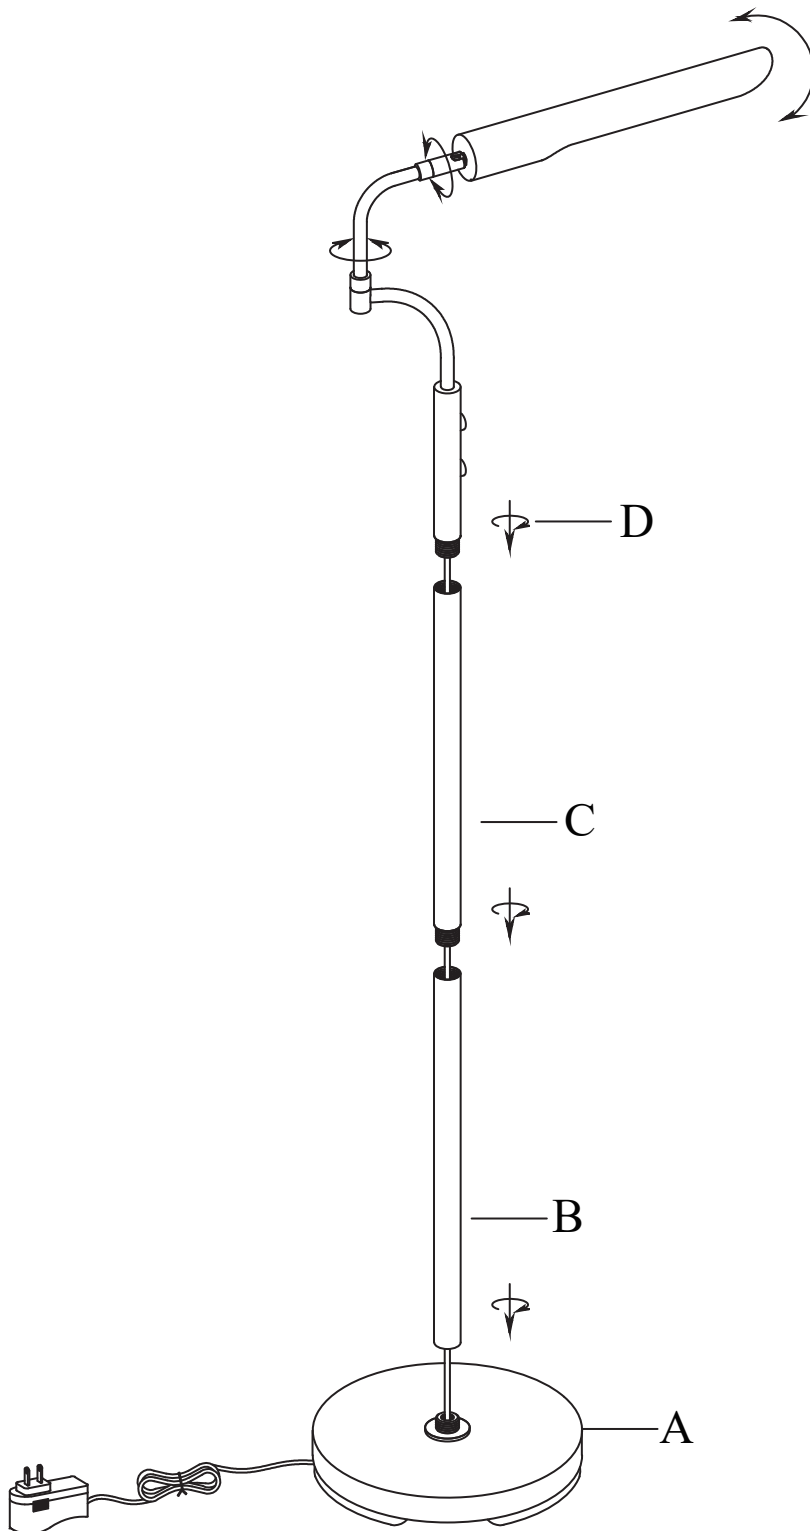

1. Remove all parts and lay on a flat surface.
2. Screw the pole(B) clockwise into the base(A) to tighten.
3. Screw the pole(C) clockwise into the pole(B) to tighten.
4. Screw part(D) clockwise into the pole(C) to tighten and get the remaining slack of the power cord out carefully from the bottom of base(A).
5. The assembled arm of the shade is able to rotate left to right.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: 10W LED BULB INCLUDED