


ASSEMBLY INSTRUCTIONS FOR HUGO FLOOR LAMP

2139-12 1.0

Model # 2139-12

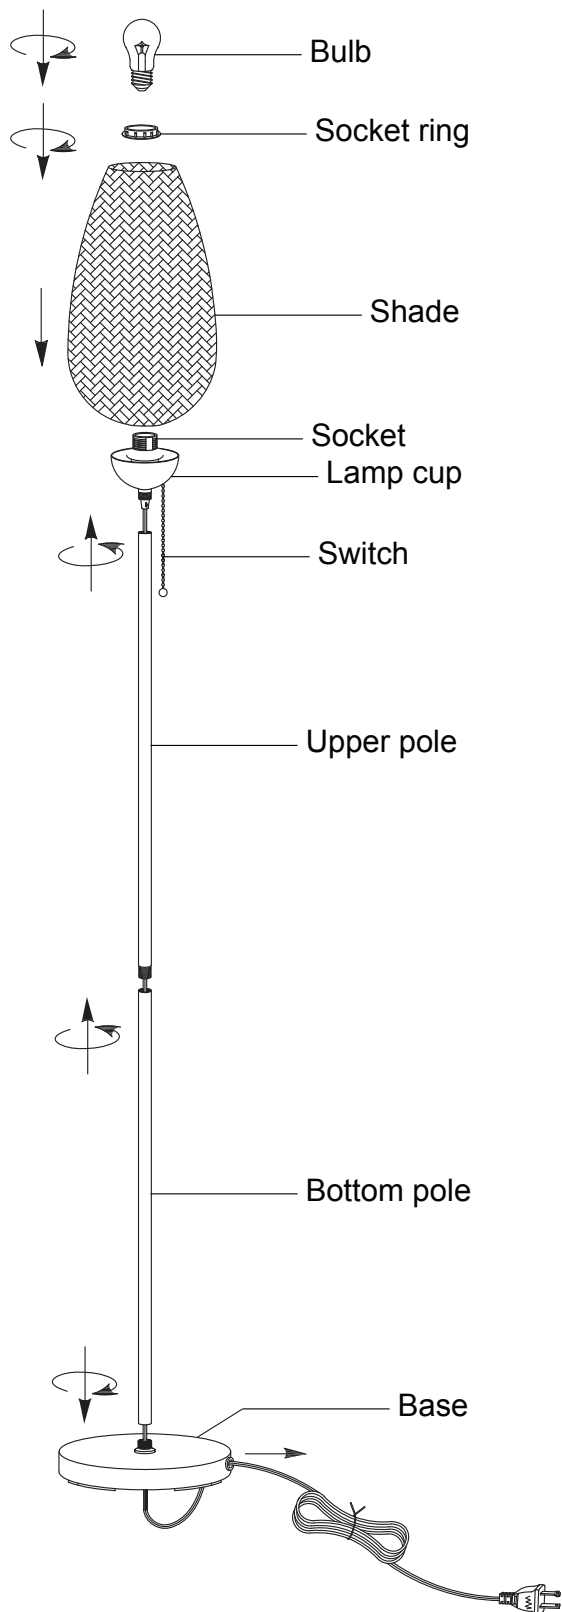

1. Screw the lamp cup onto the upper pole.
2. Screw the upper pole onto the bottom pole.
3. Screw the bottom pole onto the base.
4. Place shade onto the lamp cup.
5. Socket ring comes pre-assembled to the socket. Before assembling the lamp shade, please unscrew this socket ring. Set lamp shade onto socket and tighten clockwise with socket ring to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (1) 60Watt

PARTS DIAGRAM:

- 1) Socket ring