



ASSEMBLY INSTRUCTIONS LOUISE FLOOR MIRROR


WK6287-01

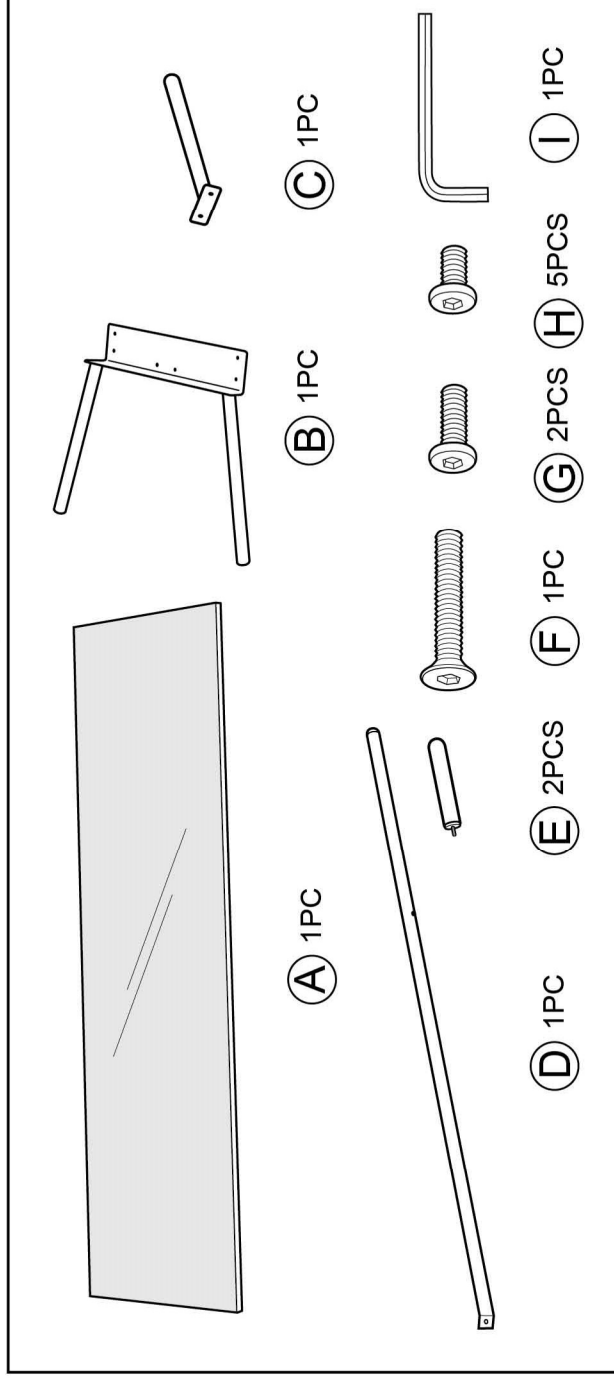


CAUTION : DO NOT TIGHTEN SCREWS COMPLETELY UNTIL ALL THE SCREWS ARE FIXED IN THE CORRECT POSITION

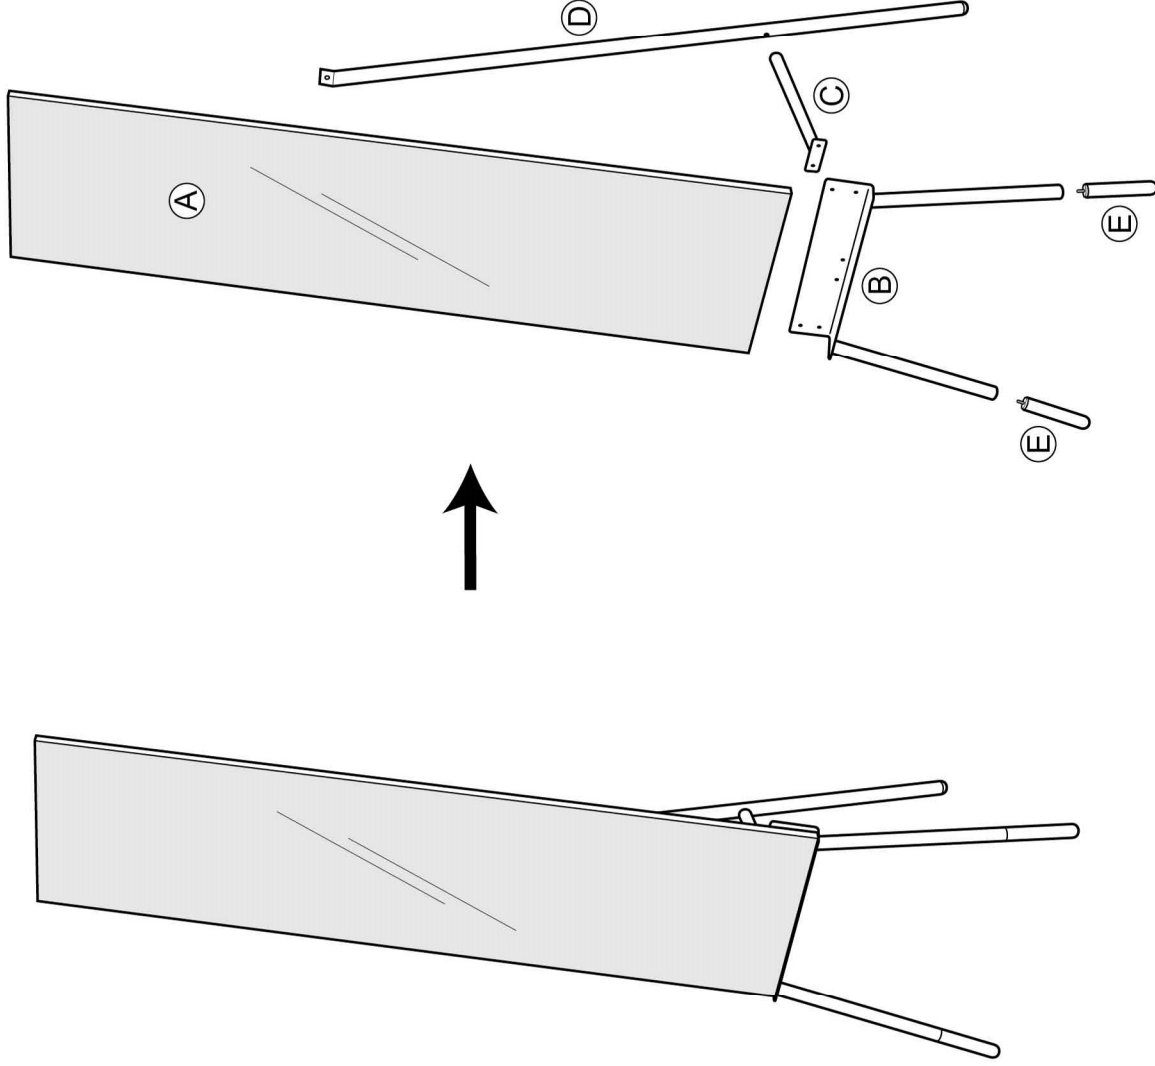


1

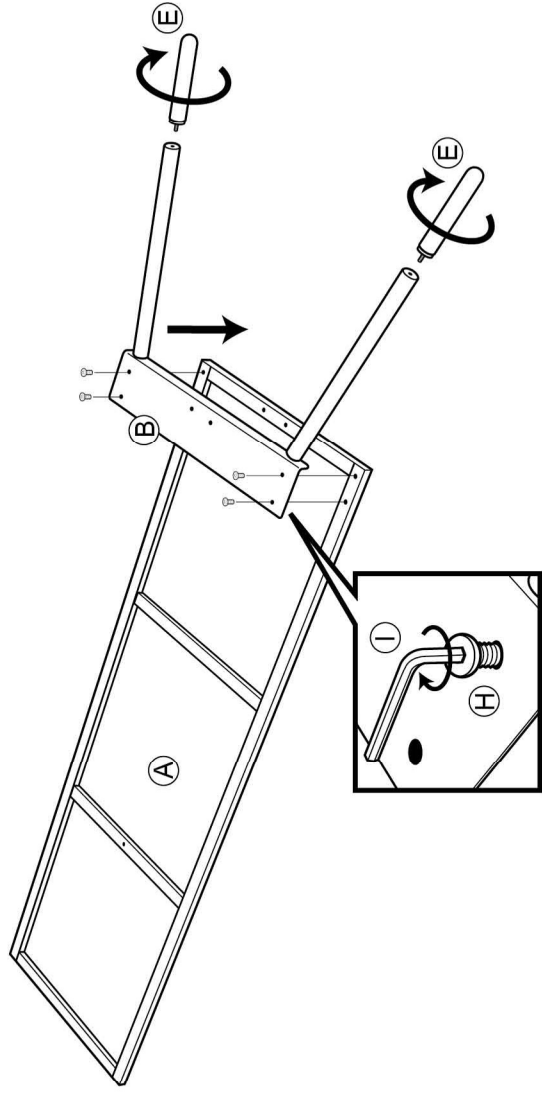

2

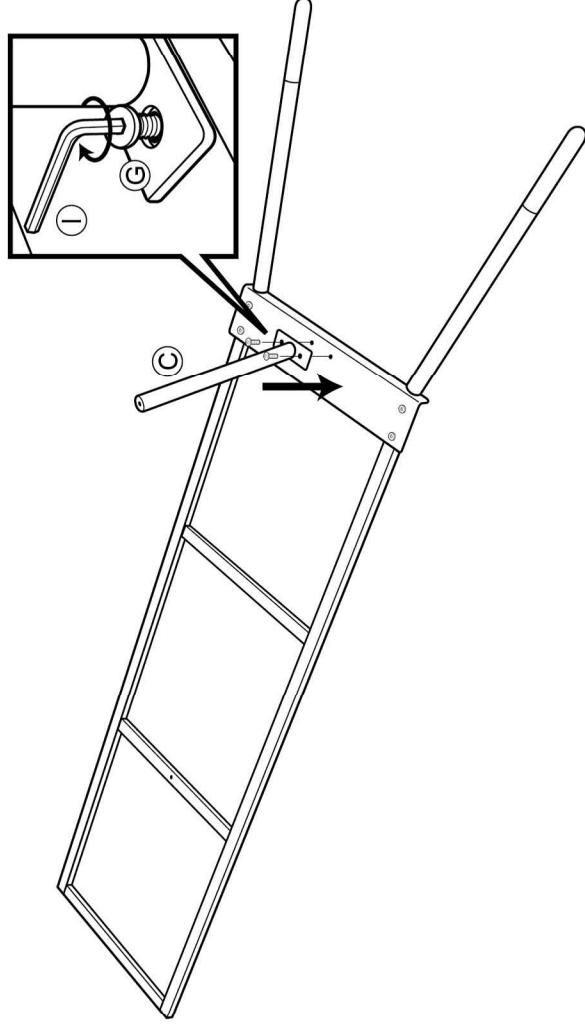

3

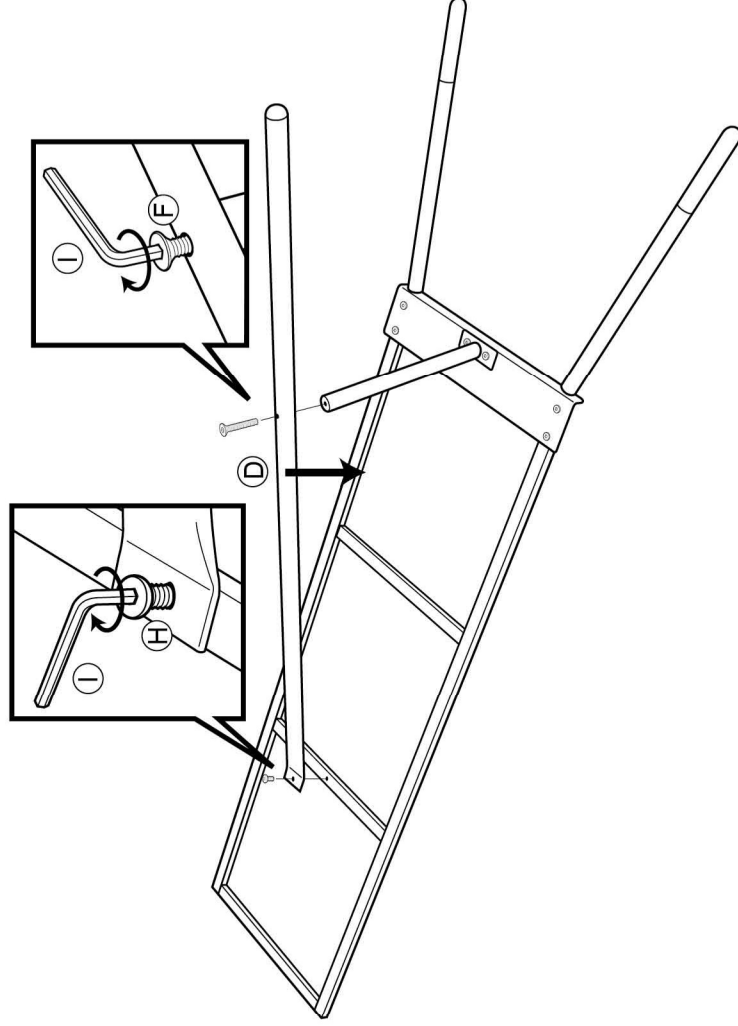

ADESSO®

21 Penn Plaza Suite 909 New York, NY 10001
 Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com

P2