


ASSEMBLY INSTRUCTIONS FOR Zoe Floor Lamp

3798-21 1.0

Model # 3798-21

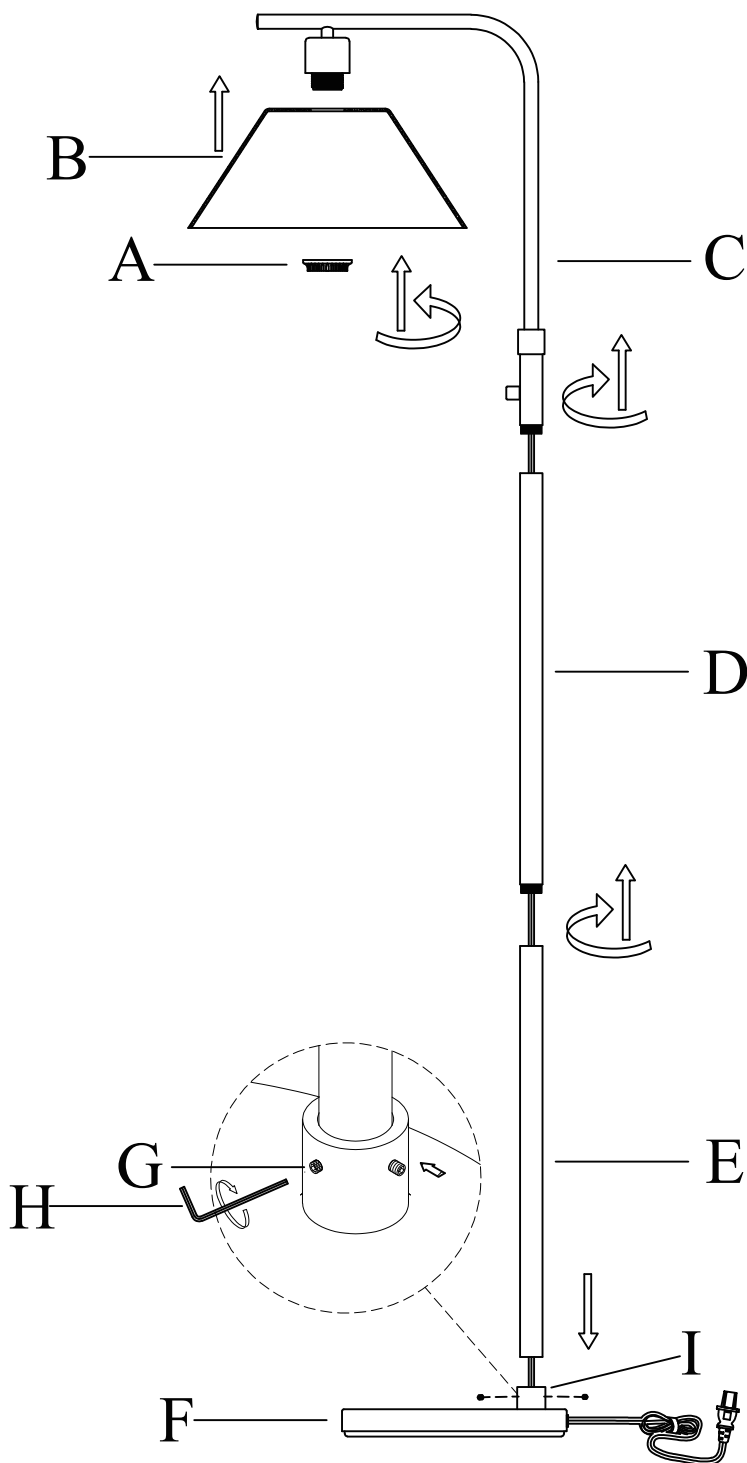

1. Remove all parts and lay on a flat surface.
2. Screw the pole(D) clockwise into the part(C) to tighten.
3. Screw the pole(E) clockwise into the pole(D) to tighten.
4. Screw pole(E) clockwise into the part(I) to tighten. If the lamp is not facing forward to the base, turn some poistion back and make sure the shade is facing forward so that it hangs over the base.
5. Tighten screws(G) with a allen wrench(H) to secure the pole(E). Screws(G) are pre-insert in the pole(I), use allen wrench(H) to loosen the screws(G) before inserting pole(E) into the base pole.
6. Socket ring (A) comes pre-assembled to the socket. Before assembling the shade, please unscrew this socket ring (A). Set shade (B) onto socket and tighten clockwise with socket ring (B) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet onl Y One way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 60 watt maximum incandescent or 9 watt maximum equivalent LED bulb. (not included)

A note on packaging: Due to the fragile nature of this product, we have chosen to use Styrofoam only where it is needed to protect it and deliver the best quality product to our customer. We are aiming to reduce the use of plastic and styrofoam in the packaging of our products where possible and are investigating more environmentally friendly alternatives to use. We hope you enjoy your purchase!

PARTS DIAGRAM:

(1) allen wrench(H)

