


ASSEMBLY INSTRUCTIONS FOR Montana Floor Lamp

Model # 3960-01
3960-15

3960-01
3960-15

1.0

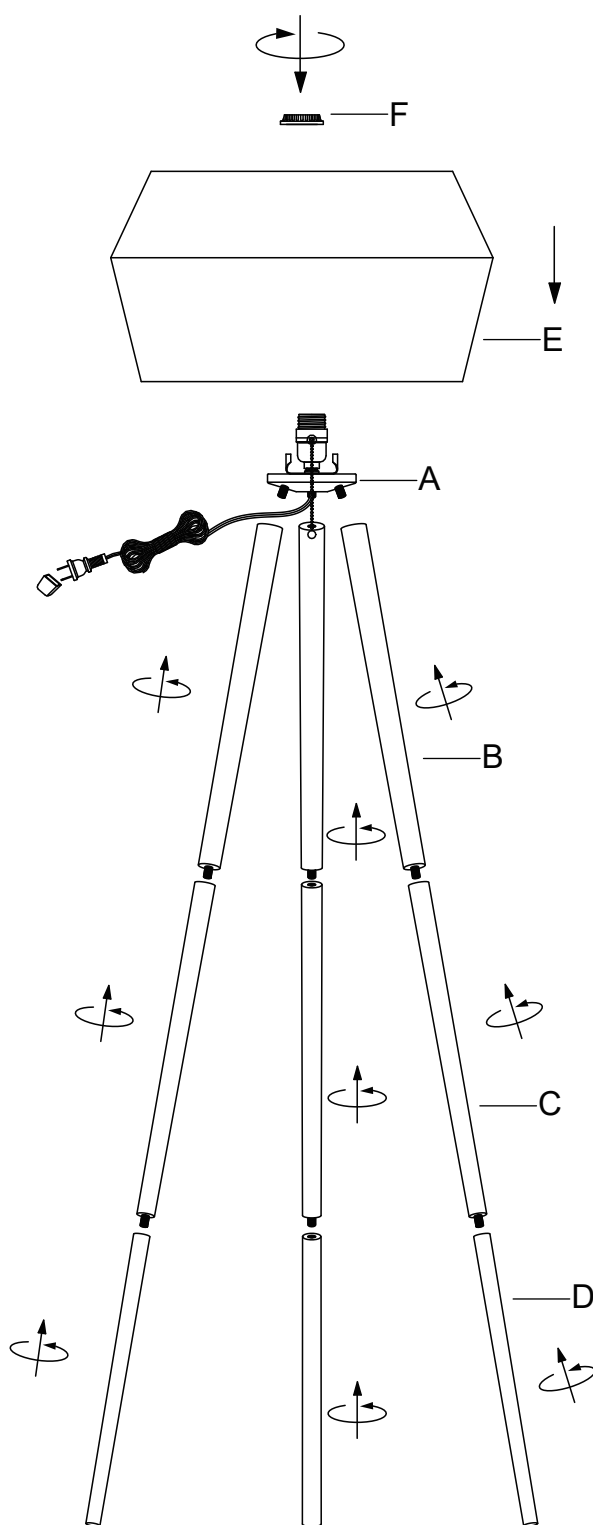

1. Screw poles(B) clockwise into part(A) to tighten.
2. Screw poles(C) clockwise into pole(B) to tighten.
3. Screw poles(D) clockwise into pole(C) to tighten.
4. Socket ring(F) comes pre-assembled to the socket. Before assembling the shade(E), please unscrew this socket ring(F). Set shade(E) onto socket and tighten clockwise with socket ring(F) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (1) 150 watt maximum incandescent
or 18 watt maximum equivalent LED bulb.
(not included)