


ASSEMBLY INSTRUCTIONS FOR BOND FLOOR LAMP

AD9115-01 1.0

Model # AD9115-01

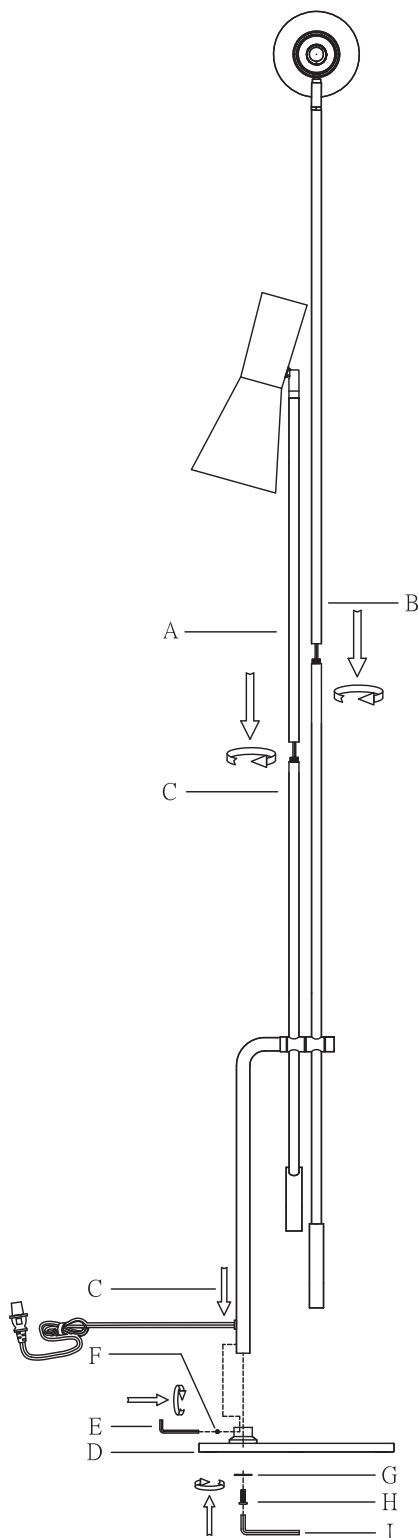

1. Screw pole(A) clockwise onto base(C) to tighten.
2. Screw pole(B) clockwise onto base(C) to tighten.
3. Insert pole (C) into base pole (D), Then using Allen Wrench (E) to tighten screws (F) to secure the pole into the lamp base.
4. Screw the screw nuts (H) and gasket (G) onto base (D), using Allen Wrench (I) to tighten, secure the pole to the base.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



BULB TYPE: 2 x 40W Type A Bulb
(not in included)

