


ASSEMBLY INSTRUCTIONS FOR Waylon Floor Lamp

3246-01 1.0
3246-02

Model # 3246-01
3246-02

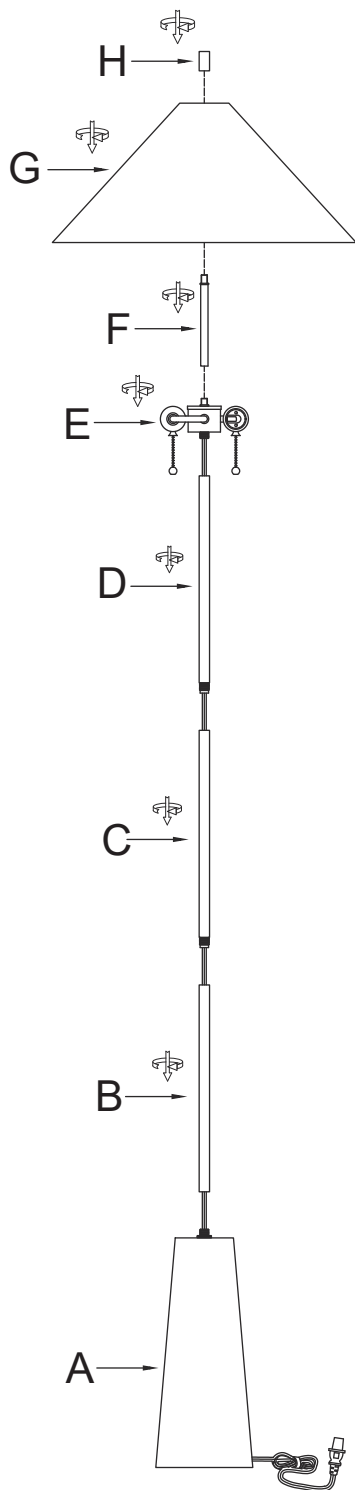

1. Remove all parts and lay on a flat surface.
2. Screw pole(B) clockwise into base(A) to tighten.
3. Screw pole(C) clockwise into pole(B) to tighten.
4. Screw pole(D) clockwise into pole(C) to tighten.
5. Screw socket part(E) clockwise into pole(D) to tighten.
6. Screw pole(F) clockwise into socket part(E) to tighten.
7. Set shade(G) onto the top of the metal pole(F).
8. Screw finial(H) clockwise into the top of the metal pole(F) to tighten.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (2) 60 watt incandescent or
9 watt LED equivalent.(not included)