


# ASSEMBLY INSTRUCTION FOR Pierce LED Floor Lamp

4404-21

1.0

Model# 4404-21

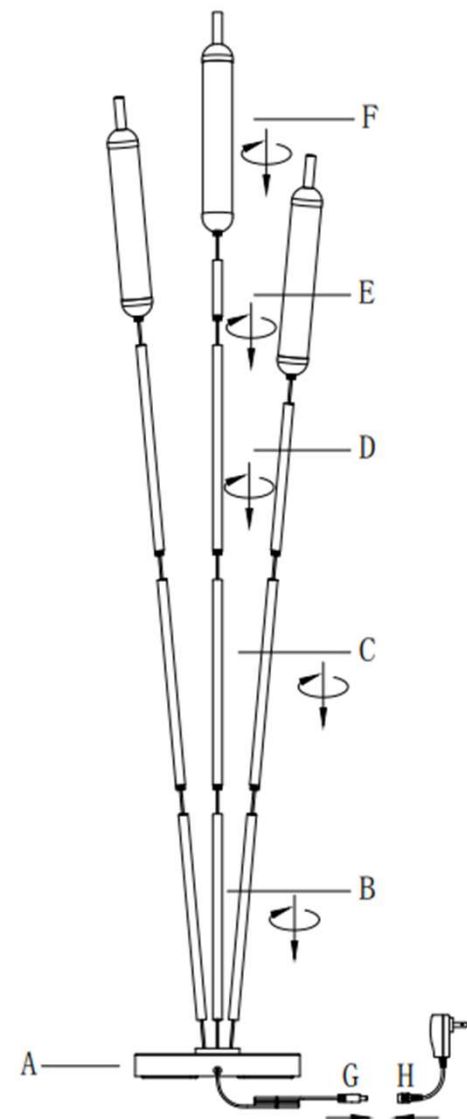

1. Screw tubes (B) into base (A) clockwise to tighten.



2. Screw tubes (B),(C), (D), (E) and (F) together.

In order to do this, you will now need to lay the lamp on its side to reach the bottom of the base. Pull each black cord gently from the bottom of the base through the poles in order to screw the poles together and onto the base. You can hide the excess cord under the black plastic plate on the bottom of the base. Please be sure the cord is packed flat under the black plastic plate for optimum stability.

3. Insert the power supply(H) into the cord (G)

## GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.

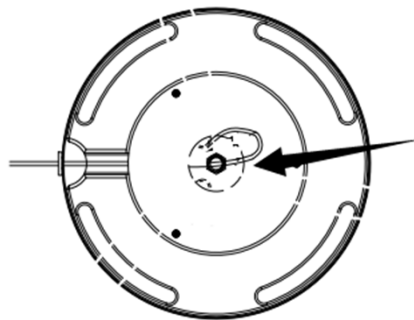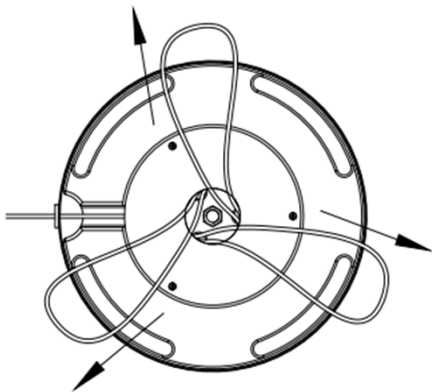

GET INSPIRED. SHARE YOUR STYLE.

#myadesso

Visit [www.adessohome.com](http://www.adessohome.com) for details.