


ASSEMBLY INSTRUCTIONS FOR LANDON PENDANT

6067-01 1.0

Model #6067-01

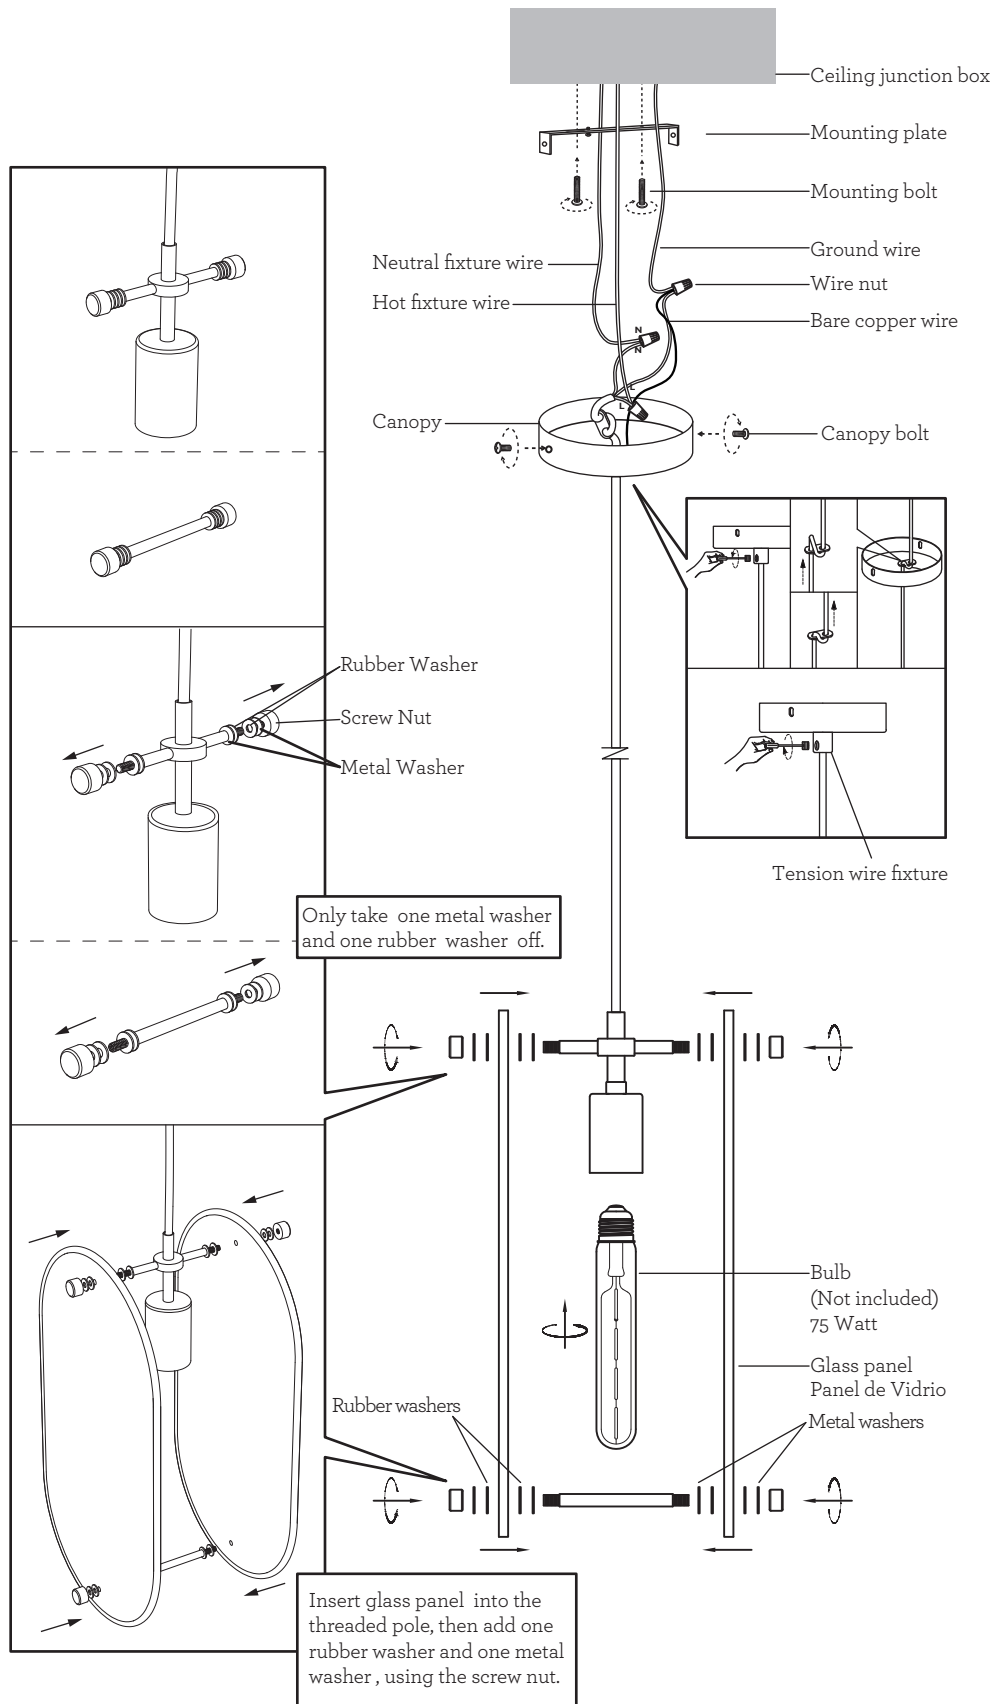

1. Loosen the small screw on the tension wire fixture and pull the tension wire through the canopy with desired height then tighten the small screw.
2. Place the mounting plate over the center of the ceiling junction box.
3. Align holes in mounting plate with holes in junction box and attach with 2 mounting bolts.
4. Attach 2 ground wires (from lamp & junction box) and bare copper wire, fasten each together with wire nut and wrap the connection with electrical tape.
5. Attach the neutral fixture wire from the pendant to the neutral junction box wire, fasten each together with a wire nut and wrap the connection with electrical tape; do the same way for hot fixture wire.
6. Gently tuck the wire connections neatly into the ceiling junction box.
7. Push canopy assembly up over the mounting plate until it is flush with the ceiling. Align holes in canopy with canopy bolts in mounting plate and secure with 2 canopy nuts.
8. Remove one rubber washer and one metal washer from threaded pole. Then insert the glass panel, one rubber washer, and one metal washer and secure them using screw nut. Repeat this step for the threaded tube on the opposite side.
Be sure that the rubber washers are sitting on either side of the glass, with the metal washers between the rubber washer and the screw nut.
9. Install the bulb (Not Included) by screwing it into the socket. Refer to the label on the lamp socket to maximum wattage information.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

If you are unsure about what mounting method you should use, please consult a qualified professional or your local hardware store.

BULB TYPE: (1) 75Watts

PARTS DIAGRAM:

- | | |
|--------------------|--------------------|
| (1) Mounting plate | (3) Wire nut |
| (2) Mounting bolts | (8) Rubber washers |
| (2) Canopy bolts | (8) Metal washers |


ADESSO®

353 West 39th Street - 2nd Floor
New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com

INSTRUCCIONES DE ENSAMBLAJE PARA LANDON LAMPARA COLGANTE

6067-01 1.0

Model #6067-01

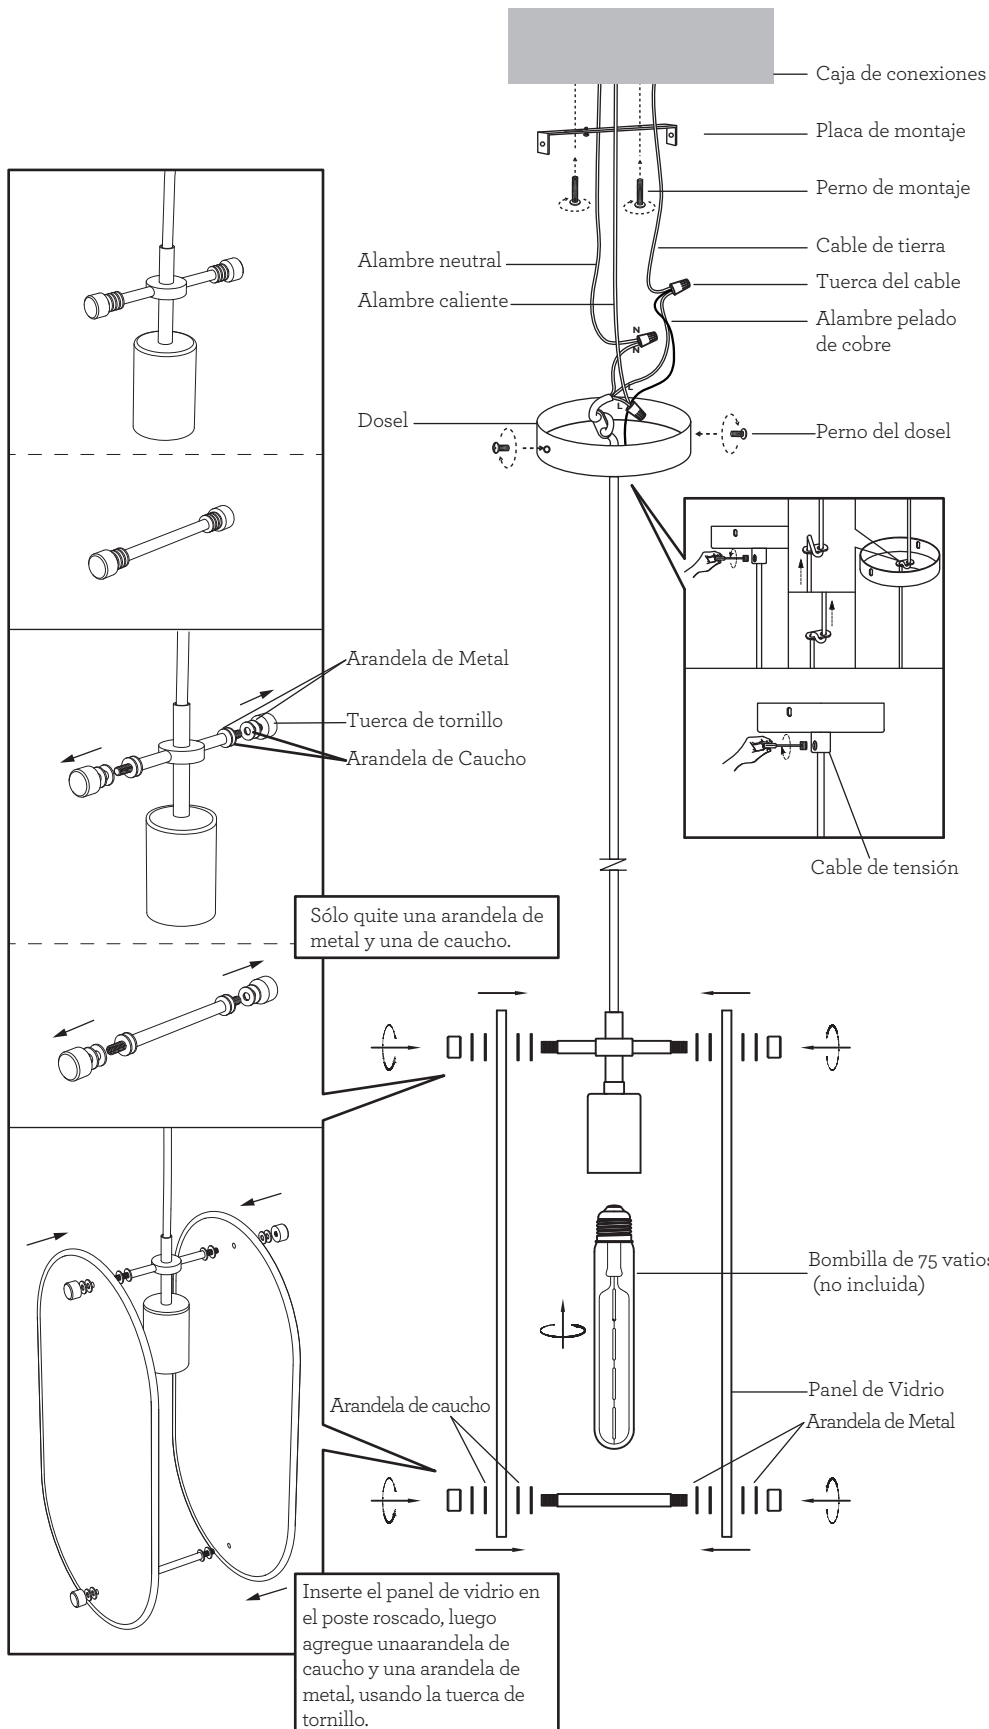

1. Afloje el tornillo pequeño en el cable de tensión y tire del cable de tensión a través del dosel hasta la altura deseada y luego apriete el tornillo pequeño.
2. Coloque la placa de montaje en el centro de la caja de conexiones del techo.
3. Alinee los agujeros de la placa de montaje con los agujeros de la caja de conexiones y únalos con los 2 pernos de montaje.
4. Una los 2 cables de tierra (desde la lámpara y de la caja de conexiones) y el alambre pelado de cobre, fije cada uno con la tuerca para cables y envuelva la conexión con cinta aislante.
5. Una el cable neutral desde el colgante al cable neutral de la caja de conexiones, fije cada uno con la tuerca para cables y envuelva la conexión con cinta aislante; haga lo mismo con el cable caliente.
6. Meta suavemente y con cuidado las conexiones del cable en la caja de conexiones del techo.
7. Empuje el ensamble del dosel hacia arriba sobre la placa de montaje hasta que quede al ras con el techo. Alinee los agujeros en el dosel con los pernos del dosel en la placa de montaje y asegúrelos con 2 tuercas del dosel.
8. Saque una arandela de caucho y una arandela de metal del poste roscado. Luego inserte el panel de vidrio, una arandela de caucho y una arandela de metal y fíjelas con una tuerca de tornillo. Repita este paso para el tubo roscado del lado opuesto. **Asegúrese de que las arandelas de caucho estén colocadas en ambos lados del vidrio, con las arandelas metálicas entre la arandela de caucho y la tuerca de tornillo.**
9. Coloque la bombilla (no incluida) enroscándolo en la boquilla. Consulte la etiqueta en la boquilla de la lámpara para obtener información de los vatios máximos.

INFORMACION GENERAL DEL PRODUCTO:

Este producto es adecuado sólo para lugares secos



INSTRUCCIONES DE SEGURIDAD IMPORTANTES:

Si usted es inseguro sobre qué método del montaje usted debe utilizar, satisfacer consulta calificado profesional o su ferretería local.

TIPO DE BOMBILLA (1) 75 Vatios

DIAGRAMA DE LAS PIEZAS:

- | | |
|-----------------------|-------------------------|
| (1) Placa de montaje | (3) Tuercas del cable |
| (2) Pernos de montaje | (8) Arandelas de caucho |
| (2) Pernos del dosel | (8) Arandelas de metal |

ADESSO®

353 West 39th Street - 2nd Floor
New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com