


ASSEMBLY INSTRUCTIONS FOR Derby Floor Lamp

Model # 3943-21

3943-21 1.0

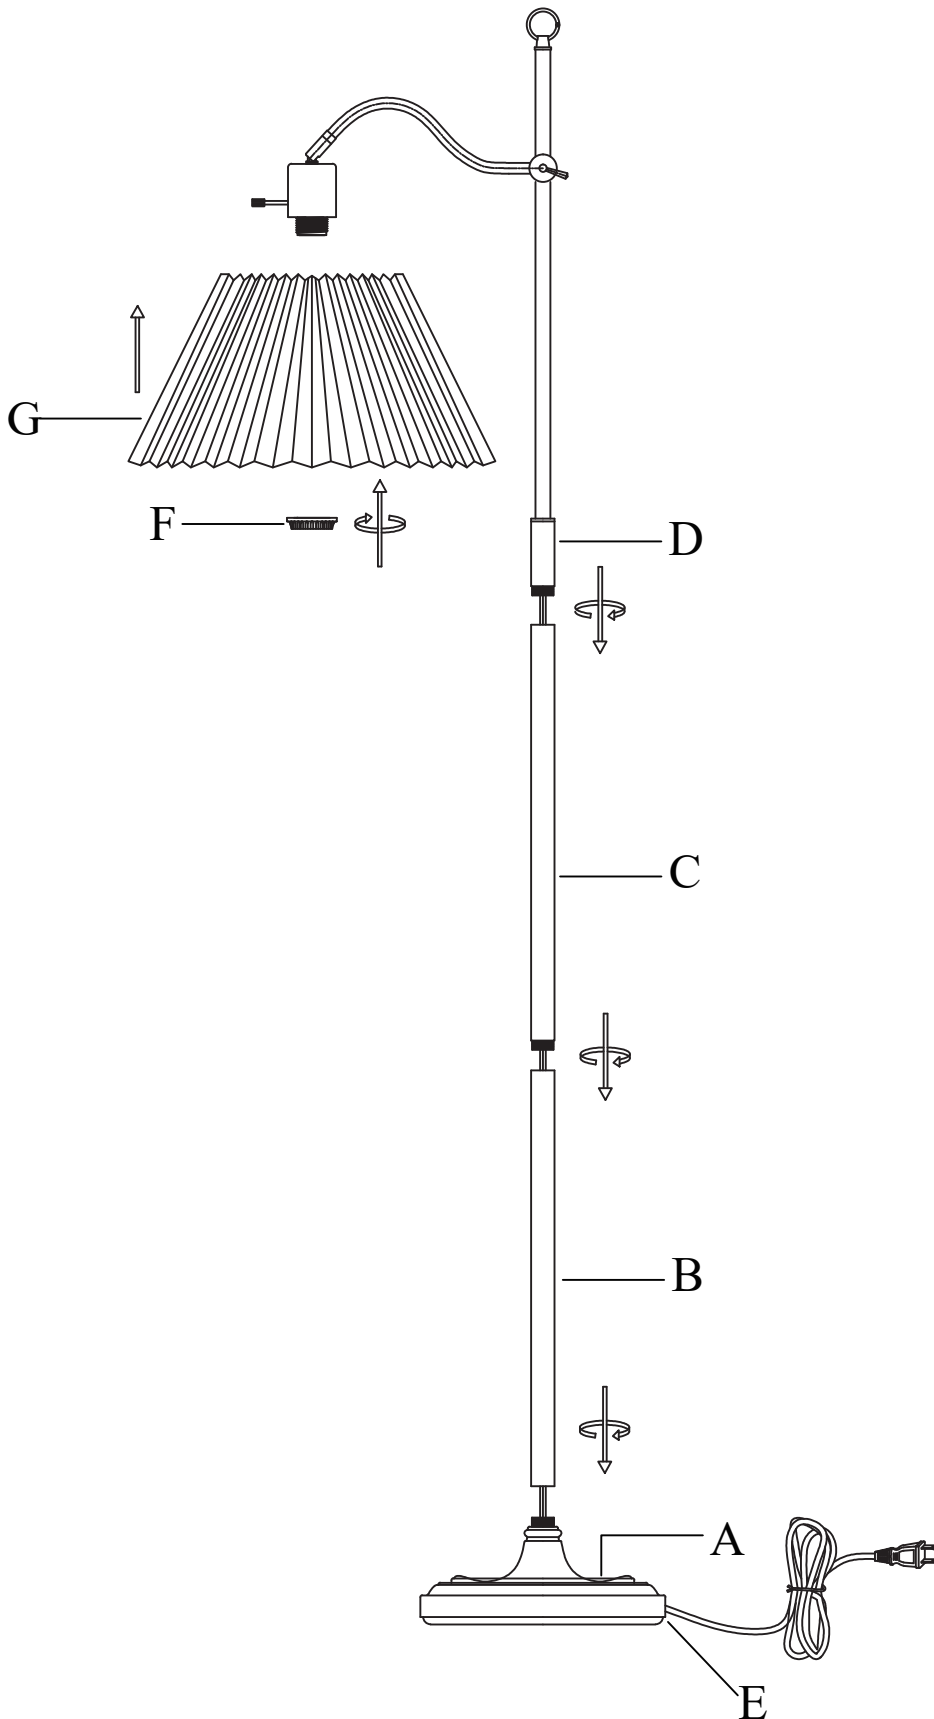

1. Remove all parts and lay on a flat surface.
2. Screw the pole(B) clockwise into the base(A) to tighten.
3. Screw the pole(C) clockwise into the pole(B) to tighten.
4. Screw part(D) clockwise into the pole(C) to tighten and get the remaining slack of the power cord out carefully from the point(E).
5. Socket ring (F) comes pre-assembled to the socket. Before assembling the shade, please unscrew this socket ring (F). Set shade (G) onto socket and tighten clockwise with socket ring (F) to secure shade.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150 watt maximum 3-way incandescent or 18 watt 3-way maximum equivalent LED bulb.(not included)