


ASSEMBLY INSTRUCTIONS FOR LYONS FLOOR LAMP

Model #6168

6168 1.0

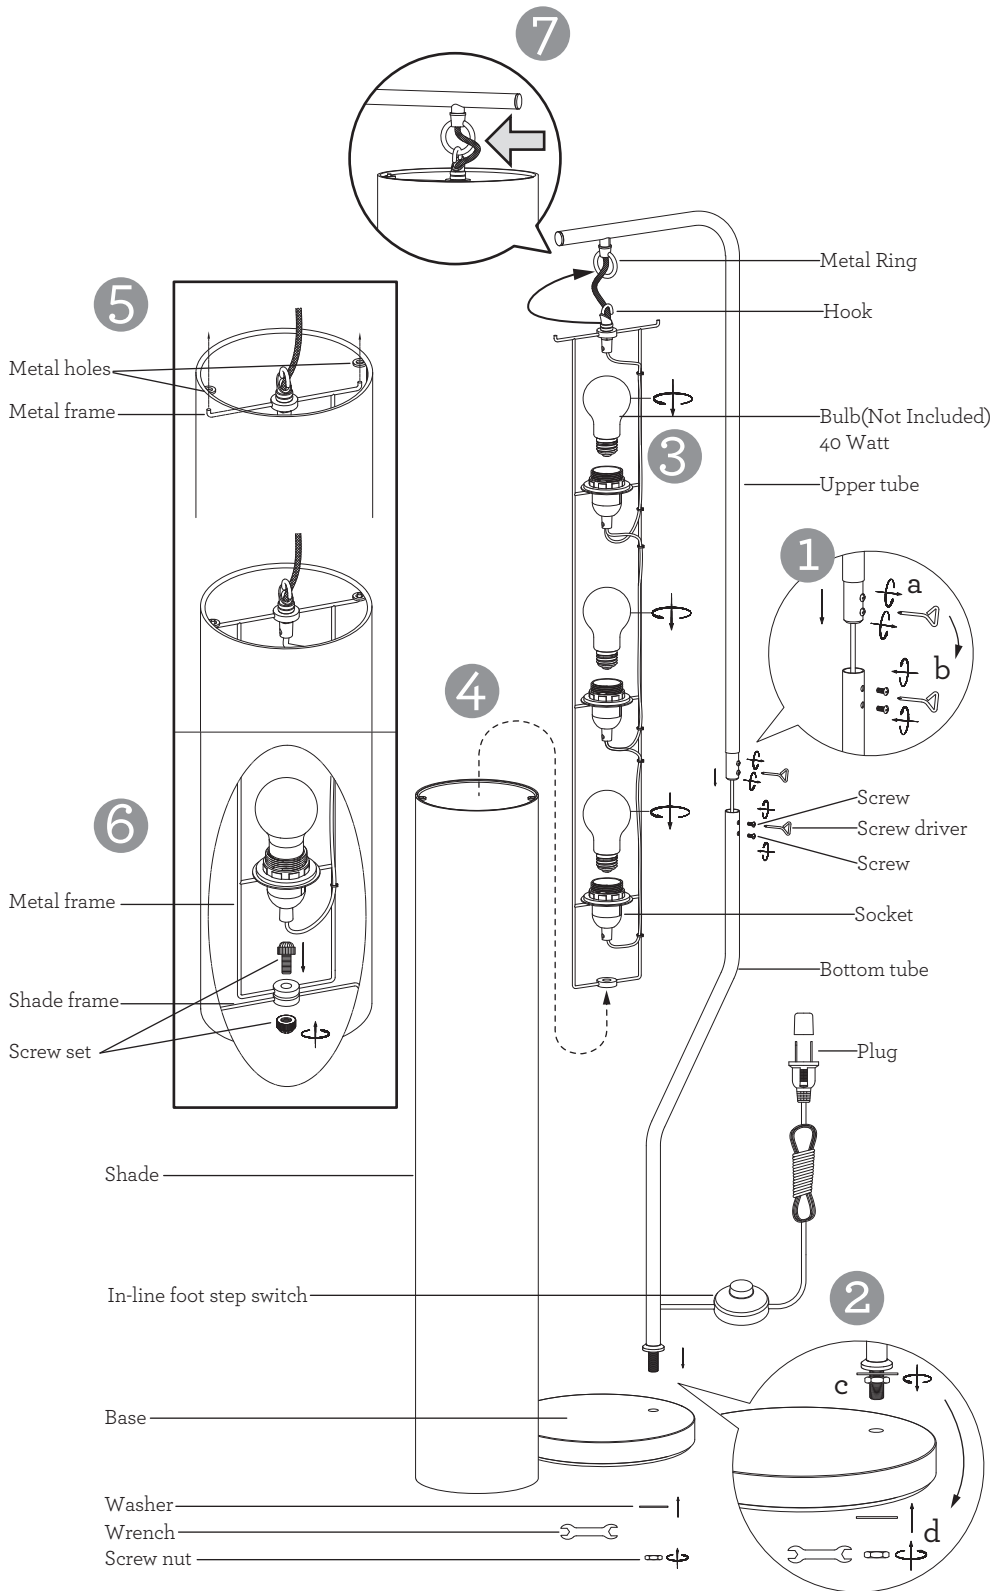

1. Install the upper tube into the bottom tube and secure it with two screws.

Note: before assembly, please unscrew two screws from upper tube first.

2. Install bottom tube into base and secure from the bottom with washer using the wrench to tighten the screw nut.

Note: before assembly, please unscrew the washer and screw nut from bottom tube.

3. Install the bulbs (Not Included) by screwing them into the sockets. Refer to the label on the lamp socket for maximum wattage information.

4. Put the metal frame into the woven paper shade.

5. Put the top of metal frame go through the two sides of metal holes on the top of shade.

6. Secure the metal frame and shade frame by screw set.

7. Insert the hook onto the metal ring for hanging the shade.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (1) 3x 40Watts

PARTS DIAGRAM:

- | | |
|------------------|---------------|
| (1) Screw set | (1) Screw nut |
| (2) Screws | (1) Washer |
| (1) Screw driver | |
| (1) Wrench | |


ADESSO®

353 West 39th Street - 2nd Floor
New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com

INSTRUCCIONES DE ENSAMBLAJE PARA LYONS LAMPARA DE PISO

Modelo #6168

6168 1.0

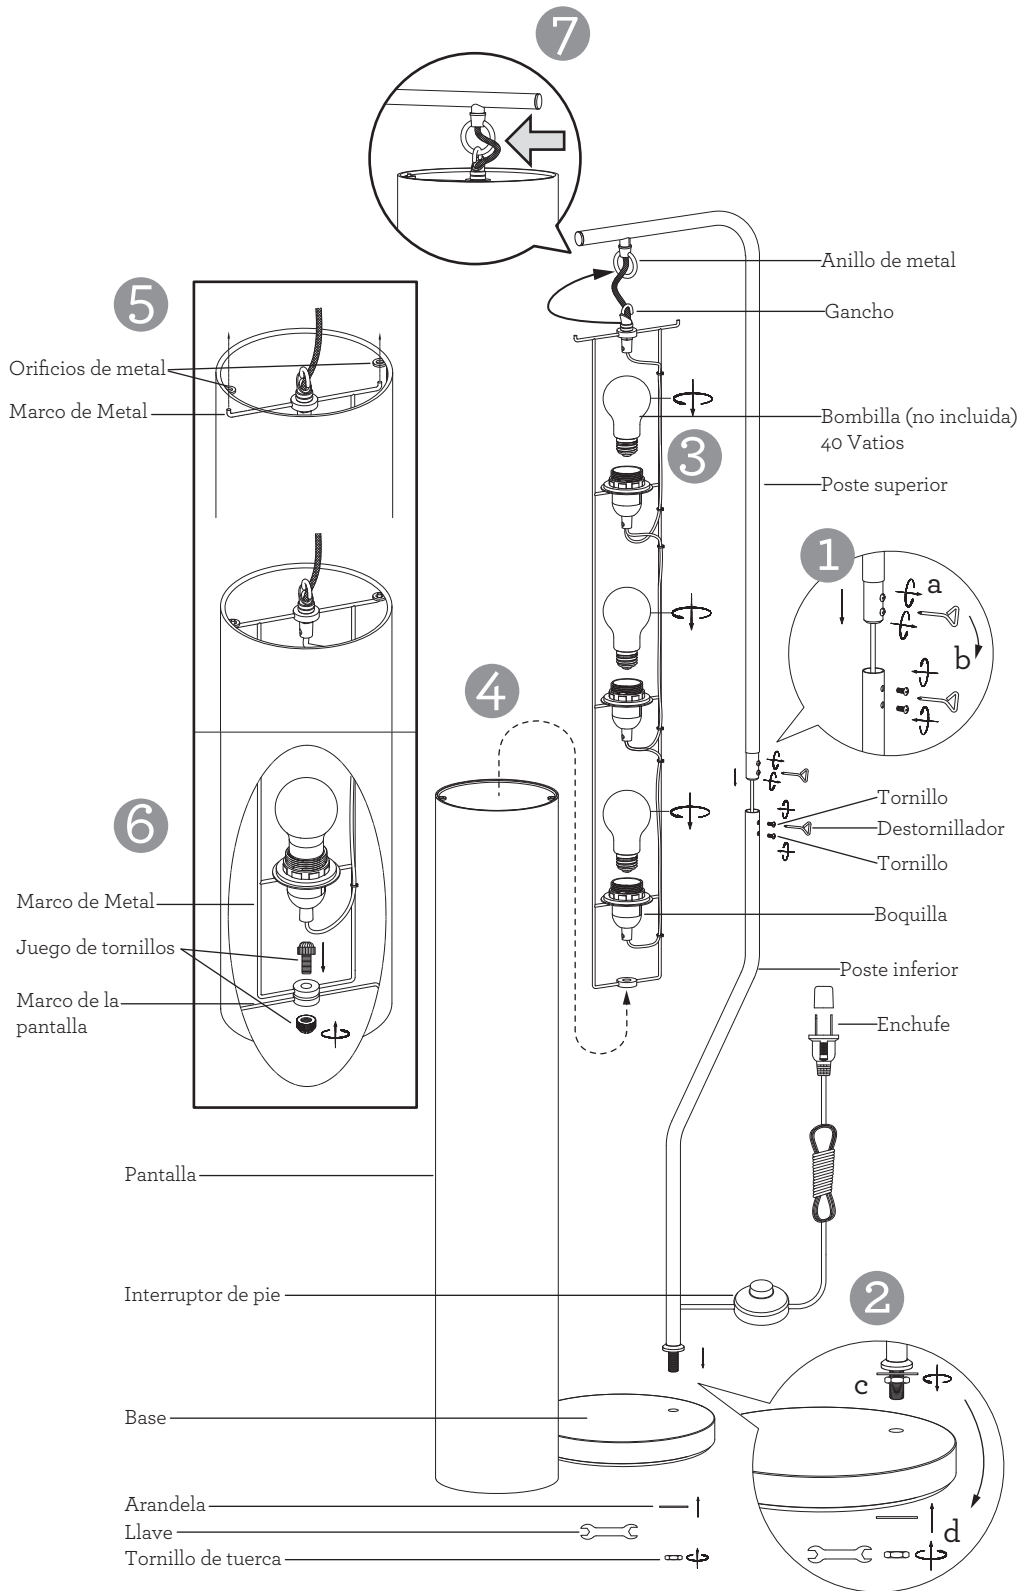

1. Coloque el tubo superior en el tubo inferior y asegúrelo con dos tornillos.

Nota: Antes del ensamblaje, primero desenrosque los dos tornillos de los tubos superiores.

2. Instale el tubo inferior en la base y asegúrelo desde la parte inferior con una arandela usando la llave para apretar la tuerca.

Nota: antes del montaje, desenrosque la arandela y las tuercas del tubo inferior.

3. Instale las bombillas (no incluidas) enroscándolas en las boquillas. Consulte la etiqueta del portalámparas para obtener información sobre los vatios máximo.

4. Coloque el marco de metal en la pantalla de papel tejido.

5. Coloque la parte superior del marco de metal a través de los dos lados de los orificios de metal en la parte superior de la pantalla.

6. Asegure el marco de metal y el marco de la pantalla con un juego de tornillos.

7. Inserte el gancho en el anillo de metal para colgar la pantalla.

INFORMACION GENERAL DEL PRODUCTO:

Este producto es adecuado sólo, para lugares secos



INSTRUCCIONES IMPORTANTES DE SEGURIDAD:

Esta lámpara portátil tiene un enchufe polarizado (una paleta es más ancha que la otra), función de seguridad que reduce el riesgo de una descarga eléctrica. Este enchufe encajará en un tomacorriente polarizado en un sólo sentido. Si el enchufe no entra completamente en el tomacorriente, invierta el enchufe. Si aún así no encaja, llame a un electricista calificado. Nunca use un cable de extensión a menos que el enchufe pueda insertarse por completo. **NO MODIFICAR EL ENCHUFE.**

TIPO DE BOMBILLA: (1) 3 x 40 Vatios

DIAGRAMA DE LAS PIEZAS:

- | | |
|------------------------|------------------------|
| (1) Juego de tornillos | (1) Tornillo de tuerca |
| (2) Tornillo | (1) Llave |
| (1) Destornillador | |
| (1) Arandela | |

ADESSO®

353 West 39th Street - 2nd Floor
New York, NY 10018
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com