


ASSEMBLY INSTRUCTIONS FOR Lawrence Tall Pedestal

Model # AR3511-01

AR3511-01 1.0

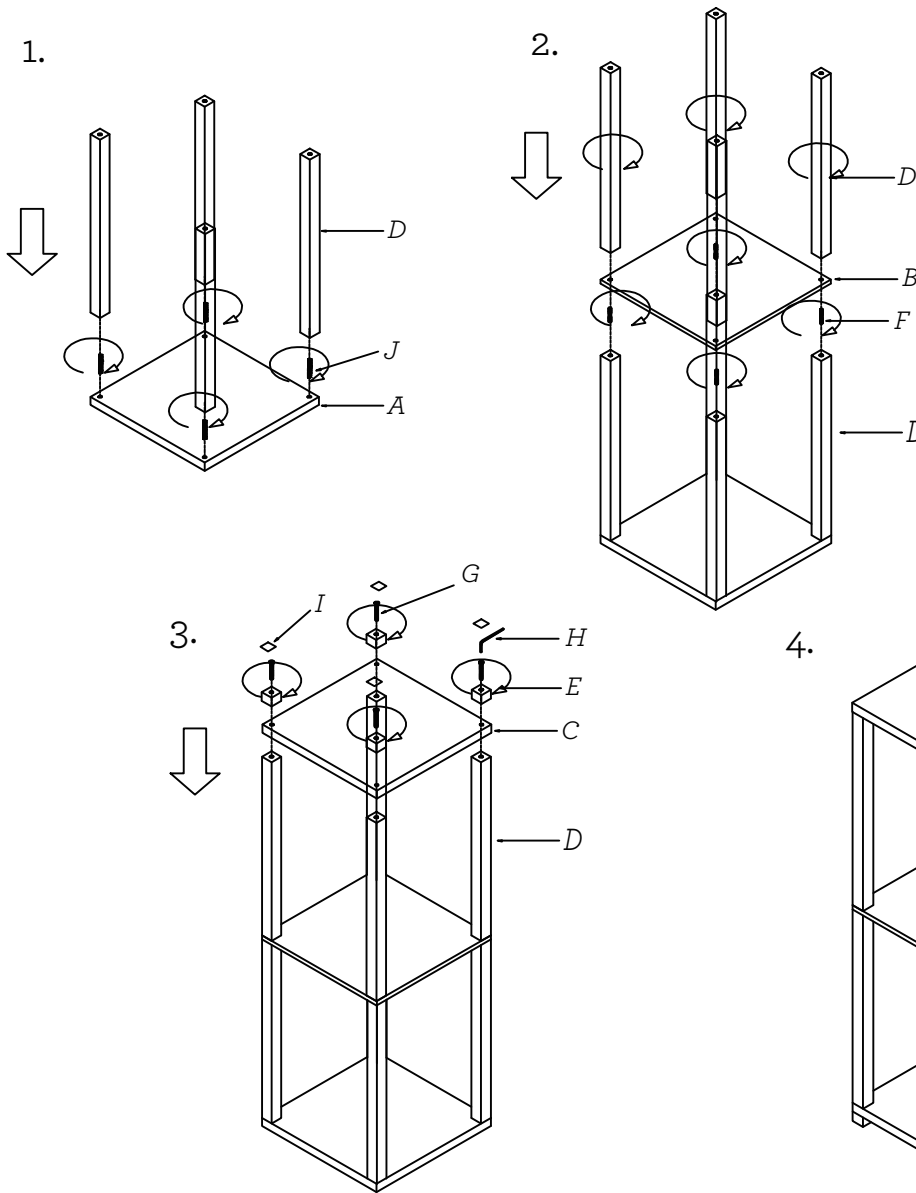

1. Fasten 4 pcs of PART(D) 1 by 1 to PART(A) by PART(J) to tighten .
2. Place PART(B) to bottom 4 pcs of PART(D), fasten with 4 pcs of PART(F) 1 by 1. Screw upper 4 pcs of PART(D) 1 by 1 clockwise to part (F).
3. Place PART(C) to upper 4 pcs of PART(D), fasten with PART(E) and PART(G). Use PART(H) to fasten PART(G). Attach PART(I) to PART(E).
4. Turn the shelf upside down. The shelf is completed.

A. Apical Board 1PCS	B. Board 1PCS	C. Bottom Board 1PCS	D. Wood Stick 8PCS	E. Shelf Foot 4PCS
F. Threaded Stem 4PCS	G. Counter Screw 4PCS	H. Wrench 1PCS	I. Felt Pad 4PCS	J. Threaded Stem 4PCS

PARTS DIAGRAM:

- (8) Threaded Stems
- (4) Felt Pads
- (4) Counter Screws