

CRYSTORAMA LIGHTING



Crystorama.com

ASSEMBLY INSTRUCTION MODEL #8109-PN

WARNING




Electrical Danger



Turn Power Off



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 8-Candelabra Bulb
60 watts Max Bulb not included
USE LED BULBS FOR EXTENDED USE
This fixture is DRY rated

How to Install

1. The mounting plate is fixed to the ceiling with screws.
2. Lock the canopy on the mounting plate and connect the wires.
3. Slide the crystal bobèche over the socket.
4. Put the shade on the candle sleeve, Install the recommended bulbs into each socket.
5. Screw the crystal ball into the bottom frame.

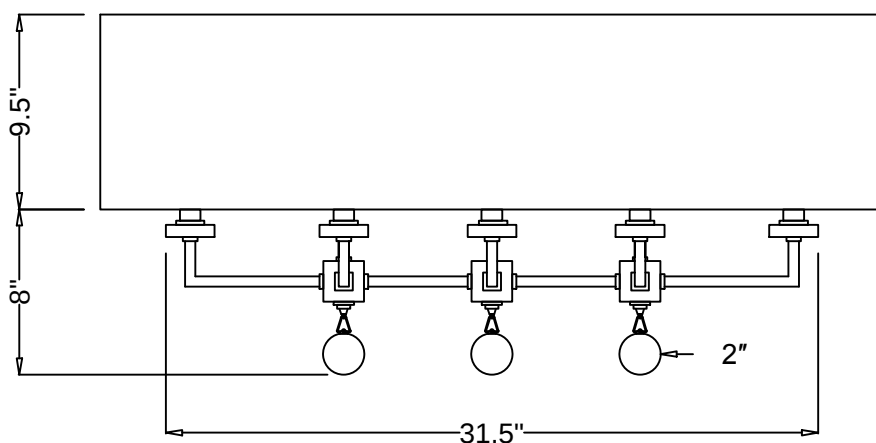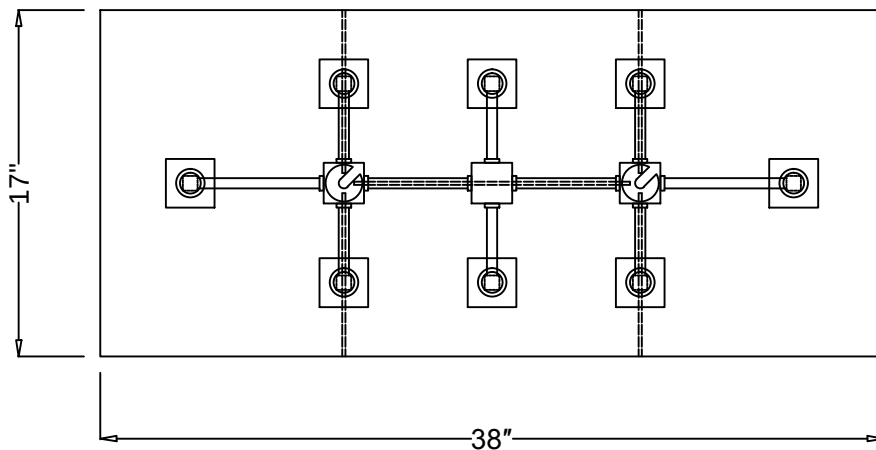

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA LIGHTING



Crystorama.com

PART NUMBER MODEL #8109-PN

Part Number

Part Numbers

- A. Mounting Hardware
(1) Mounting Plate
(3) Mounting Screws
(3) Wire Nut
(3) Wall anchor
(3) Wall anchor screws
(6) Screws
B. (1) Canopy; 21"x5"x0.75"h; XMO8109PNCAN21IN
C. (2) 3IN Rod; $\phi 0.5$ "xL3"; XMO8109PNROD3IN
D. (2) 6IN Rod; $\phi 0.5$ "xL6"; XMO8109PNROD6IN
E. (2) 12IN Rod; $\phi 0.5$ "xL12"; XMO8109PNROD12IN
F. (2) 18IN Rod; $\phi 0.5$ "xL18"; XMO8109PNROD18IN
G. (4) Knurled Nut
H. (1) Fabric Shade; 38"x16.8"x9.5"h; XMO8109SHA38IN
I. (8) Socket
J. (8) Crystal bobèche
K. (3) Crystal ball

