




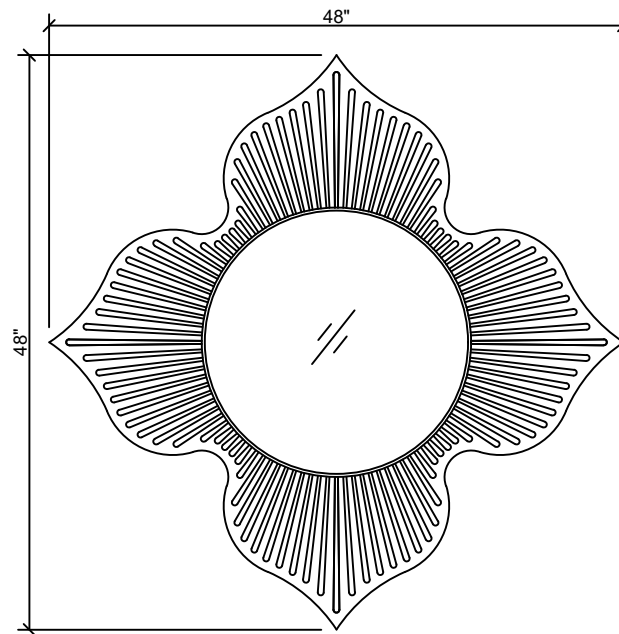

If a large gap remains between the mirror and the wall after hanging, rotate the mirror, and rehang it using the other cleat on the back of the mirror.

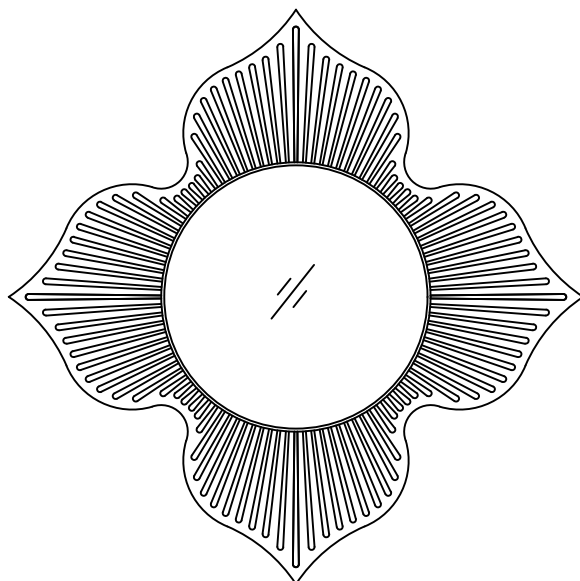

FRONT VIEW

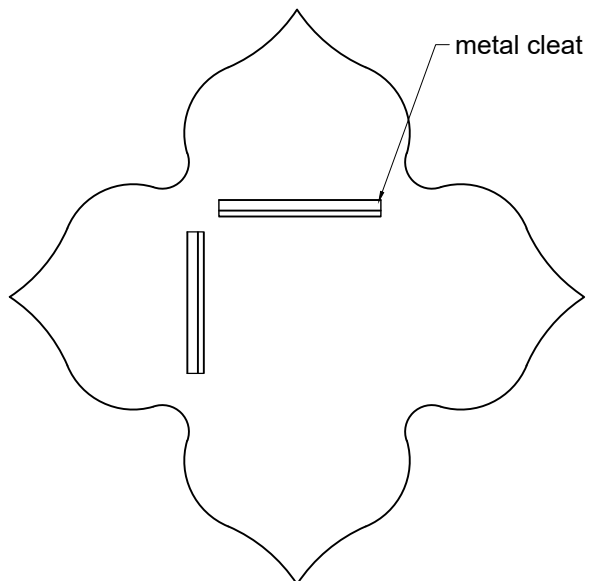

BACK VIEW

CRYSTORAMA LIGHTING

ASSEMBLY INSTRUCTION MODEL# TUL-M100-BB




INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A): Ø7.5[mm]x36[mm]x5 Wall cleat:
Screws(B): Ø4[mm]x40[mm]x5



NECESSARY TOOLS (NOT INCLUDED)



	Step 1 Place the metal cleat at the desired wall location and mark five points at the center of the hole on the metal cleat using the pencil.
	Step 2 Drill the holes at the marked points and insert the anchors into the hole.
	Step 3 Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.
	Step 4 Carefully lift from the mirror frame sides and hang onto the metal cleat