



# CRYSTORAMA LIGHTING




ASSEMBLY INSTRUCTION MODEL # COR-M710-SG

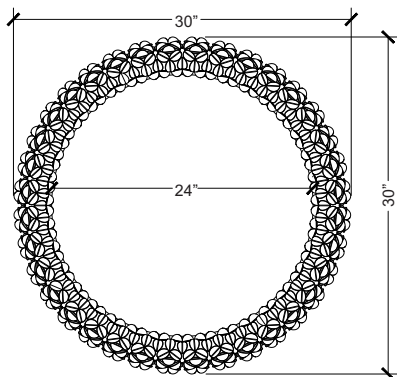

When removing the mirror from the box, please gently hold and lift from the outermost leaf ONLY.

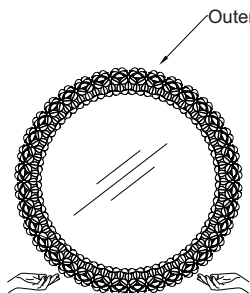

FRONT VIEW

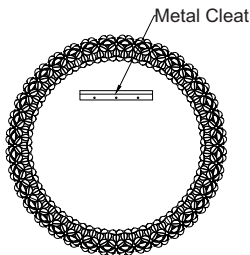

BACK VIEW

**WARNING:** This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

# CRYSTORAMA LIGHTING



ASSEMBLY INSTRUCTION MODEL # COR-M710-SG

## INSTALLATION INSTRUCTIONS

### ITEMS INCLUDED

Anchor(A):  $\varnothing 7.5[\text{mm}] \times 36[\text{mm}] \times 3$  Wall cleat: x1  
Screws(B):  $\varnothing 4[\text{mm}] \times 40[\text{mm}] \times 3$

### NECESSARY TOOLS (NOT INCLUDED)



|  |                                                                                                                                                                     |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Step 1</b></p> <p>Place the metal cleat at the desired wall location and mark three points at the center of the hole on the metal cleat using the pencil.</p> |
|  | <p><b>Step 2</b></p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>                                                              |
|  | <p><b>Step 3</b></p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>        |
|  | <p><b>Step 4</b></p> <p>Gently hold the outermost leaf of the mirror and hang it onto the metal cleat.</p>                                                          |