



CRYSTORAMA LIGHTING

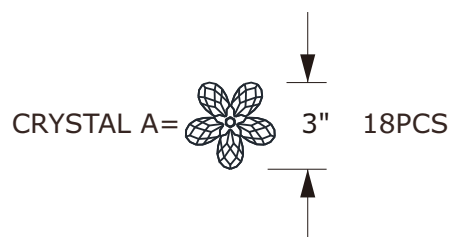

ASSEMBLY INSTRUCTION MODEL #5316-AW

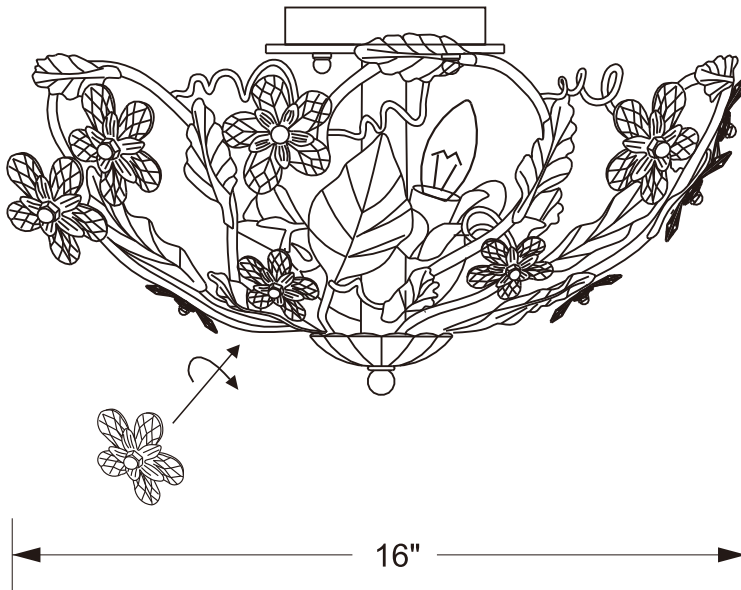

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 6 -Candelabra Base Bulb

40 Watts Recommended 60 Watts Max.

USE LED BULBS FOR EXTENDED USE

THIS FIXTURE IS DAMP RATED.

How to Install

1. Attach the crystal flowers onto the metal frame by twisting clockwise.
2. Install bulbs(not applied).
3. After safely attaching fixture into outlet box, proceed to connecting the power.


 **WARNING:** This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov.

CRYSTORAMA LIGHTING



PART NUMBER MODEL #5316-AW

Part Number

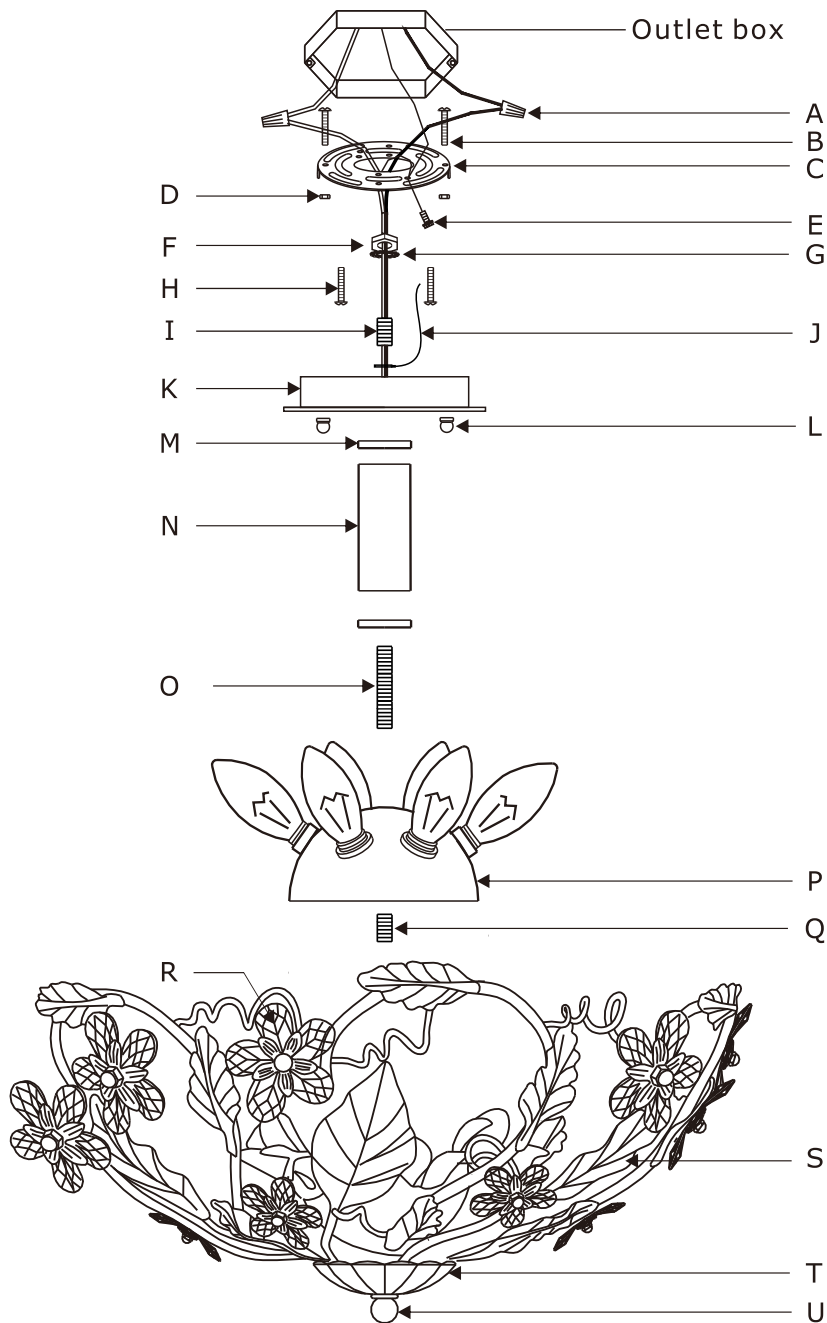

- A. (2) - Wire Connector
- B. (2) - Screw
- C. (1) - Mounting Plate
- D. (2) - Hex Nut1
- E. (1) - Ground Screw
- F. (1) - Hex Nut2
- G. (1) - Lock Washer
- H. (2) - Outlet Box Screws
- I. (1) - Threaded Pipe1
- J. (1) - Ground Wire
- K. (1) - Canopy(W4.5", H1") #XRE5316AWCAN4.5IN
- L. (2) - Ball nut
- M. (2) - Metal Flat Cover
- N. (1) - Metal Tube
- O. (1) - Threaded Pipe2
- P. (1) - Lighter Cluster
- Q. (1) - Threaded Pipe3
- R. (18) - Crystal Flower #XRE5316AWCRYA
- S. (1) - Metal Frame
- T. (1) - Bottom Cap
- U. (1) - Finial #XRE5316AWFIN