



CRYSTORAMA LIGHTING



ASSEMBLY INSTRUCTION MODEL #WIN-213-SA-CL-MWP

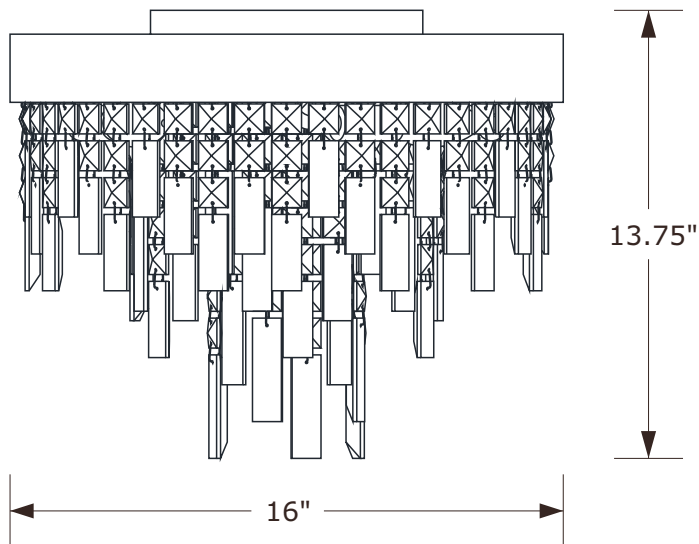

DETAILED ILLUSTRATION

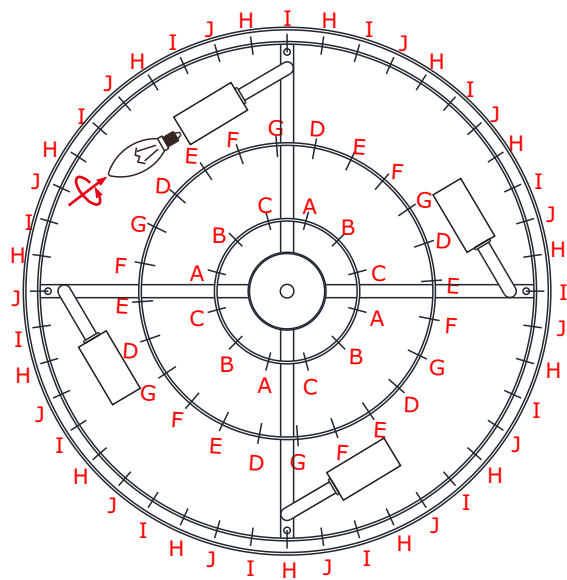


SUGGESTED CRYSTAL PLACEMENT TOP VIEW
PLEASE REFERENCE CRYSTAL KEY

A=	
B=	
C=	
D=	
E=	
F=	
G=	
H=	
I=	
J=	



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 4 -Candelabra Base Bulb

40 Watts Recommended 60 Watts Max.

USE LED BULBS FOR EXTENDED USE

THIS FIXTURE IS DAMP RATED

How to Install

- 1.Do a complete inventory of all parts and components before you start installation.
- 2.Insert recommended bulb (not included).
- 3.Raise the canopy onto the outlet box, and secure it with the ball nuts.
- 4.Dress the fixture with crystal as illustrated.


Crystal Key

- A.4 Sets.
(7)22X22mm + (1)22X76mm
- B.4 Sets.
(5)22X22mm + (1)22X76mm
- C.4 Sets.
(6)22X22mm + (1)22X76mm
- D.6 Sets.
(3)22X22mm + (1)22X76mm
- E.6 Sets.
(5)22X22mm + (1)22X56mm
- F.6 Sets.
(4)22X22mm + (1)22X56mm
- G.6 Sets.
(2)22X22mm + (1)22X76mm
- H.15 Sets.
(2)22X22mm + (1)22X56mm
- I.15 Sets.
(3)22X22mm + (1)22X56mm
- J.14 Sets.
(1)22X22mm + (1)22X56mm

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov.

PART NUMBER MODEL #WIN-213-SA-CL-MWP

Part Number

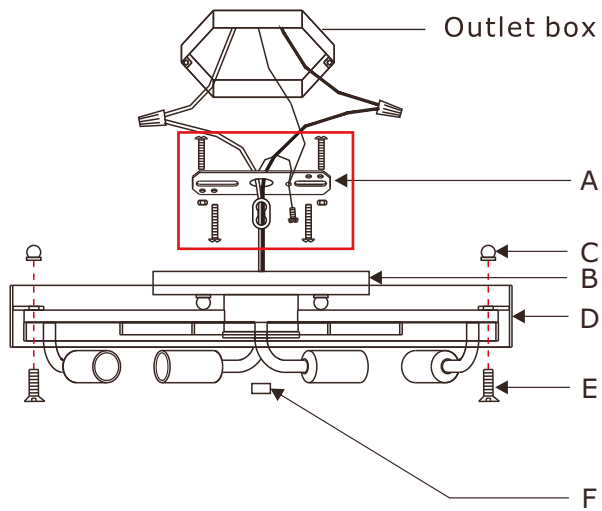

- A. (1) - Mounting Hardware
- B. (1) - Canopy(W8",H1") #XRE213SACAN8IN
- C. (6) - Ball Nut #XRE212SABANUT
- D. (1) - Metal Frame
- E. (4) - Flat Screw
- F. (1) - Finial #XRE213SAFIN