


# ASSEMBLY & INSTALLATION INSTRUCTIONS

Summit Pendant 12 Light 132047

A1031

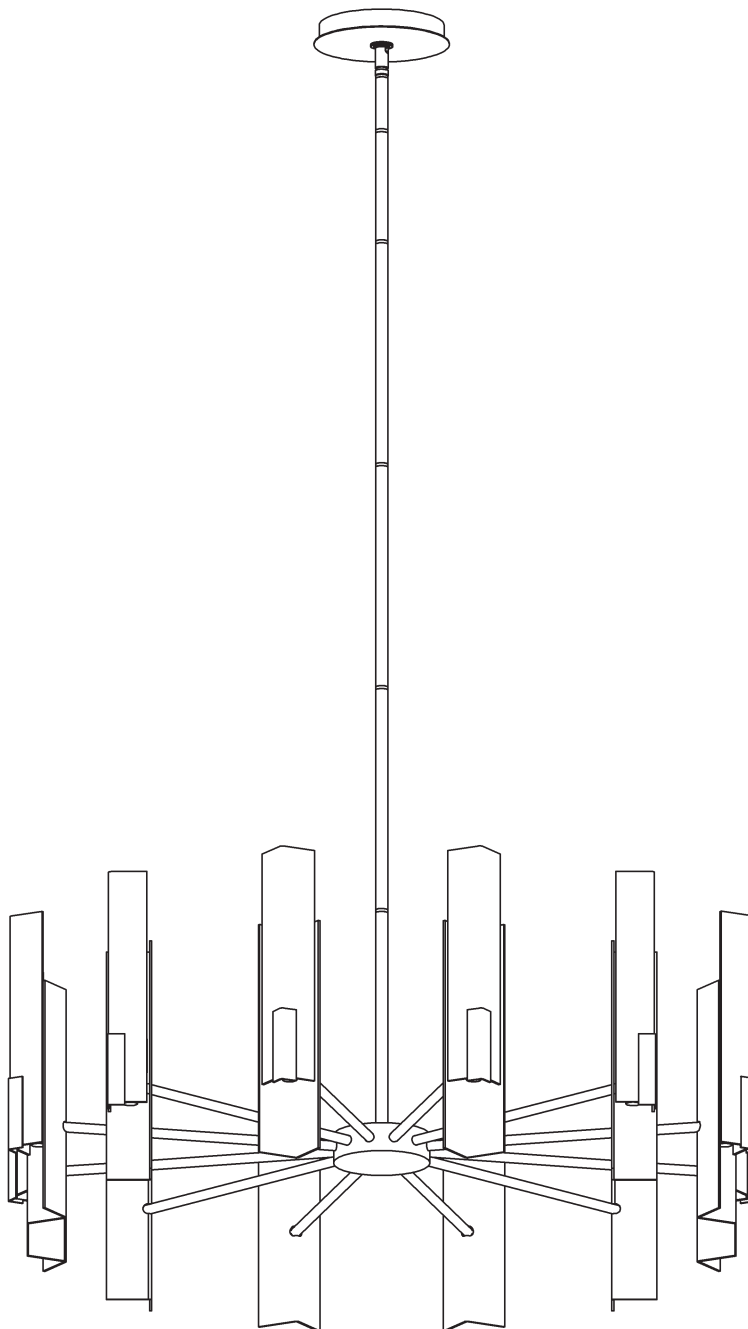

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING  
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

57487

1 OF 6

### Component Parts

|          |                                                                 |
|----------|-----------------------------------------------------------------|
| <b>A</b> | <b>Fixture</b>                                                  |
| <b>B</b> | <b>Crossbar</b>                                                 |
| <b>C</b> | <b>Jam Nut</b>                                                  |
| <b>D</b> | <b>Threaded Nipple</b>                                          |
| <b>E</b> | <b>Ground Screw</b>                                             |
| <b>F</b> | <b>Canopy Ring</b>                                              |
| <b>G</b> | <b>Canopy</b>                                                   |
| <b>H</b> | <b>Swivel</b>                                                   |
| <b>I</b> | <b>3" Fixture Pipe (1)</b>                                      |
| <b>J</b> | <b>6" Fixture Pipe (1)</b>                                      |
| <b>K</b> | <b>12" Fixture Pipe (4)</b>                                     |
| <b>L</b> | <b>Stem Couplings (5)</b>                                       |
| <b>M</b> | <b>Lag Screws (2)</b>                                           |
| <b>N</b> | <b>Glass (12)</b>                                               |
| <b>O</b> | <b>Holder (12)</b>                                              |
| <b>P</b> | <b>Screw (12)</b>                                               |
| <b>Q</b> | <b>Inner Glass (12) - Only Used w/ Clear Outer Glass Option</b> |
| <b>R</b> | <b>O-rings (24) - Only Used w/ Clear Outer Glass Option</b>     |
| <b>S</b> | <b>Socket (12)</b>                                              |
| <b>T</b> | <b>Bulb (12) - Not Included</b>                                 |
| <b>U</b> | <b>Cap (12)</b>                                                 |
| <b>V</b> | <b>Nipple (12)</b>                                              |



# ASSEMBLY & INSTALLATION INSTRUCTIONS

A1031

## Summit Pendant 12 Light 132047

**CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE.** We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

### To Install Fixture (Figure 1) on following page

**CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.**

1. Carefully unpack fixture (A) from the carton.
2. Thread jam nut (C) and crossbar (B) onto threaded nipple (D) with ground screw (E) facing towards swivel (H); leave both parts loose.
3. Using two machine screws (not provided), temporarily fasten crossbar (B) to the electric box.

**NOTE: A NEW ELECTRIC BOX COMES WITH SCREWS. WHEN REPLACING A FIXTURE, RETAIN THE EXISTING SCREWS FOR USE WITH THE NEW FIXTURE.**

4. Adjust the length of threaded nipple (D) in crossbar (B) so that canopy ring (F) will hold canopy (G) against the ceiling with no threads showing for best appearance. When the correct adjustment is established, tighten jam nut (C) against crossbar (B) to secure the adjustment.
5. Remove crossbar (B) from the electrical box and proceed with the assembly instructions.
6. Locate fixture pipes (I, J, K), fixture (A), stem couplings (L) . Stem couplings (L) can be found in the kit bag.
7. Slip wires from fixture through (1) 12" fixture pipe (K) and thread onto fixture. Pipe needs to be installed to allow enough room for glass install.
8. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components. Wires will slip easier through loose components than through pipes and couplings that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and couplings.

|                     |          | Overall Height of Fixture |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
|---------------------|----------|---------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
|                     |          | 19.4                      | 22.4 | 25.4 | 28.4 | 31.4 | 34.4 | 37.4 | 40.4 | 43.4 | 46.4 | 49.4 | 52.4 | 55.4 | 58.4 | 61.4 | 64.4 |
| # of Pipes Required | 3" Pipe  |                           | 1    |      | 1    |      | 1    |      | 1    |      | 1    |      | 1    |      | 1    |      | 1    |
|                     | 6" Pipe  |                           |      | 1    | 1    |      |      | 1    | 1    |      |      | 1    | 1    |      |      | 1    | 1    |
|                     | 12" Pipe |                           |      |      |      | 1    | 1    | 1    | 1    | 2    | 2    | 2    | 2    | 3    | 3    | 3    | 3    |

**NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.**

9. Carefully slide canopy ring (F) and canopy (G) over wires and fixture pipes (I, J, K) until they rest on fixture (A).
10. Slip wires from the fixture (A) through assembled swivel (H) and threaded nipple (D).
11. Refer to instructions on next page to continue installation.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING  
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

57487

3 OF 6

# ASSEMBLY & INSTALLATION INSTRUCTIONS

A1031

## Summit Pendant 12 Light 132047

12. Using two machine screws (not provided), fasten crossbar (B) to the electric box.
13. Using lag screws (M), attach crossbar (B) to a structural member in the ceiling.

**Note:** Lag screws are supplied with your fixture; however, different materials and/or construction methods may require different fasteners. If in doubt, contact a qualified electrician.

**CAUTION:** DO NOT RELY ON ELECTRIC BOX ALONE TO SUSPEND FIXTURE. FIXTURE MUST BE ATTACHED TO A STRUCTURAL MEMBER IN THE CEILING.

**CAUTION:** INSTALLER MUST ENSURE THAT THE MOUNTING METHOD IS CAPABLE OF SUPPORTING THE WEIGHT OF THE FIXTURE.


14. Using suitable wire connectors (not provided) connect fixture wires to supply (white/ribbed to white and black/smooth to black). Attach a pigtail lead to crossbar ground screw (E). Hold canopy (G) close, connect all ground wires (bare copper or green to bare copper or green) together.

**CAUTION:** MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

15. Slide canopy (G) against ceiling, and secure with canopy ring (F).

**CAUTION:** BE SURE NO WIRES ARE PINCHED BETWEEN CANOPY (G) AND THE CEILING.

16. Refer to instructions on following pages to complete install.

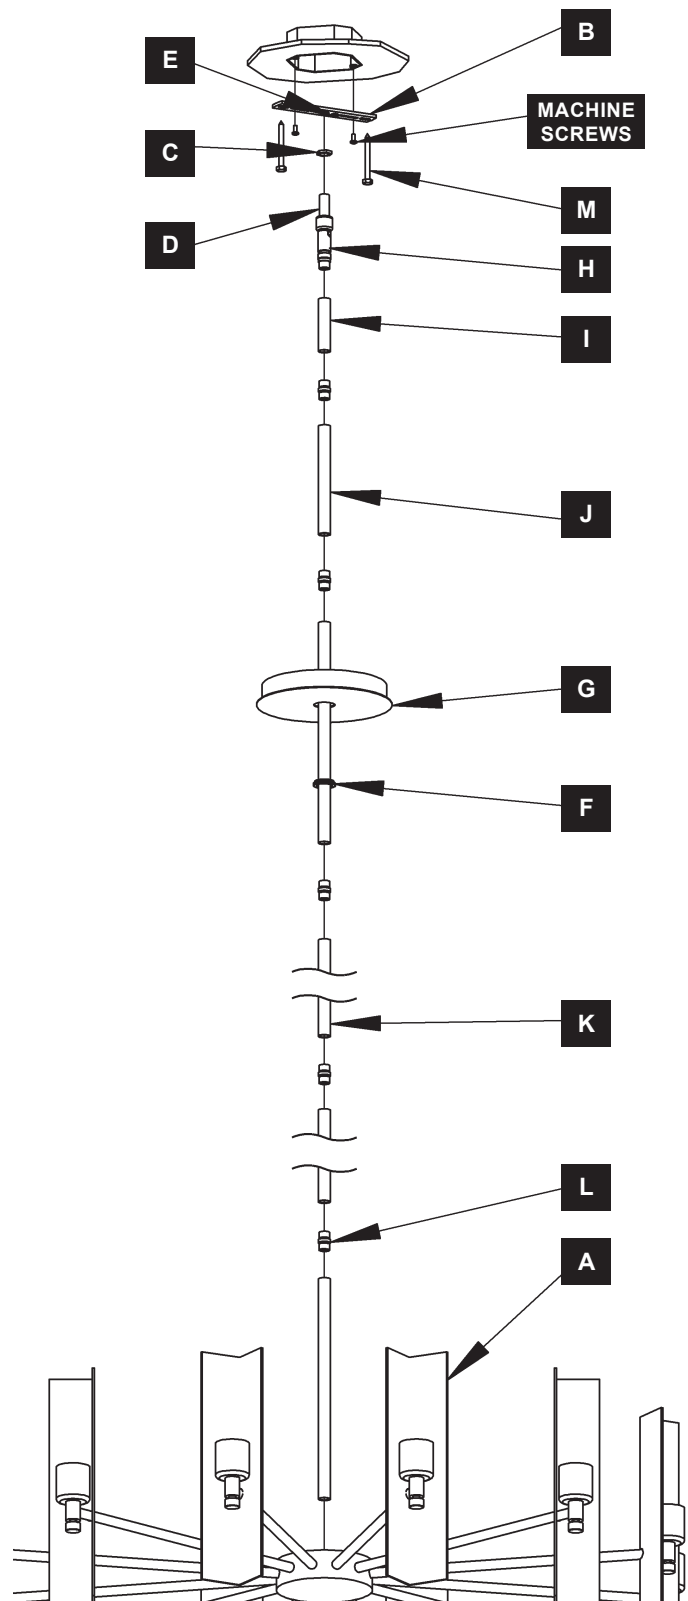

(Figure 1)



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING  
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM


57487

4 OF 6

## Summit Pendant 12 Light 132047

### To Assemble Glass *(Figure 2)*

1. Carefully unpack glass (N).
2. Locate front bent plates found in kit bag.
3. Loosen screw (P). It is not necessary to completely remove it.
4. Slide glass (N) in between front bent plate and holder (O).
5. Position glass (N), press holder (O) up against glass (N) and tighten screw (P) to secure.
6. Repeat steps for remaining glass (N).
7. Follow steps on next page to complete installation.

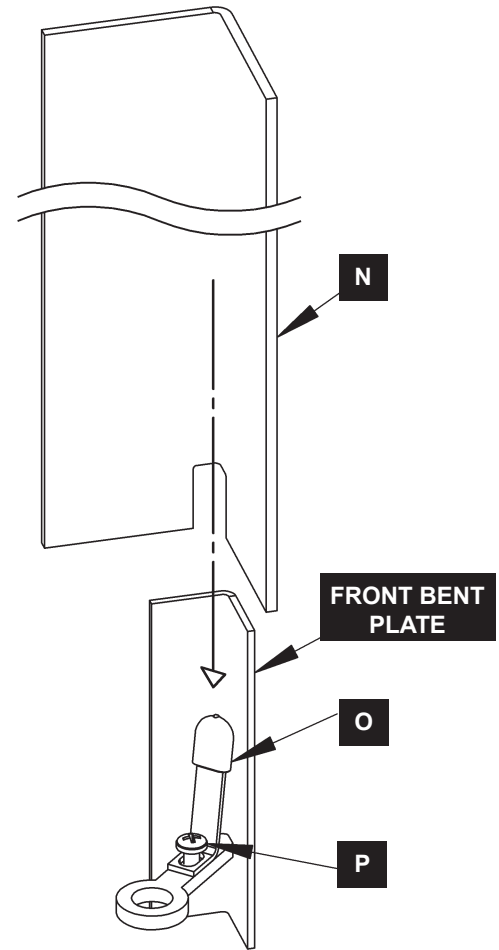

*(Figure 2)*



# ASSEMBLY & INSTALLATION INSTRUCTIONS

A1031


Summit Pendant 12 Light 132047

## To Complete Install (Figure 3)

1. Install bulbs (T), not included, into sockets (S) .
2. If using clear glass (N), follow next steps. If using frosted glass (N), skip to step 7.
3. Carefully unpack inner glass (Q).
4. If needed, slip o-rings (R) onto end of inner glass (Q).

NOTE: O-rings are optional. Either use one, two, or none depending on what's needed to help with gaps. Be sure o-rings slide into cup. It may be necessary to rotate glass or push on O-rings to allow them to slide into cup evenly.

5. Slip over bulb (T) and slide into cup.
6. Repeat for remaining inner glass (Q).
7. Place glass (N) assembly over nipple in coupling. Thread cap (U) onto nipple and tighten to secure glass assembly.
8. Repeat for remaining glass (N) assemblies.
9. Restore electricity at main breaker.

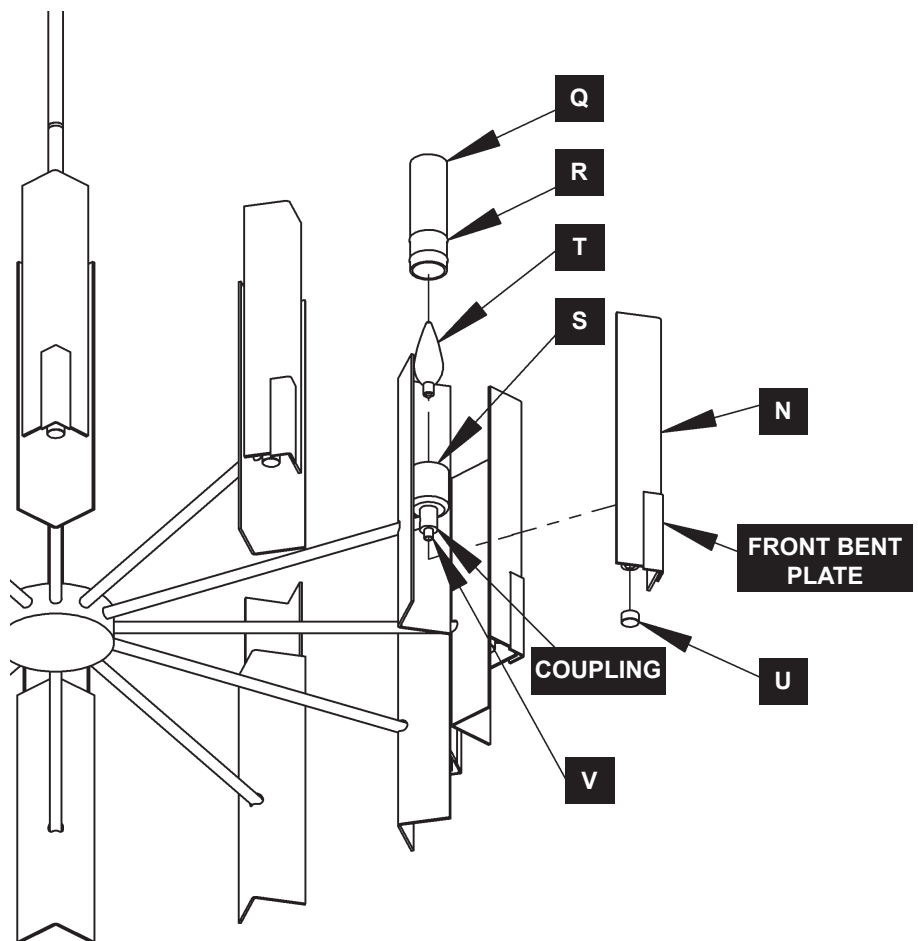

(Figure 3)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product.  
We hope you enjoy your fixture!

*\* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING  
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

57487

6 OF 6