


ASSEMBLY & INSTALLATION INSTRUCTIONS

A990

Passage 3 Light Pendant 131055

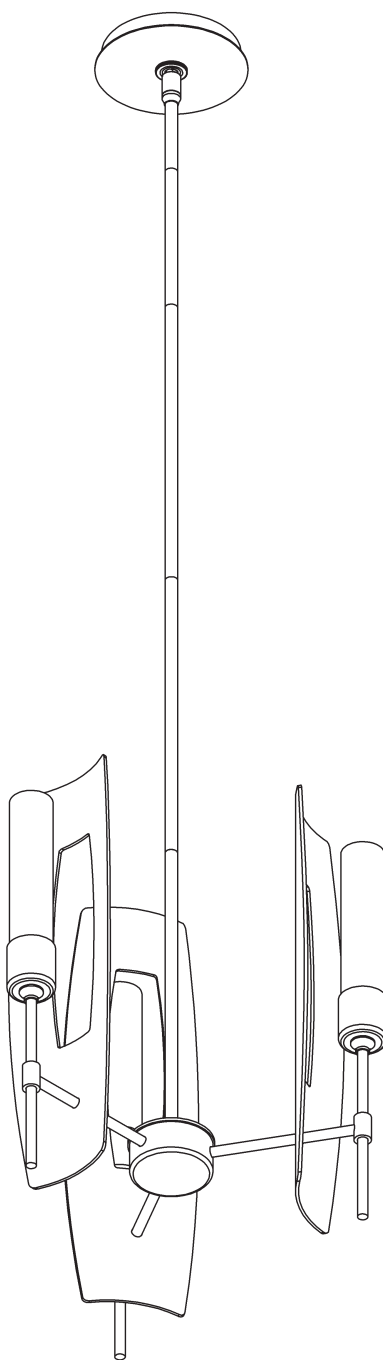

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

55916

1 OF 5

Component Parts

- A Fixture**
- B Crossbar**
- C Jam Nut**
- D Canopy Coupling**
- E Threaded Nipple**
- F Ground Screw**
- G Canopy Ring**
- H Canopy**
- I 3" Fixture Pipe (1)**
- J 6" Fixture Pipe (1)**
- K 12" Fixture Pipe (4)**
- L Stem Nipples (7)**
- M Swivel**
- N Socket (3)**
- O Bulb (not included)**
- P Glass (3)**
- Q O-Ring (6)**
- R Socket Cup (3)**



ASSEMBLY & INSTALLATION INSTRUCTIONS

A990

Passage 3 Light Pendant 131055

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Install Fixture (Figure 1) on following page

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture (A) from the carton.
2. Jam nut (C), canopy coupling (D), threaded nipple (E), canopy ring (G), one stem nipple (L), and swivel (M) are already assembled. Thread the assembly into crossbar (B) with ground screw (F) facing towards canopy coupling (D); leave both parts loose.
3. Using two machine screws (not provided), temporarily fasten crossbar (B) to the electric box.

NOTE: A NEW ELECTRIC BOX COMES WITH SCREWS. WHEN REPLACING A FIXTURE, RETAIN THE EXISTING SCREWS FOR USE WITH THE NEW FIXTURE.

4. Remove canopy ring (G) from canopy coupling (D) and slide canopy (H) into the assembly, thread canopy ring (G) back onto canopy coupling (D), then adjust the length of threaded nipple (E) in crossbar (B) so that canopy ring (G) can hold canopy (H) against the ceiling with no threads showing for best appearance. When the correct adjustment is established, tighten jam nut (C) against crossbar (B) to secure the adjustment.
5. Remove crossbar (B) from the electrical box and canopy ring (G) from canopy coupling (D) and proceed with the assembly instructions.
6. Locate fixture pipes (I, J, K), fixture (A), stem nipples (L). Stem nipples (L) can be found in the kit bag.
7. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components. Wires will slip easier through loose components than through pipes and nipples that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and couplings.

		Overall Height of Fixture											
# of Pipes Required	3" Pipe (I)	1		1		1		1		1		1	
	6" Pipe (J)		1	1			1	1		1	1		1
	12" Pipe (K)				1	1	1	1	2	2	2	2	3

NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

8. Carefully slide canopy ring (G) and canopy (H) over wires and fixture pipes (I, J, K) until they rest on fixture (A).
9. Slip wires from fixture (A) through the crossbar assembly and thread onto fixture pipe.
10. Using two machine screws (not provided), fasten crossbar (B) to the electric box. (Figure 1)



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

55916

3 OF 5

ASSEMBLY & INSTALLATION INSTRUCTIONS

A990

Passage 3 Light Pendant 131055


- Using suitable wire connectors (not provided) connect fixture wires to supply (white/ribbed to white and black/smooth to black). Attach a pigtail lead to crossbar ground screw (F). Hold canopy (H) close, connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

- Slide canopy (H) against ceiling, and secure with canopy ring (G).

CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN CANOPY (H) AND THE CEILING.

- Refer to instructions on next page to install glass.

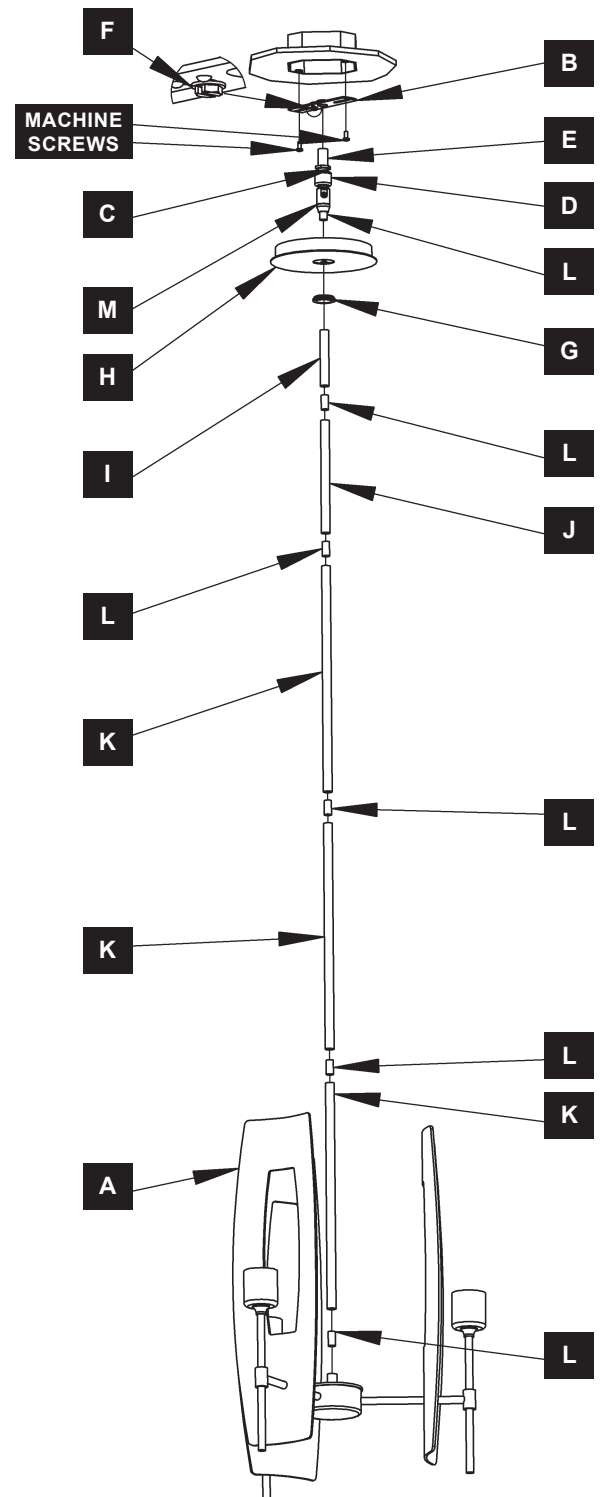

(Figure 1)



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

To Install Glass (Figure 2)


1. Unpack glass (P) and locate o-rings (Q), found in kit bag.
2. Stretch o-ring (Q) over one end of glass (P). Leave just slightly up from bottom of glass.
3. Install T type bulb (O) (not included) into socket (N) .
4. Place glass (P) over T type bulb (O).

NOTE: All glass tolerance is designed for the recommended T type bulb. If a piece does not fit, verify correct bulb type and size is being used.

5. Slide glass (P) and o-ring (Q) into socket cup (R) until it hits bottom of cup.

NOTE: O-rings are optional, and can either use one, two, or none depending on what's needed to help with gaps. Be sure O-rings slide into cup. It may be necessary to rotate glass or push on O-rings to allow them to slide into cup evenly.

6. Repeat steps for remaining sockets (N) and glass (P).
7. Restore electricity at main breaker.

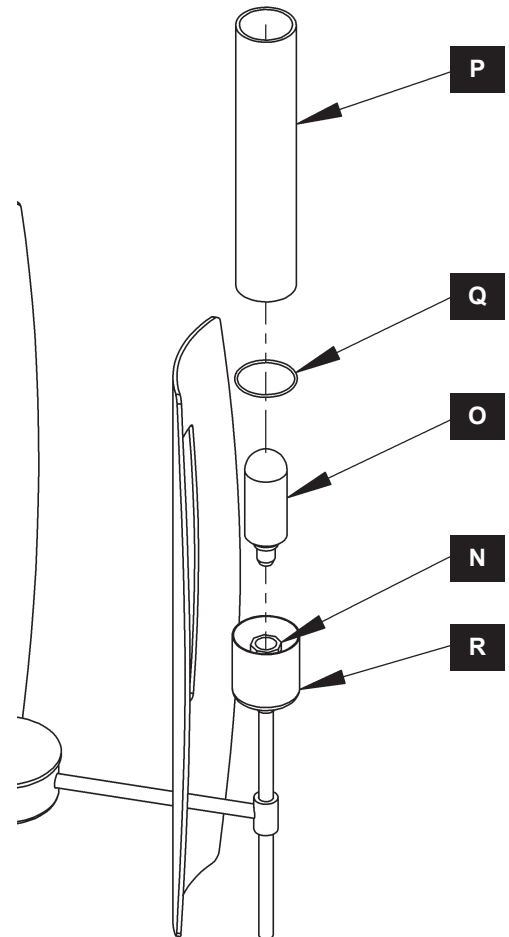

(Figure 2)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*