


ASSEMBLY & INSTALLATION INSTRUCTIONS

B339

Twine Sconce 205401

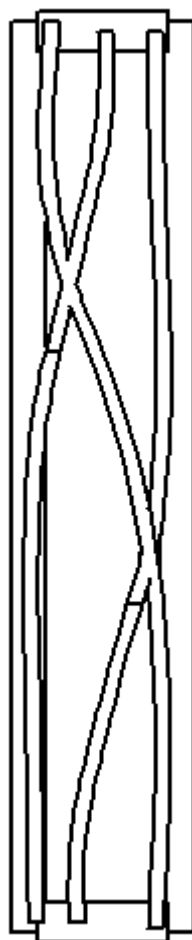

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

32648

1 OF 6

Component Parts

- A Decorative Front
- B Fixture Body
- C Wall Mount Bracket
- D #8 Black Pan Head Screws (4)
- E Anchors (2)
- F #10 Screws (2)
- G Green Ground Screw
- H Cupped Washers
- I Bulb (not included)
- J Glass
- K Thumb Screws (2)
- L #8 Pan Head Screws w/lock washers (2)

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: This fixture is designed to be mounted on a standard wall surface and may not be suitable for all applications. If installing in a non-wood frame application, we recommend consulting a qualified builder or electrician

To Prepare Fixture *(Figure 1, on next page)*

1. Carefully unpack the fixture from the carton.
2. Remove black pan head screws (D) from Fixture Body (B) and remove decorative front (A). Set aside for later use.
3. Remove pan head screws w/lock washer (L) from fixture body (B) and remove wall mount bracket (C). Set aside for later use.

To Mount Fixture to Wall *(Figures 2 & 3, on next page)*

1. Center the wall mount bracket (C) over the electrical box being sure to hold it plumb and level. With a pencil, mark the location of all mounting holes in the wall mount bracket on the wall behind.

IMPORTANT: Wall mount bracket must be secured to a solidly mounted electrical box and/or a framing member in at least two locations. Do not depend on drywall anchors alone to support this fixture. If in doubt, contact a qualified electrician.

Put the wall mount bracket down and drill 1/4" holes in the locations marked on the wall. For holes using anchors, place the tapered end of the anchors (E) into the holes and gently tap them flush to the wall using a light weight hammer. *(Figure 2)*

2. Thread the wires in the electrical box through the center hole in the wall mount bracket (C) while moving the bracket into position. Attach wall mount bracket (C) to electrical box using two machine screws (not provided). *(Figure 2)*
3. Using the #10 screws (F), screw the bracket securely to the wall. Be careful not to over-tighten or strip the anchors (E).
4. Hold the fixture body (B) close to the wall mount bracket (C) and using suitable wire connectors (not provided), connect fixture wires to supply wires (white to white and black to black). Ground the mounting bracket (C) using the green ground screw (G) and cupped washer (H) to secure a pigtail lead to the bracket and connect all ground wires (bare copper or green to bare copper or green).




CAUTION: INSTALLER MUST ENSURE THAT THE MOUNTING METHOD IS CAPABLE OF SUPPORTING THE WEIGHT OF THE FIXTURE.

5. Carefully tuck all wires inside the junction box. Place the fixture (B) firmly onto bracket (C) and fasten with (2) #8 pan head screw w/lock washer (L) *(Figure 3)*.

ASSEMBLY & INSTALLATION INSTRUCTIONS

B339


Twine Sconce 205401

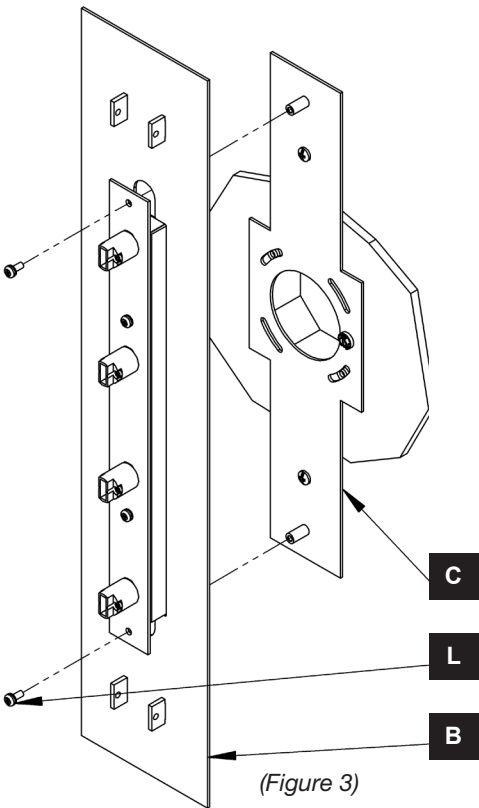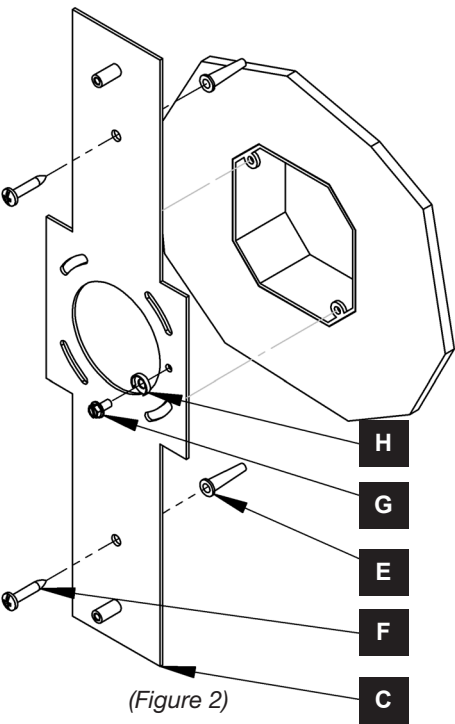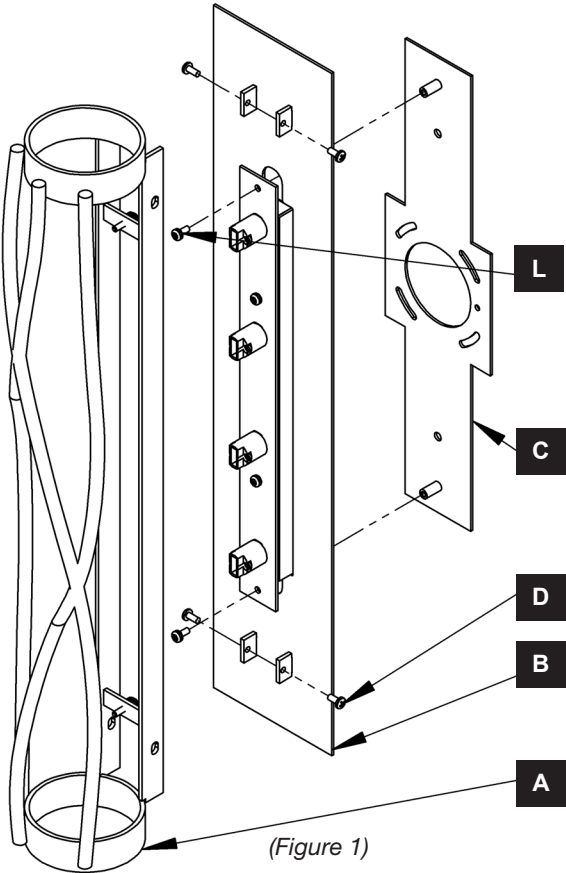

Twine Sconce 205401

To Install Glass & Decorative Front (Figures 4 & 5, Figure 5 on next page)

1. Install bulbs (I), (not included). *Be careful not to touch bulb with bare hands; oil from the hands will dramatically reduce bulb life.*
2. Thumb screws (K) that hold glass (J) are shipped installed. Unthread thumb screws (K) so glass (J) can pass by in next step. *It is not necessary to completely remove thumb screws (K).*
3. Slide glass tube (J) into decorative front (A). Secure glass to decorative front using thumb screws (K) (Figure 4).
4. Slide decorative front and glass (A & J) over bulbs (I). (Figure 5)
5. Secure decorative front (A) to fixture body (B) using #8 black screws (D).
6. Restore electricity at main breaker.

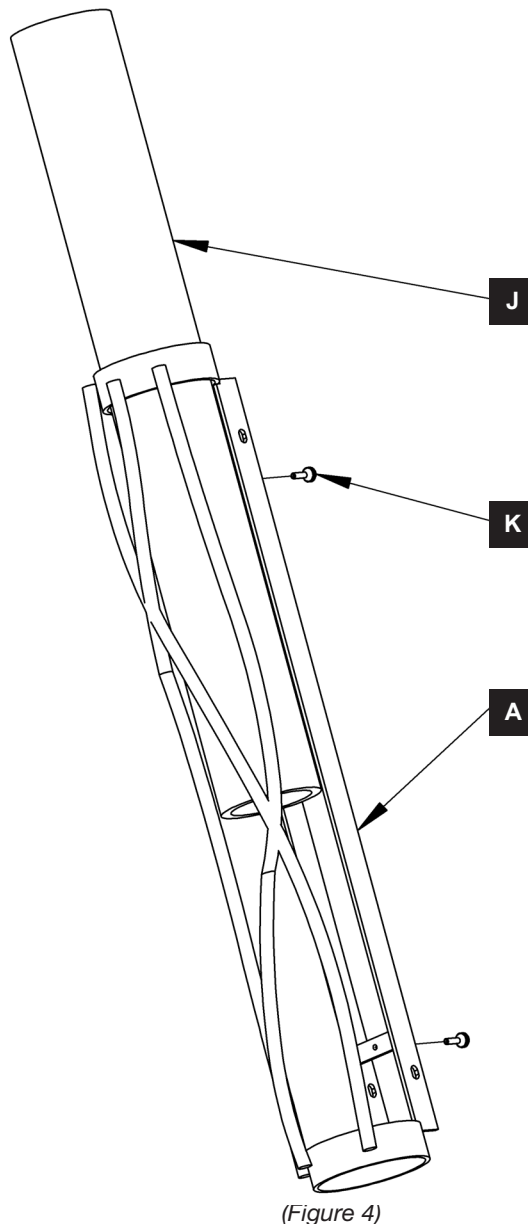


HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

ASSEMBLY & INSTALLATION INSTRUCTIONS

B339

Twine Sconce 205401

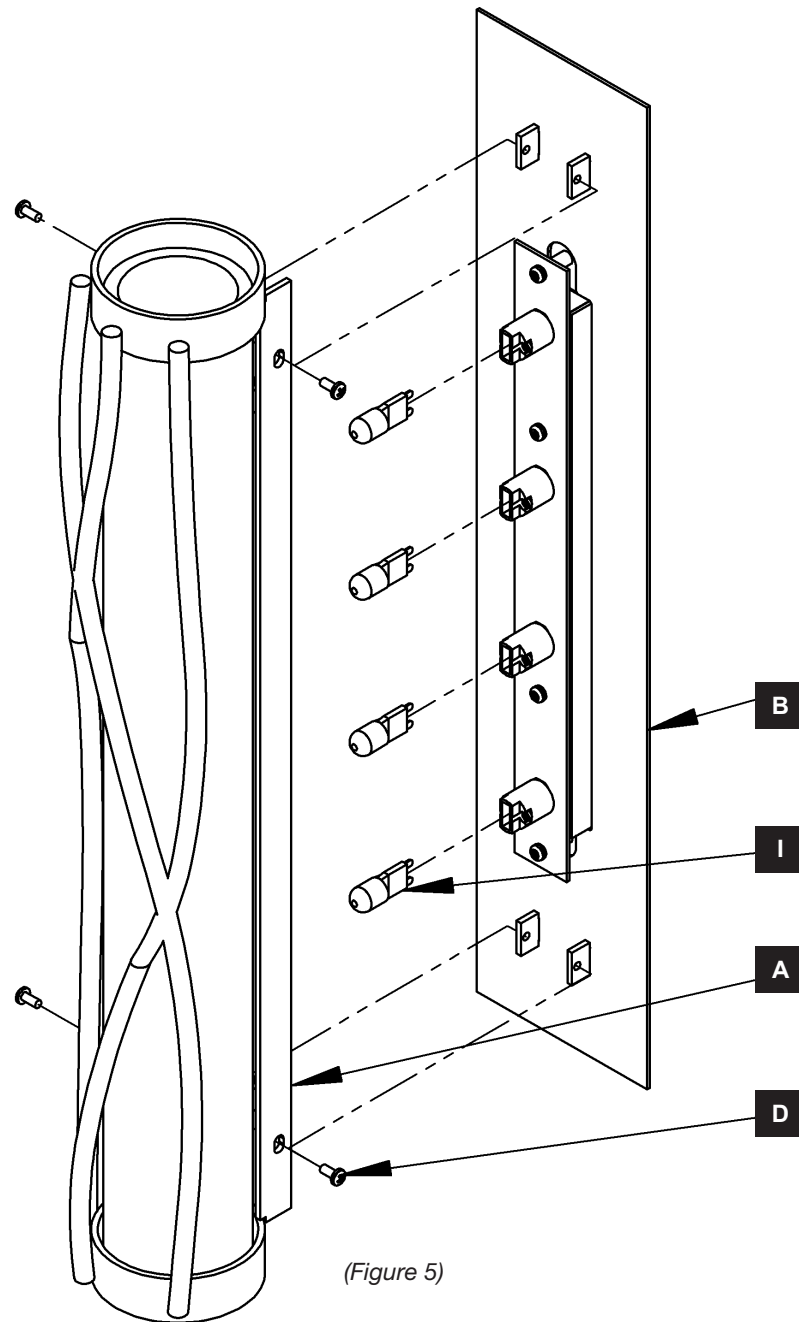

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**