


ASSEMBLY & INSTALLATION INSTRUCTIONS

A368

Flora Chandelier 103049

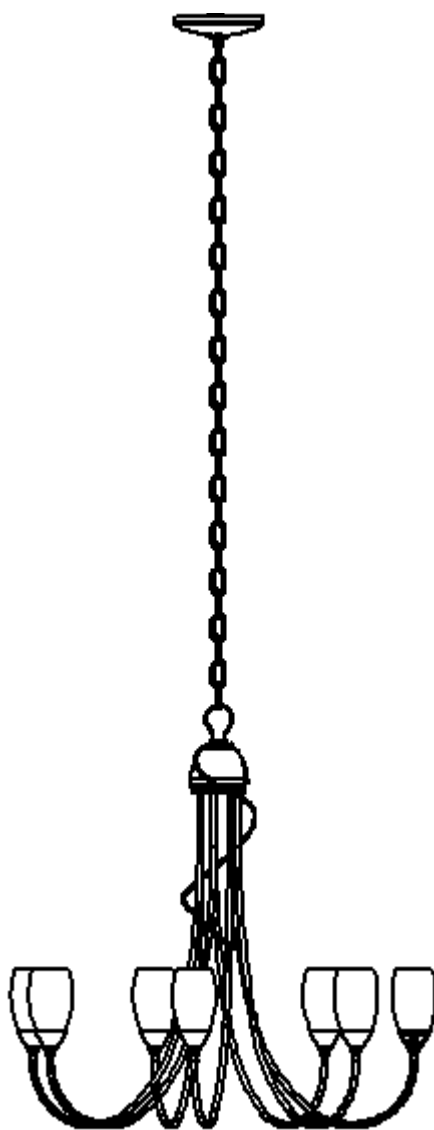

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

30868 Rev A

Component Parts

- A Ground Screw**
- B Crossbar**
- C Lock Nut**
- D Nipple**
- E Canopy**
- F Loop Collar**
- G Canopy Loop**
- H Fixture Loop**
- I Chain**
- J Socket (7)**
- K Bulb (7) (not included)**
- L Retaining Rings (7)**
- M Glass (7)**
- N Retaining Ring Tool**
- O Wavy Washer (7)**



ASSEMBLY & INSTALLATION INSTRUCTIONS

A368

Flora Chandelier 103049

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Attach to Ceiling (Figure 1 on next page)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture from the carton.
2. Using two machine screws (not provided), fasten the crossbar (B) to the electric box (see illustration). **Note:** A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.
3. Thread the nipple (D) into the crossbar (B) and secure with lock nut (C); slide canopy (E) over nipple (D), and attach the canopy loop (G) to the nipple (D). Thread on loop collar (F) to determine appropriate nipple height. Adjust the nipple to proper length to ensure a snug canopy fit before proceeding. Remove loop collar (F), canopy loop (G) and canopy (E).
4. Attach one end of the chain (I) to the fixture loop (H). Lace the wire through every other link of the chain (I) to the end. Slip wires and chain (I) through the loop collar (F), canopy loop (G) and canopy (E). Fasten the chain (I) to the canopy loop (G), and then slip wires through the loop (G) and nipple, into the electric box. Make sure to provide enough slack in the wire to ensure weight of fixture is supported by the chain (I).
5. Using suitable wire connectors (not provided) connect fixture wires to supply wires (white to ribbed side, black to smooth side). Run a pigtail lead from crossbar ground screw (A) to the junction box and connect all ground wires (bare copper or green to bare copper or green).


CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRE IS EXPOSED.

6. Raise canopy (E) to the ceiling thread canopy loop (G) onto nipple and secure with loop collar (F).
7. Retaining rings (L) are shipped installed on sockets. Remove retaining rings (L) from all sockets.
8. Install light bulb (K), (not included). Be careful not to touch bulb with bare hands; oil from the hands will dramatically reduce bulb life.
9. Slip glass (M) over socket followed by wavy washer (O). Thread retaining ring (L) onto socket (J) using the provided retaining ring tool (N).
10. Repeat steps 7 & 8 for remaining sockets.
11. Restore electricity at main breaker.

ASSEMBLY & INSTALLATION INSTRUCTIONS

A368

Flora Chandelier 103049

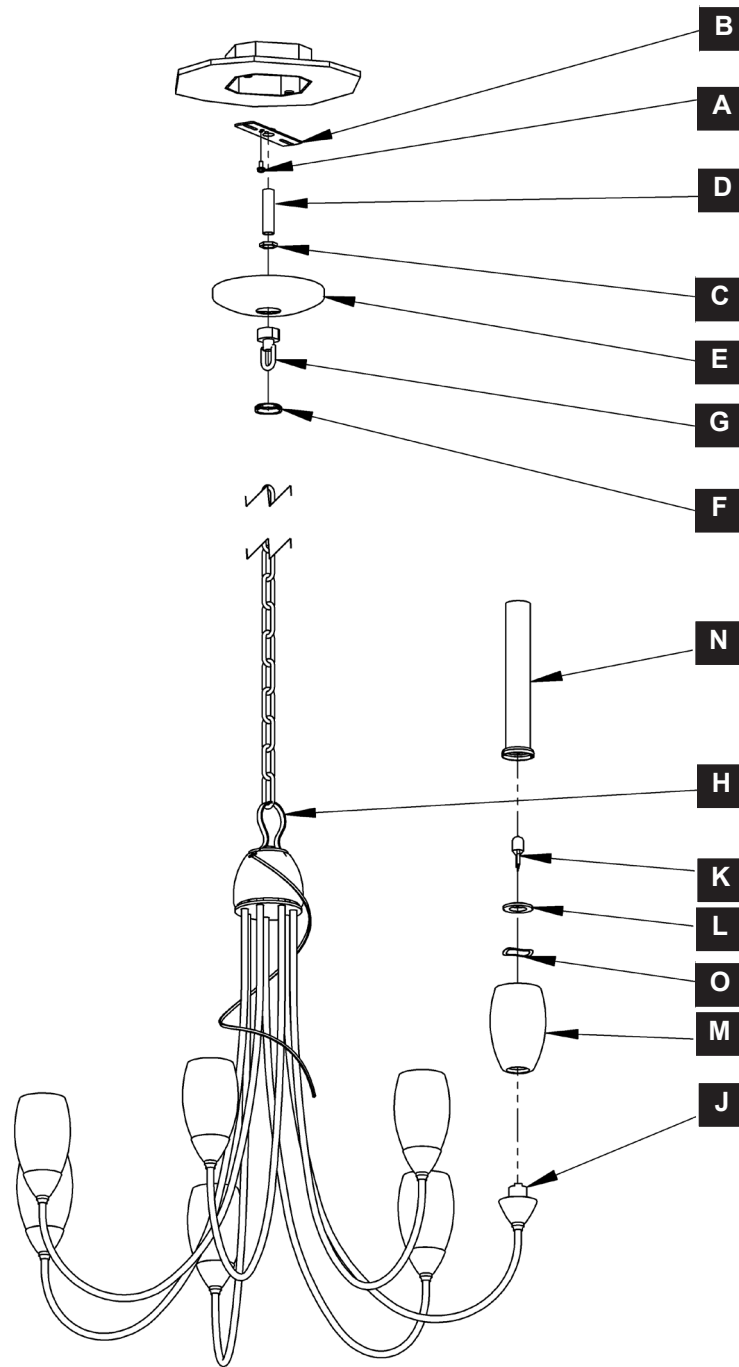

(Figure 1)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

30868 Rev A