

LABETTE MEDIUM & LARGE THREE/FOUR-LIGHT LANTERNS

5240603; 5240604

General Product Information



SAVE THESE INSTRUCTIONS!



STANDARD INSTALLATION



NEC COMPLIANT JUNCTION BOX



INDOOR/OUTDOOR



DAMP LOCATION SAFE



BULB(S) (NOT INCLUDED)



CONVERTS TO LED



DIMMER COMPATIBLE



PLEASE SEE visualcomfort.com FOR PRODUCT SPECS



CLEAN WITH SOFT, DRY CLOTH ONLY. NO HARSH CHEMICALS!



BEST PRACTICE: HANDLE FIXTURE WITH GLOVES



Product Warranty



FCC Statement

Suggested/Required Tools



ELECTRIC DRILL



PHILLIPS-HEAD SCREWDRIVER



PENCIL/MARKER



WIRE CUTTER

Safety Information

CAUTION-RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.



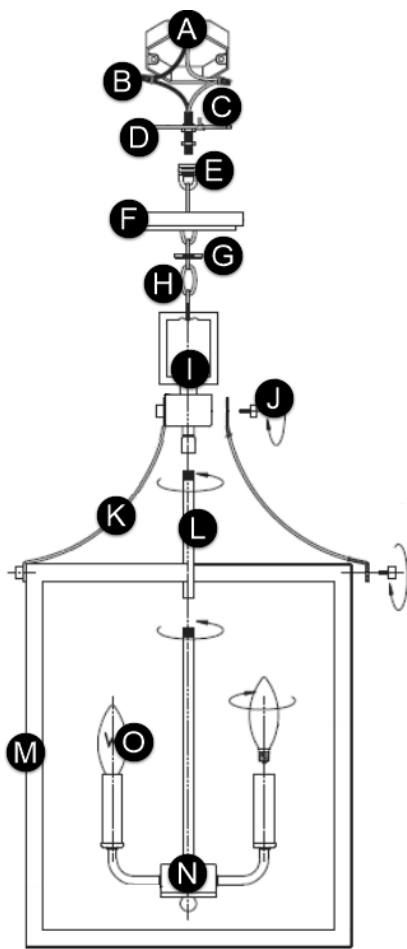

FIXTURE PARTS

- A. Junction box
- B. Wire Nut Connections
- C. Threaded Nipple
- D. Mounting Plate & Mounting Screws
(Not Illustrated)
- E. Screw Collar
- F. Canopy
- G. Collar Nut
- H. Chain
- I. Fixture Loop Assembly
- J. Thumb Screws
- K. Fixture Frame Arms
- L. Fixture Frame Stem
- M. Fixture Frame
- N. Socket Assembly
- O. Bulbs (Not Included)

INSTRUCTIONS

I. Preparing the Fixture

1. If necessary, screw the shorter end of the threaded nipple tightly onto the mounting plate and the screw collar onto the threaded nipple.
2. Secure the mounting plate to the junction box.
3. Feed the cord from the socket assembly through the fixture frame stem then screw them together.
4. Feed the cord through the fixture loop assembly and screw it onto the fixture frame stem.
5. Install the fixture frame arms onto the frame and fixture loop assembly and secure them in place with the provided thumb screws.
6. Determine the desired height of the fixture and remove a portion of the chain by opening a link with pliers.
7. Open the chain link with pliers and install the chain on the fixture loop. Close the chain link.
8. Unscrew the collar nut from the screw collar, then install the collar nut and the canopy onto the chain in that order.
9. Open a link on the other end of the chain with pliers and install the chain onto the screw collar to secure the fixture. Close the link.
10. Weave the cord through the chain, canopy, collar nut, screw collar, threaded nipple, and out of the junction box. Trim the cord, leaving enough length to make electrical connections.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
3. Adjust the length of any of the wires using a wire cutter/stripper, if necessary.
4. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) White (textured/ribbed) fixture wire to neutral power line wire
 - b) Black (smooth) fixture wire to hot power line wire.
5. Carefully tuck all the wires behind the hanging plate into the junction box.

III. Installing the Fixture

1. Place the canopy onto the ceiling and secure it in place by screwing the collar nut tightly onto the screw collar.
2. Screw the lamps into the sockets. Refer to the label on the socket for max wattage information.