

Freeport Chandelier

C01141, C01154, C01164 | 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.


Incandescent lamps may be dimmed with a standard incandescent dimmer. LED lamps may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

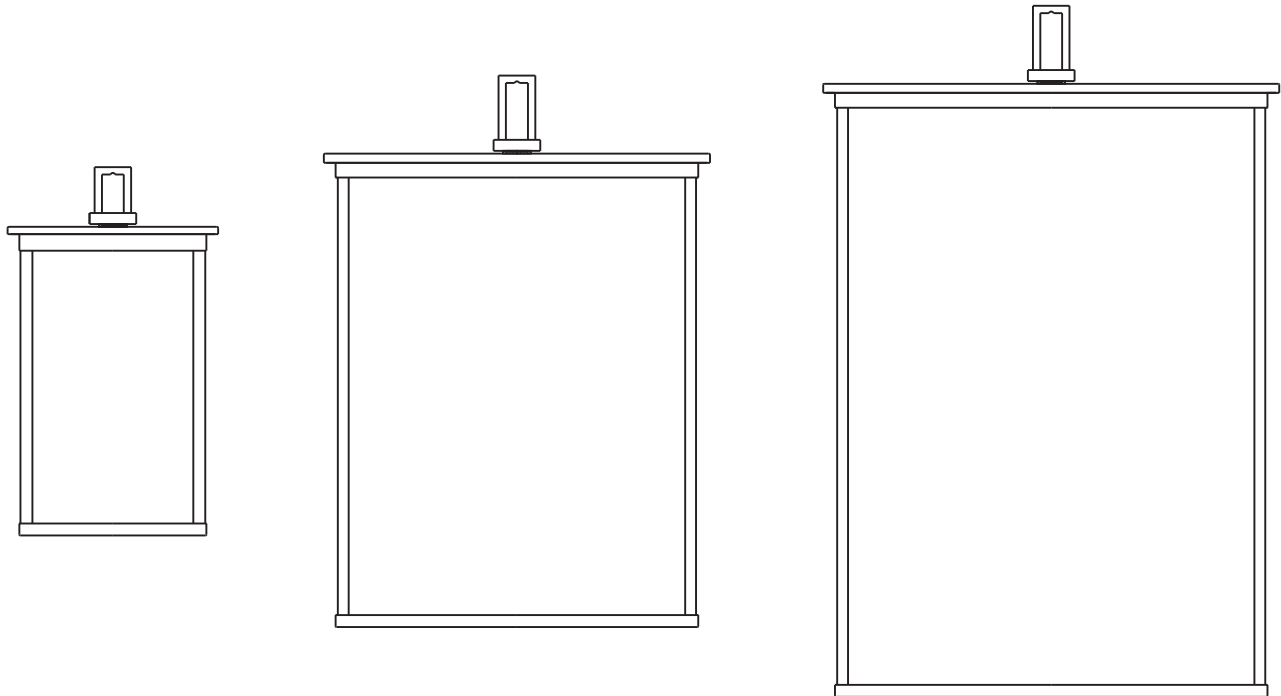

SAVE THESE INSTRUCTIONS!

Install the Fixture

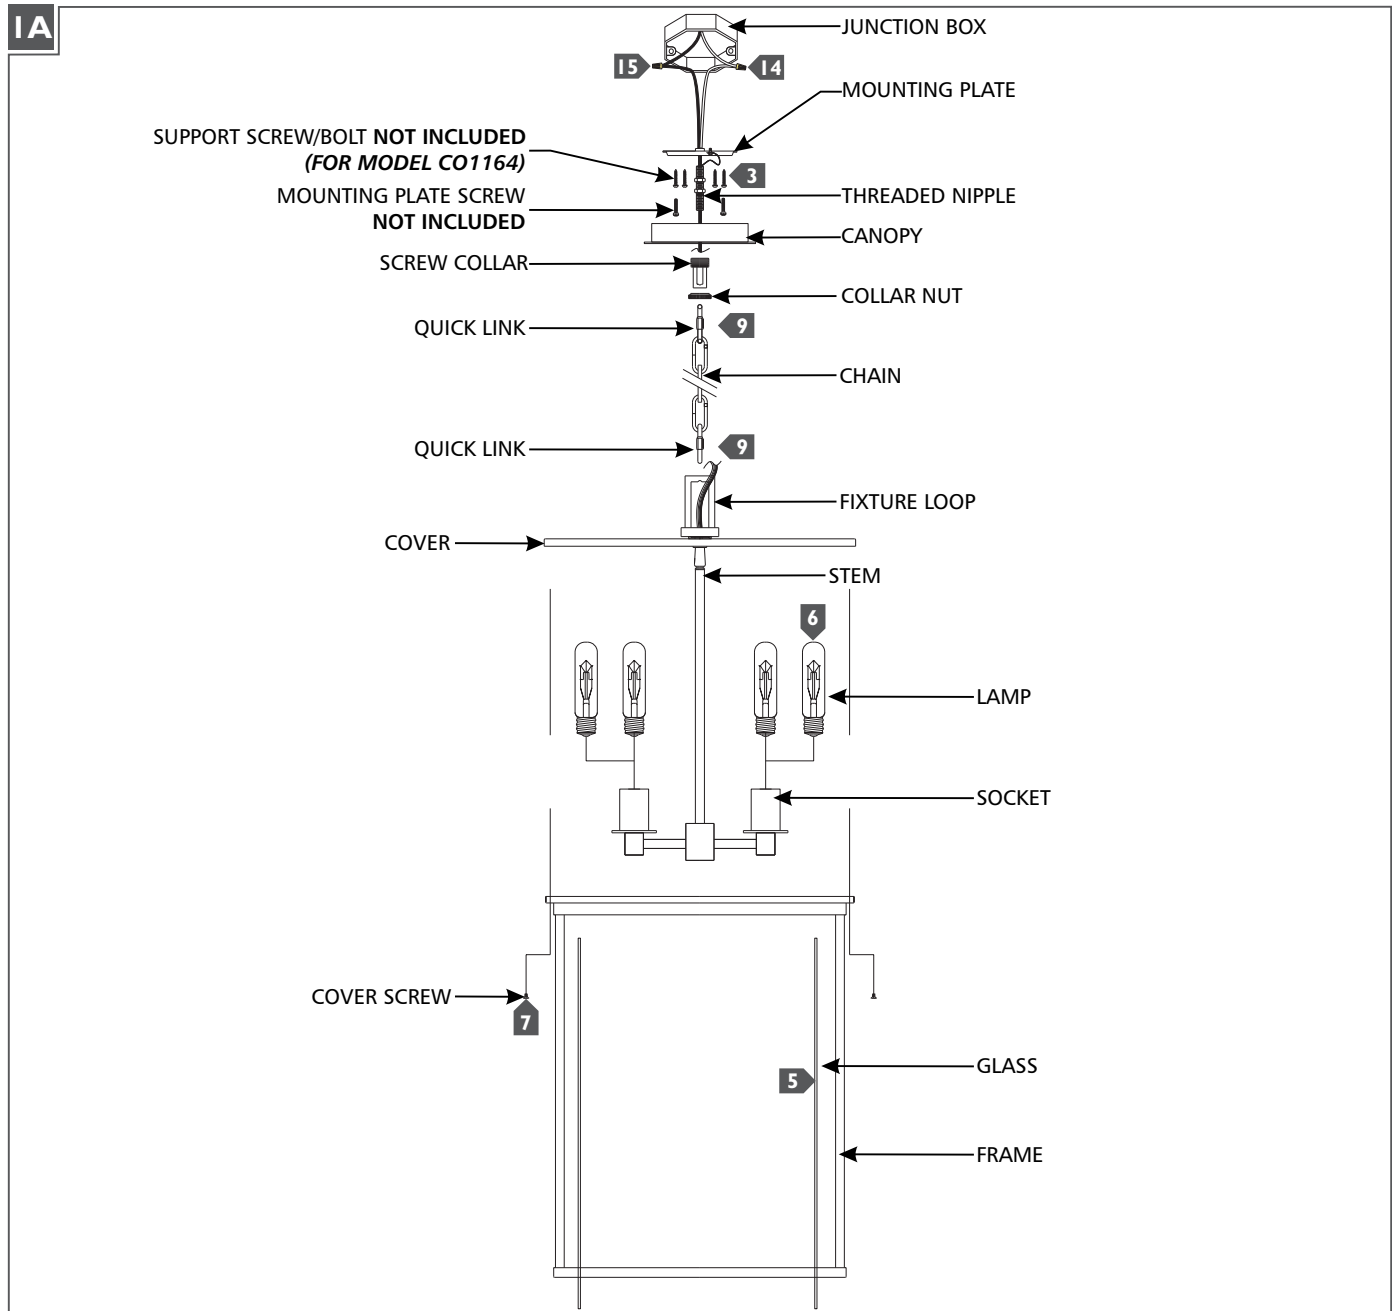

- 1** If necessary, screw the short end of the threaded nipple tightly onto the mounting plate and the screw collar onto the threaded nipple.
- 2** Feed the fixture wires through the cover and fixture loop, then screw the fixture loop onto the cover. **For Models CO1154 & CO1164 Only:** Screw the stem / socket assembly onto the cover.
- 3** **For Model CO1164 Only:** To hang fixtures weighing over 50 lbs. (**over 25 lbs. in Canada**) the mounting plate must be supported independently of the ceiling junction box. Recommend minimum of two 1/4" diameter screws or bolts (**rated for 200 lbs. or greater**) which must have sufficient length to be installed through the mounting bar, junction box, and securely into the ceiling structure member or cross brace. This installation must be able to support at least four times the weight of the fixture. Check this fact before starting assembly. If unsure, please consult a qualified technician. **Skip to step 5**
- 4** Secure the mounting plate to the junction box.
- 5** Install the glass by carefully inserting them into the fixture frame and bending the tabs to secure in place.
- 6** Screw the lamps into the sockets. Refer to the label on the lamp socket for Max Wattage Information.
- 7** Carefully lower the fixture so that the cover rests on top of the fixture frame, then secure together using the cover screws.
- 8** Determine the wanted height of the fixture and remove a portion of the chain from the bottom by opening a link with pliers.
- 9** Install a quick link to bottom end of the chain, then secure the quick link onto the fixture loop.
- 10** Unscrew the collar nut from the screw collar, then install the collar nut and the canopy onto the chain (in that order).
- 11** Install a quick link onto the remaining end of the chain, then secure the quick link onto the screw collar.
- 12** Weave the cord through the chain, canopy, screw collar, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- 13** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 14** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 15** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 16** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the screw collar.