
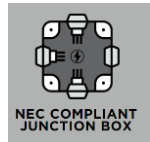
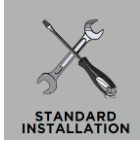


SAWYER NATURAL PENDANTS & HANGING SHADES

KSP1171; KSP1043; KSP1184

General Product Information

Please visit www.visualcomfort.com for product specs.

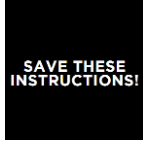

Product Warranty




FCC Statement

Suggested/Required Tools



ELECTRIC DRILL

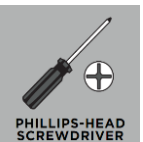

PHILLIPS-HEAD SCREWDRIVER



WIRE CUTTER



PLIERS

Safety Information

CAUTION-RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

USE MINIMUM 90°C SUPPLY CONDUCTORS.




Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

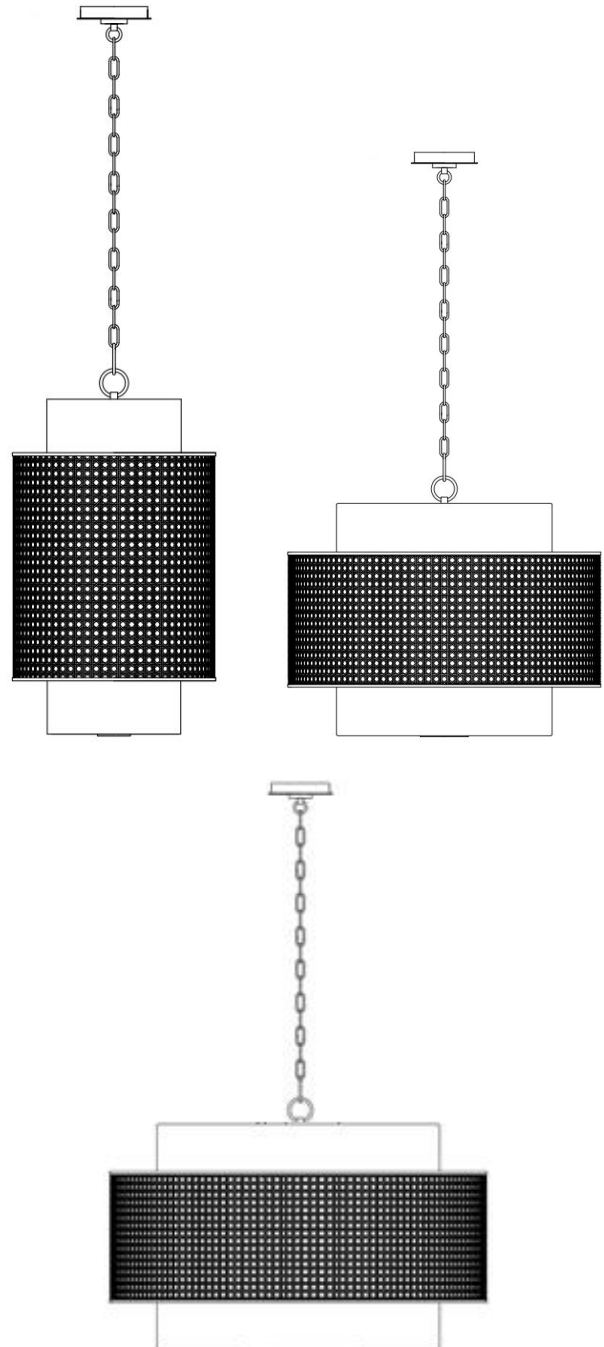

FIXTURE PARTS

- A. Junction Box
- B. Wire Nut Connections
- C. Mounting Plate
- D. Threaded Rod
- E. Canopy
- F. Screw Collar
- G. Collar Nut
- H. Canopy Loop
- I. Quick Link
- J. Chain
- K. Fixture Loop
- L. Check Ring
- M. Fixture Nipple
- N. Inner Shade
- O. Outer Shade
- P. Threaded Stem
- Q. Socket Cluster
- R. Bulbs (Not Included)
- S. Bottom Stem
- T. Glass Disk
- U. Finial

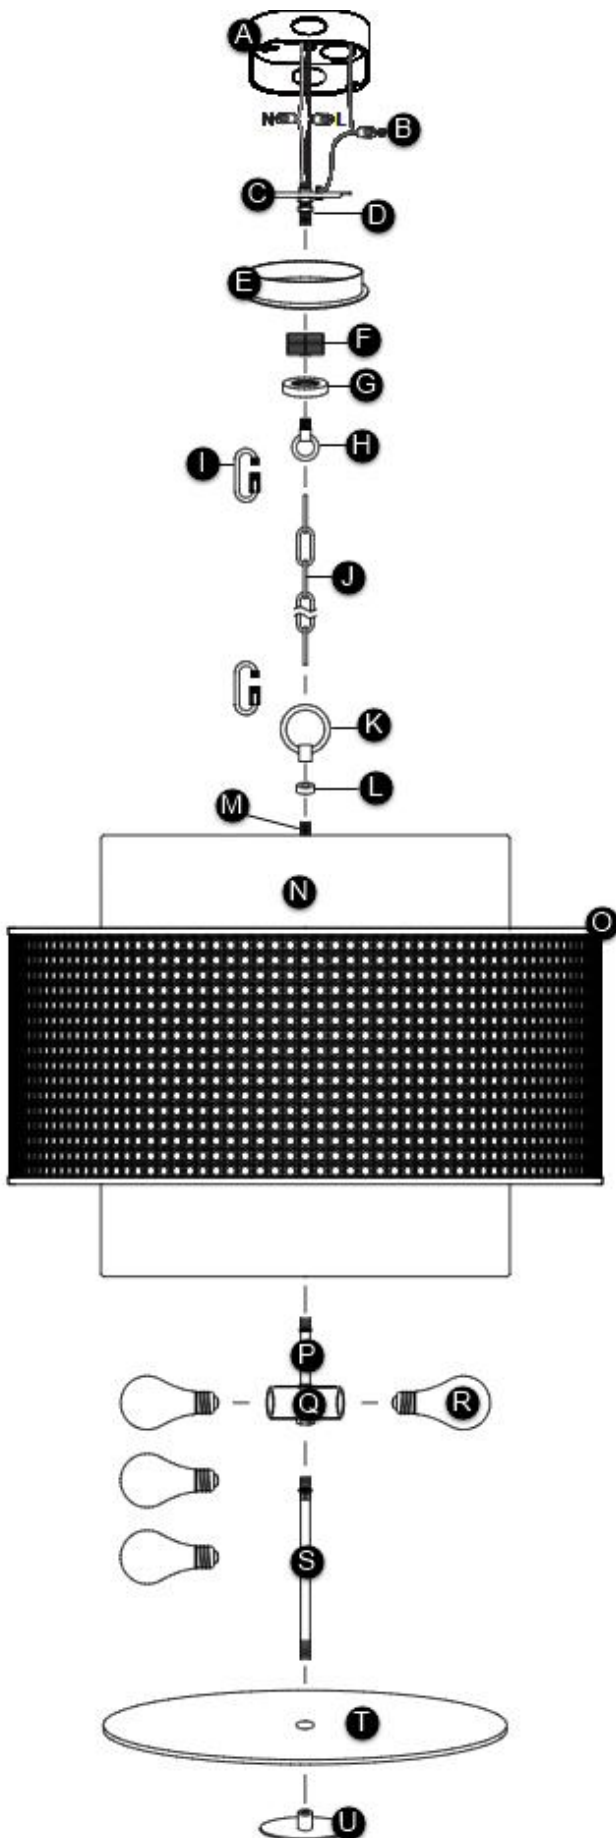

INSTRUCTIONS

I. Preparing the Fixture

1. If necessary, screw the shorter end of the threaded rod tightly onto the mounting plate and the screw collar/canopy loop onto the threaded rod.
2. Secure the mounting plate to the junction box.
3. Feed the fixture and ground wires through the stem, the shade assembly, check ring and fixture loop, if necessary.
4. Install the socket cluster and stem to the shade assembly.
5. Secure the fixture loop onto the shade assembly.
6. Determine the desired height of the fixture and adjust the chain accordingly by doing the following:
 - a) Remove a portion of the chain by opening a link with pliers.
 - b) Install the bottom end of chain onto the fixture loop using the lower quick link.
 - c) Unscrew the collar nut from the screw collar and install it onto the chain.
 - d) Then install the canopy onto the chain and the upper quick link onto the remaining end of chain.
 - e) Secure the quick link onto the canopy loop.
7. Weave the cord through the chain, collar nut, canopy, screw collar, threaded rod, and out of the junction box.
8. Trim the cord leaving enough to make electrical connections.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) Hot fixture wire (smooth) and hot power line wire from the junction box (hot to hot)
 - b) Neutral fixture wire (textured/ribbed) and neutral power line wire from the junction box (neutral to neutral)
4. Carefully tuck all wires into the junction box.

III. Installing the Fixture

1. Place the canopy onto the ceiling and secure it in place by screwing the collar nut tightly onto the screw collar.
2. Screw the bulbs into the sockets. Refer to socket label for max wattage information.
3. Install and secure the bottom stem into the socket assembly.
4. Place the glass disk against the glass tabs on the bottom rim of the outer shade and secure it in place by screwing the finial onto the bottom stem.