



# CRYSTORAMA LIGHTING

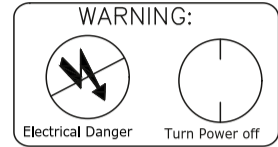

ASSEMBLY INSTRUCTION MODEL #ALI-B2026-CZ

Note  
1. Please pull the fixture wire straight before securing the top fixture loop.


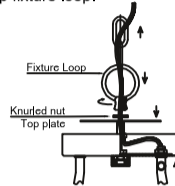


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes



You will need 26 - Cand. Bulb  
40 Watts Recommended 60 Watts Max  
USE LED BULBS FOR EXTENDED USE

THIS FIXTURE IS DAMP RATED

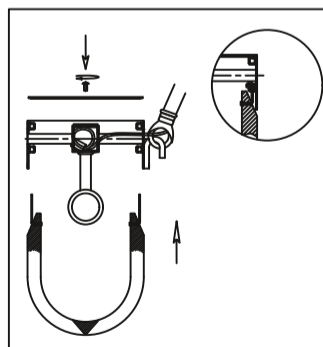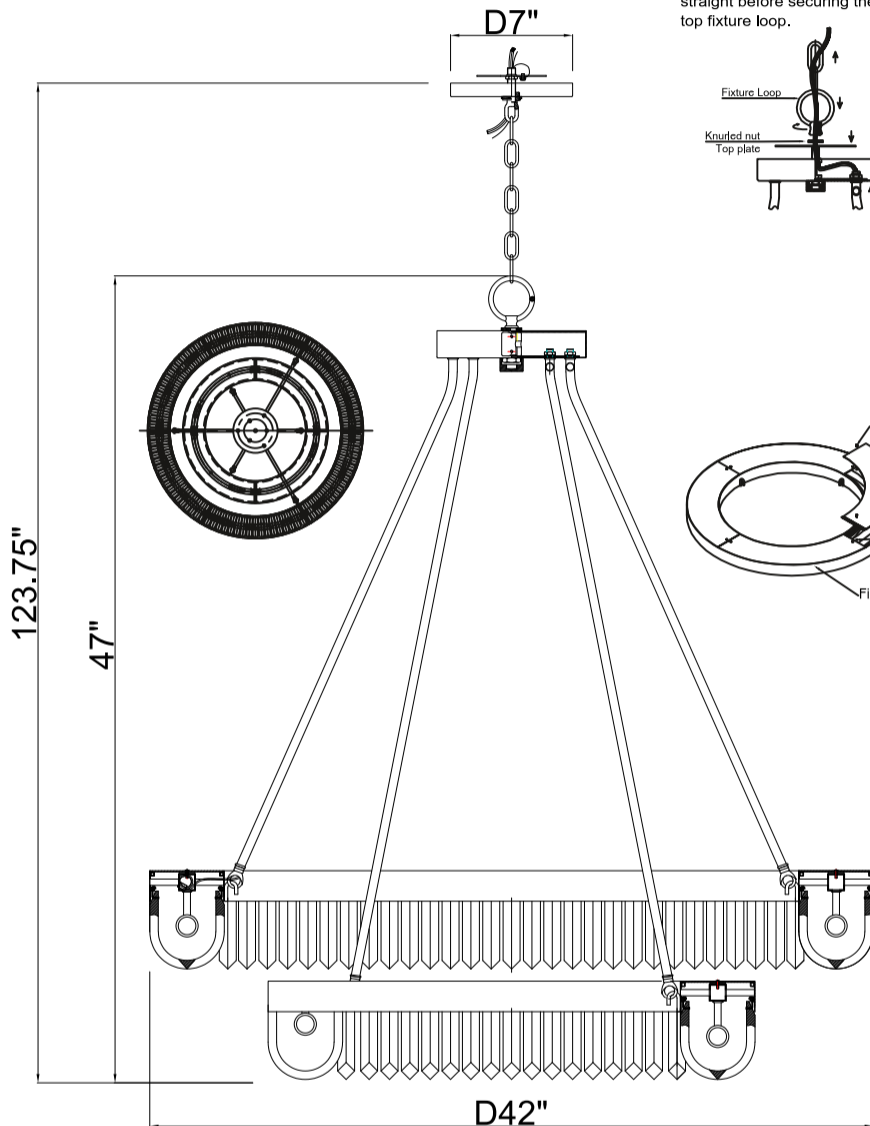


## How to Install

1. Pass one of the fixture wire through one of the long rods and attach it onto the top wire box and secure it with nuts.
2. Attach the remaining long rods onto the wire box and secure with nuts.
3. Pass the second fixture wire through one of the short rods and attach it onto the top wire box and secure it with nuts.
4. Attach the remaining short rods onto the wire box and secure with nuts.
5. Pass both fixture wires through the hickey inside the wire box and then through the top plate and loop.
6. Secure the top plate with loop.
7. Hook the long rods and short rods onto the top and bottom ring separately.
8. Attach one end of the provided 1/4 IPS Threaded pipe onto the ceiling joist and secure with hex nut. The other end should protrude through the outlet box as shown.
9. Assemble the screw collar loop, nipple, hex nut and hickey to the 1/4 IPS threaded pipe and adjust overall length to allow the collar ring to hold the canopy flush to ceiling.
10. Attach the chain to the fixture loop. Slide the screw collar ring over the upper end of the chain through the canopy open the end link of chain and lift the fixture to attach to the screw collar loop and secure the link.
11. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop, exiting through the side of Hickey. Proceed with wire connection. Wrap safety cable around the ceiling joist and secure cable with the clamp and set screws provided as shown.
12. Take the cover plate on the fixture ring off by removing the screws.
13. Pass the crystal pin through the crystal bar and raise it up and let the pin pass through the small tubing inside the ring. Then bend the pin over to secure the crystal. See illustration.
14. Install the bulb and put the top cover plate back and secure it with screws.



**WARNING:** This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# SAFETY CABLE INSTALLATION INSTRUCTIONS

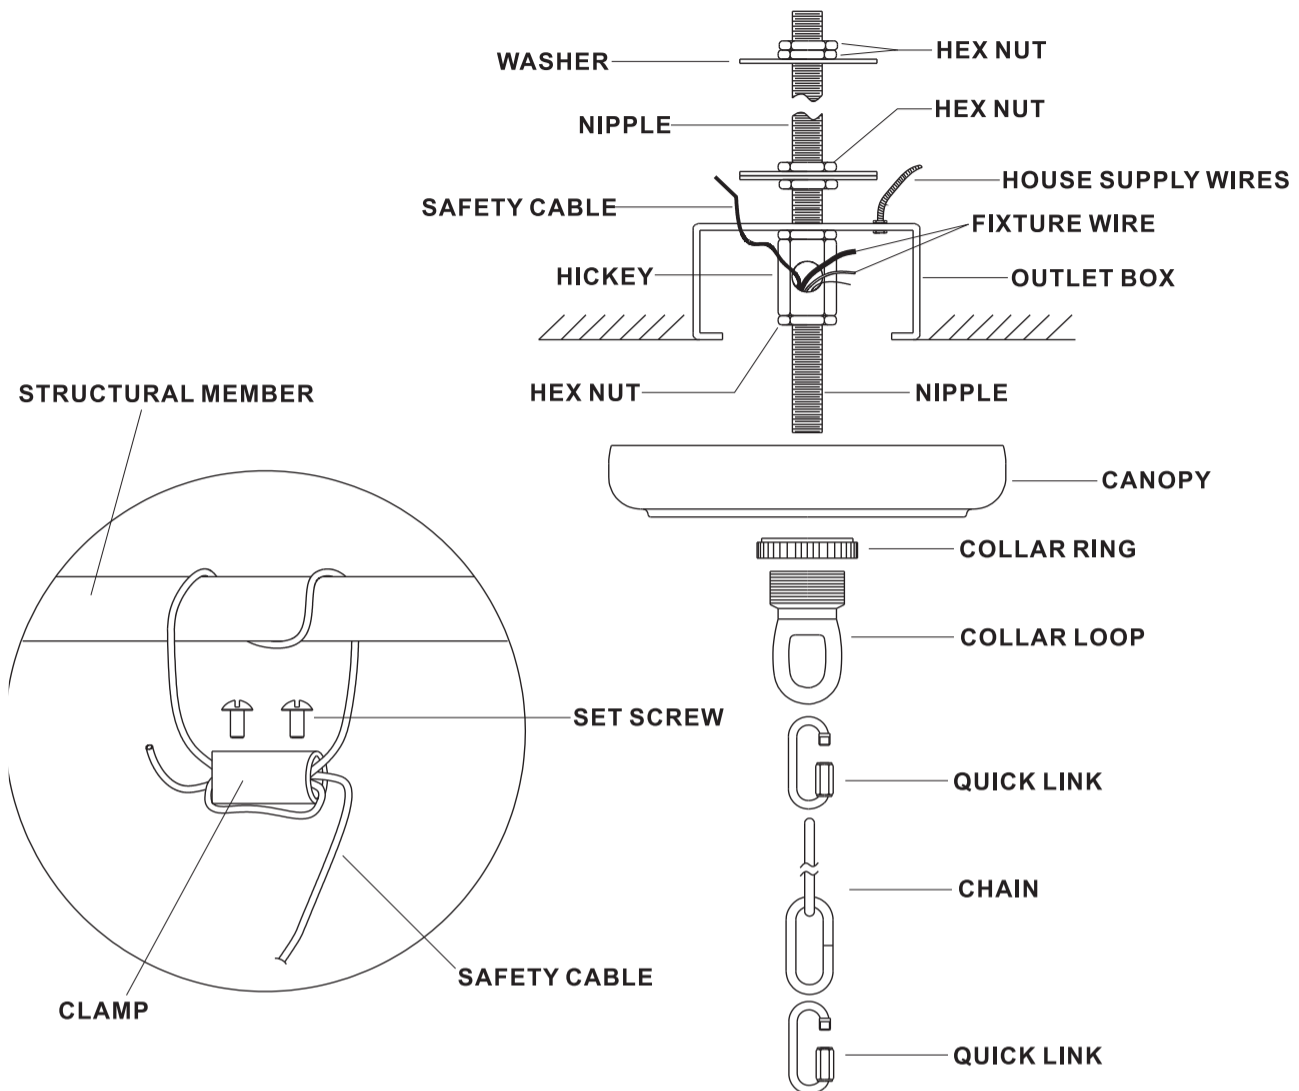


## IMPORTANT:

FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX.

## SUGGESTED INSTALLATION:

1. Provide a 1/4 IPS pipe with one end securely mounted to a beam or a structural member. The other end should protrude through the center of the outlet, as shown.
2. Assemble the screw collar loop, nipple, hex nuts and hickey to center 1/4 IPS support pipe and adjust overall length to allow the collar ring to hold the canopy flush to the ceiling. When the adjustments have been completed secure the hex nut, as shown.
3. Use one quick link to connect fixture loop and the bottom of chain. Slide the screw collar ring over the upper end of the chain, through the (Finished side down). Then use another quick link to connect collar loop and the top of chain.
4. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop, exiting through the side of HICKEY. Proceed to attach the FIXTURE GROUND WIRE to HOUSE GROUND WIRE using wire connector. Using wire connectors, connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE OR RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap all connectors with approved electrical tape. Wrap safety cable around outlet box brace and pull cable taut. Secure cable with the clamp and (2) set screws provided, as shown.
5. Push the CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.

**\*\*\* ATTENTION-**If the use of the Mounting Bracket is the installation method being done, you will need an outlet box (not supplied) rated for 100lbs or more \*\*\*

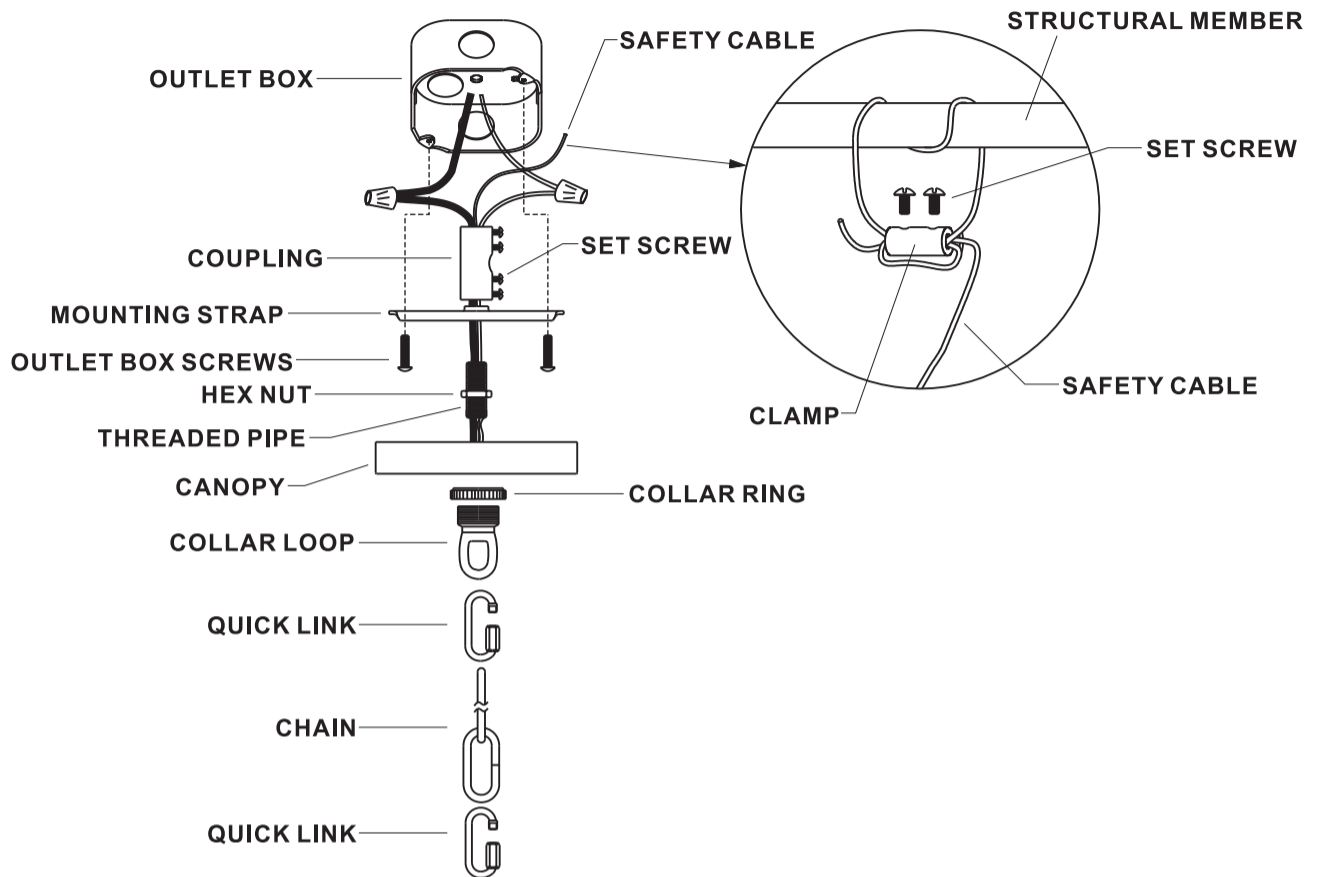

**NOTE:NEC CODE (314.24) requires that ceiling outlet boxes in the United States support up to 50 lbs. This fixture exceeds 50 lbs. and must be installed using an outlet box approved for up to 100 lbs. or independently of the existing outlet box. Installation hardware and instructions are provided for both.**

**MOUNTING TO A 100 lb. MAX. APPROVED OUTLET BOX.**

1. Feed the Support cable from the fixture through the outlet box. Drill 3/16" diameter hole in outlet box if no other holes are available. Wrap safety cable around the structural member and pull cable taut. Secure cable with the clamp and (2) set screws provided.
2. Screw the threaded rod into the coupling until the threaded rod is flush with top of the coupling. Secure in place by tightening the sets screw.
3. Pass the threaded pipe through the mounting strap.
4. Thread screw collar loop onto the threaded rod until the threaded rod is flush with hole on lower side of screw collar loop.
5. Secure screw collar loop in place by tightening the hex nut.
6. Assemble the mounting strap to outlet box using screws provided with outlet box.
7. Use one quick link to connect fixture loop and the bottom of chain. Slide the screw collar ring over the upper end of the chain, through the (Finished side down). Then use another quick link to connect collar loop and the top of chain.
8. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop. Proceed to attach the **FIXTURE GROUND WIRE** to **HOUSE GROUND WIRE** using wire connector. Using wire connectors, connect the **HOUSE WHITE WIRE** to the **FIXTURE SUPPLY WIRE (WHITE OR RIBBED SIDE)**; connect the **HOUSE BLACK (or RED) WIRE** to the **FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE)**. Wrap all connectors with approved electrical tape.
9. Push the **CANOPY** upward over the **OUTLET BOX**. Be sure that all wires are carefully tucked into the **OUTLET BOX** cavity. Secure canopy against ceiling by threading **CANOPY LOCK RING** onto the **CANOPY LOOP**. Tighten until snug.

(1)-Shortthreaded pipe  
 (3)-Metal washer  
 (7)-Hex nut  
 For 100lbs rated outlet  
 (1)-Thread pipe  
 (1)-Mounting strap  
 (2)-Two machine screws  
 (1)-Coupling with seal  
 (1)-Hex nut  
 A. (1)-Canopy; W7"X0.5"  
 B. (1)-Collar loop ring  
 C. (1)-Chain; 72"; 5.5mm  
 D. (1)-Fixture Loop;  
 E. (1)-Top Plate;  
 F. (1)-Wire house;  
 G. (1)-Hex Nut;  
 H. (1)-Finial; #XAR200  
 I. (1)-Top Fixture Ring  
 J. (3)-Short Rod; 0.5"  
 K. (22)-Screw;  
 L. (6)-Top Cover Plate  
 M. (336)-Crystal Pin;  
 N. (16)-Socket;  
 O. (4)-Bottom Cover Plate  
 P. (168)-Crystal Bar;  
 Q. (3)-Long Rod; 0.5"  
 R. (1)-Bottom Fixture Ring