


CRYSTORAMA LIGHTING



Crystorama.com

ASSEMBLY INSTRUCTION MODEL OLL-6006-AG-GR

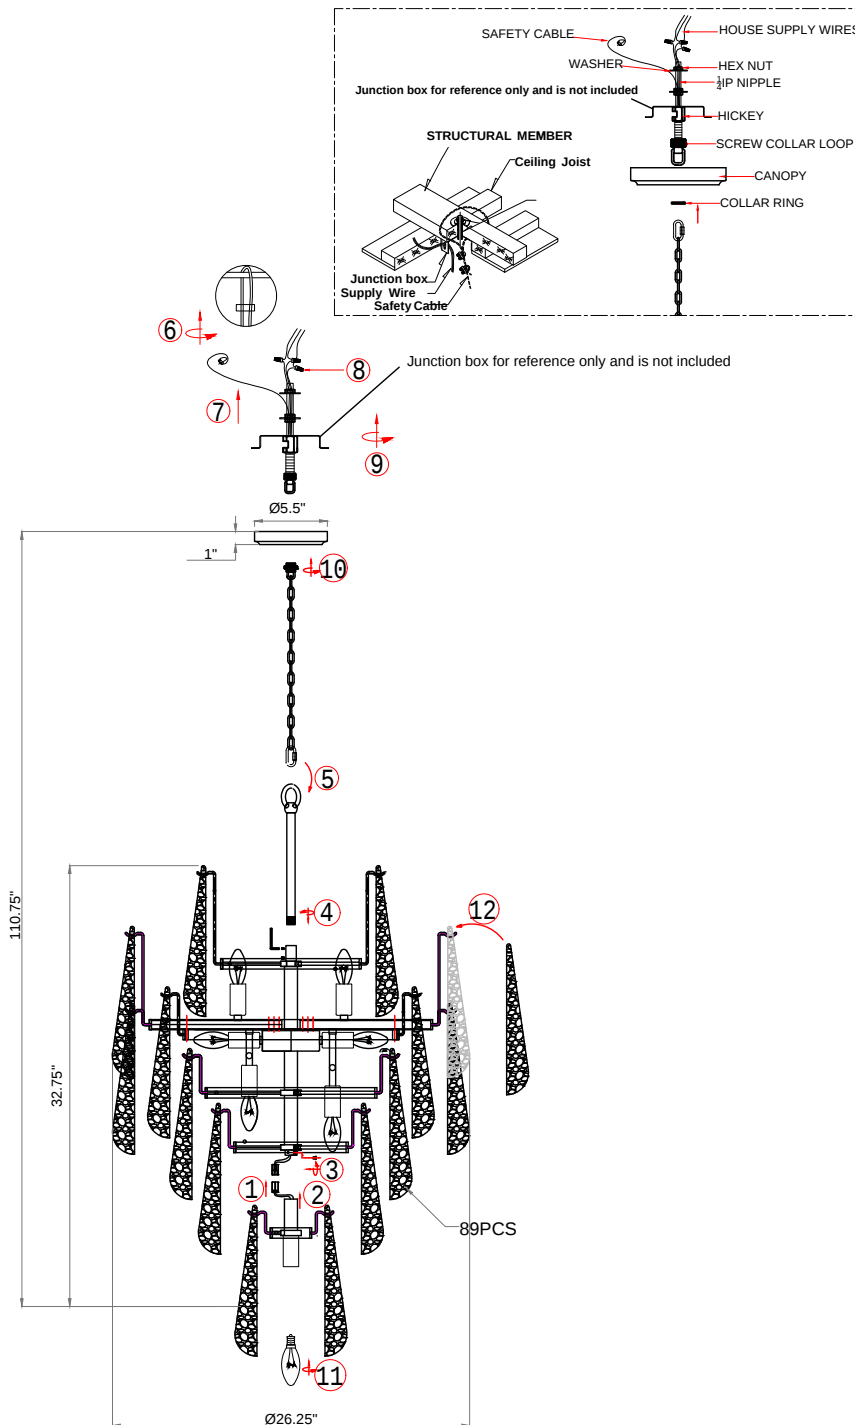

All electrical components must be

installed by a licensed electrician

in accordance with the National

Electric Code and the appropriate

local electrical codes.



You will need 16 Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
(This fixture is Dry rated)

How to Install

1. Decide the preferred hanging height and choose the correct length of chain needed.
2. Feed the fixture wire and the safety cable through the top stem, and screw the stem onto the frame.
3. Attach one end of the 1/4 IPS threaded pipe provided onto the ceiling joist and secure with hex nut. The other end should protrude through the outlet box as shown.
4. Assemble the screw collar loop, nipple hex nut and hickey to the 1/4 IPS threaded pipe and adjust overall length to allow the collar ring to hold the canopy flush to ceiling.
5. Attach one end of the chain to the fixture loop by opening the quick link. Slide the screw collar ring over the upper end of the chain. Open the opposite quick link and lift the fixture to attach the screw collar loop to the quick link. Secure the link.
6. Feed the fixture wires, ground wires and safety cable through the chain and screw collar loop, exiting through the Hickey. Proceed with the wire connections. Wrap the safety cable around the ceiling joist and secure the cable with the clamp and set screws provided as shown. After wires are connected. Place the canopy up against the ceiling and lock by tightening the screw collar loop ring.
7. While raising the bottom light cluster up, insert the male plug from it to the female plug from the bottom of the frame. Carefully tuck the wires and plugs inside the tubing and secure it onto the bottom coupling using the screws.
8. Install recommended bulb into the socket
9. Dress the glass as illustrated

Glass Sets

1. 89 pcs Green glass W3.25"xH11.5 "

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

PART NUMBER MODEL OLL-6006-AG-GR

Part Number

Part Numbers

A. Heavy duty mounting hardware

For 50lbs rated outlet box

- (1)-Long threaded rod
- (1)-Hickey
- (1)-Short threaded pipe
- (3)-Metal washer
- (7)-Hex nut

For 100lbs rated outlet box

- (1)-Thread pipe
- (1)-Mounting strap
- (2)-Two machine screws
- (1)-Coupling with set screws
- (1)-Hex nut

B. (1)-Canopy, D 5.5"XH1"
(XBN6006AGCAN5.5IN)

C. (1)-Collar ring

D. (1)-Collar loop

E. (1)-Chain, D5mm, L72"
(XBN6006AGCHA5MM)


F. (1)-Fixture loop, D2.5"

G. (1)-Center Stem, D0.75*H9"
(XBN6006AGSTEM9IN)


H. (1)-Frame

I. (89)-Glass, W3.25" xH11.5"

J. (1)- Bottom light cluster

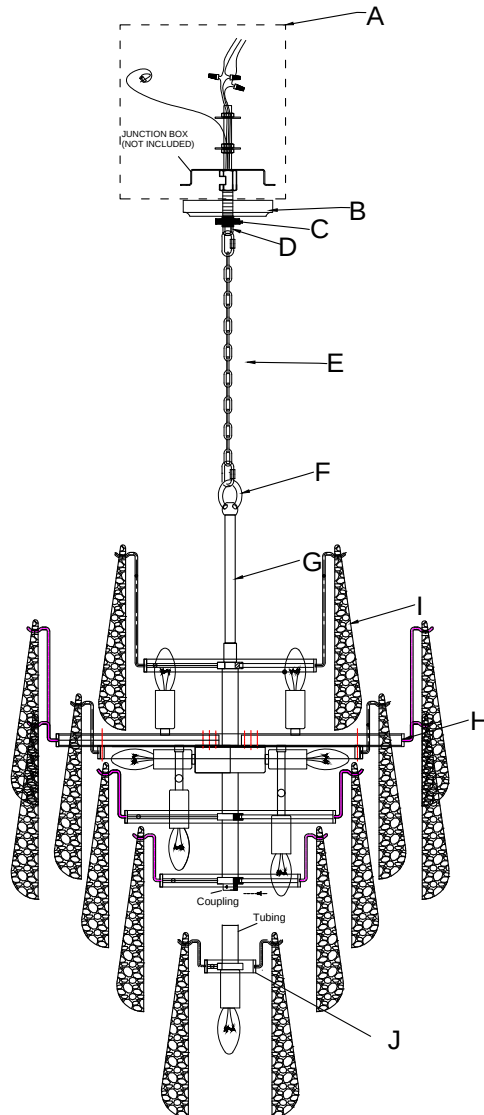

SAFETY CABLE INSTALLATION INSTRUCTIONS

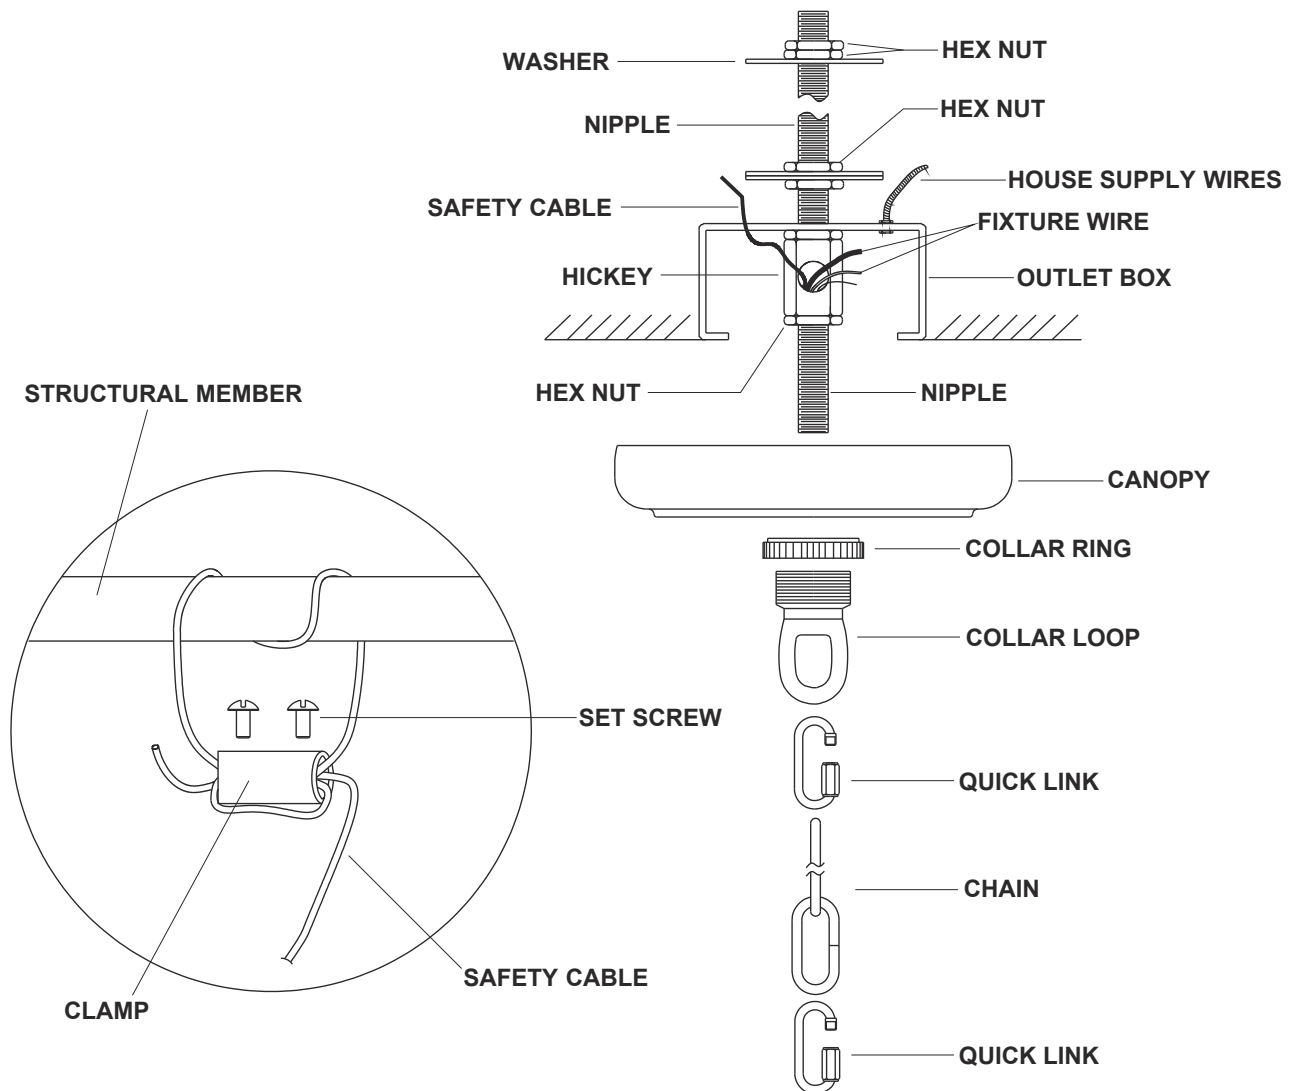

IMPORTANT:


FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX.

SUGGESTED INSTALLATION: 1. Provide a 1/4 IPS pipe with one end securely mounted to a beam or a structural member.

The other end should protrude through the center of the outlet, as shown.

2. Assemble the screw collar loop, nipple, hex nuts and hickey to center 1/4 IPS support pipe and adjust overall length to allow the collar ring to hold the canopy flush to the ceiling. When the adjustments have been completed secure the hex nut, as shown.
3. Use one quick link to connect fixture loop and the bottom of chain. Slide the screw collar ring over the upper end of the chain, through the (Finished side down). Then use another quick link to connect collar loop and the top of chain.
4. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop, exiting through the side of HICKEY. Proceed to attach the FIXTURE GROUND WIRE to HOUSE GROUND WIRE using wire connector. Using wire connectors, connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE OR RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap all connectors with approved electrical tape. Wrap safety cable around outlet box brace and pull cable taut. Secure cable with the clamp and (2) set screws provided, as shown.
5. Push the CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.

***** ATTENTION-**If the use of the Mounting Bracket is the installation method being done, you will need an outlet box (not supplied) rated for 100lbs or more***

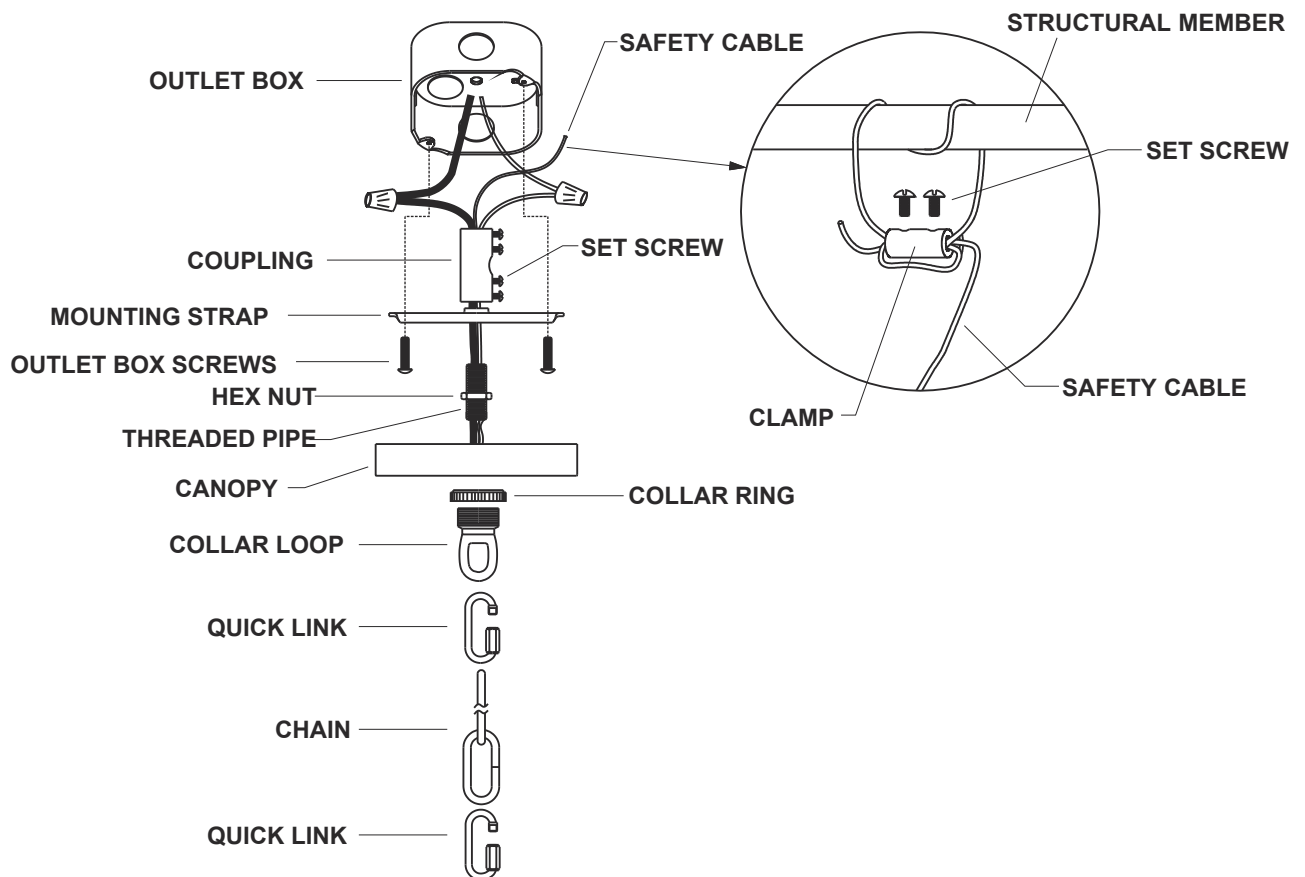

NOTE:NEC CODE (314.24) requires that ceiling outlet boxes in the United States support up to 50 lbs. This fixture exceeds 50 lbs. and must be installed using an outlet box approved for up to 100 lbs. or independently of the existing outlet box. Installation hardware and instructions are provided for both.

MOUNTING TO A 100 lb. MAX. APPROVED OUTLET BOX.

1. Feed the Support cable from the fixture through the outlet box. Drill 3/16!! diameter hole in outlet box if no other holes are available. Wrap safety cable around the structural member and pull cable taut. Secure cable with the clamp and (2) set screws provided.
2. Screw the threaded rod into the coupling until the threaded rod is flush with top of the coupling. Secure in place by tightening the sets screw. 3. Pass the threaded pipe through the mounting strap. 4. Thread screw collar loop onto the threaded rod until the threaded rod is flush with hole on lower side of screw collar loop. 5. Secure screw collar loop in place by tightening the hex nut.
6. Assemble the mounting strap to outlet box using screws provided with outlet box. 7. Use one quick link to connect fixture loop and the bottom of chain. Slide the screw collar ring over the upper end of the chain, through the (Finished side down). Then use another quick link to connect collar loop and the top of chain.
8. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop. Proceed to attach the **FIXTURE GROUND WIRE** to **HOUSE GROUND WIRE** using wire connector. Using wire connectors, connect the **HOUSE WHITE WIRE** to the **FIXTURE SUPPLY WIRE (WHITE OR RIBBED SIDE)**; connect the **HOUSE BLACK (or RED) WIRE** to the **FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE)**. Wrap all connectors with approved electrical tape.
9. Push the **CANOPY** upward over the **OUTLET BOX**. Be sure that all wires are carefully tucked into the **OUTLET BOX** cavity. Secure canopy against ceiling by threading **CANOPY LOCK RING** onto the **CANOPY LOOP**. Tighten until snug.