



CRYSTORAMA LIGHTING



ASSEMBLY INSTRUCTION MODEL #GEM-7007-MG-SS

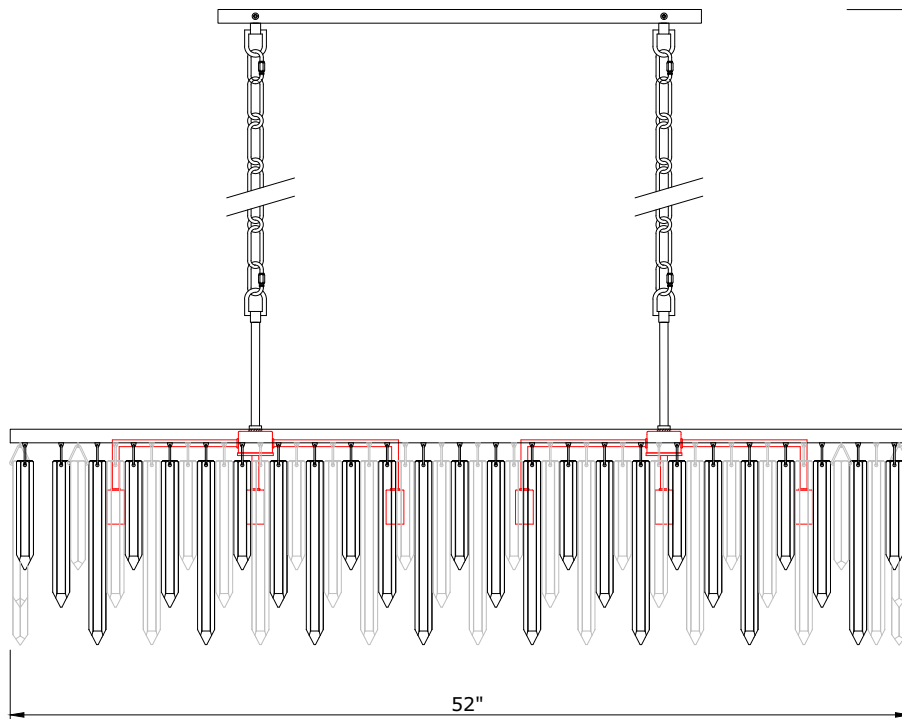


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.




You will need 6 -Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
THIS FIXTURE IS DAMP RATED

How to Install


1. Determine preferred hanging height and adjust to the required chain.
2. Feed the wires through the stem and screw the stem onto the top of the fixture. Hang the chain onto the loop on the top of the stem using a quick link.
3. Place the mounting plate over the outlet box, then mark points on the ceiling with the same distance between the holes on the mounting plate.
4. Drill the holes at the marked points then insert the plastic anchors into it.
5. Attach the mounting plate onto the outlet box and secure it with anchor screws.
6. Feed the wires and safety cable through the loop on the canopy. Run the safety cable through the outlet box and wrap the safety cable around the ceiling joist and secure the cable with the clamp and set screws provided as shown. Raise the fixture up to the ceiling and do the wire connections. Secure the canopy onto the mounting plate with the screws.
7. Insert the recommended bulbs(not included)
8. Hang the crystal rod onto the frame using the cap nuts.

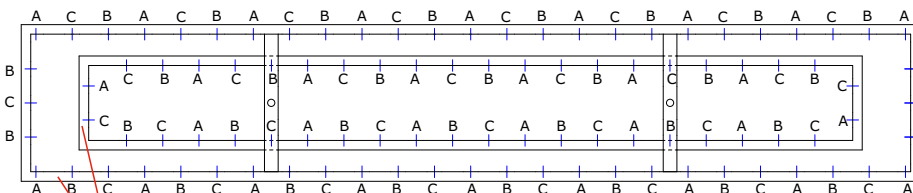

When hanging the crystal, start from this side.

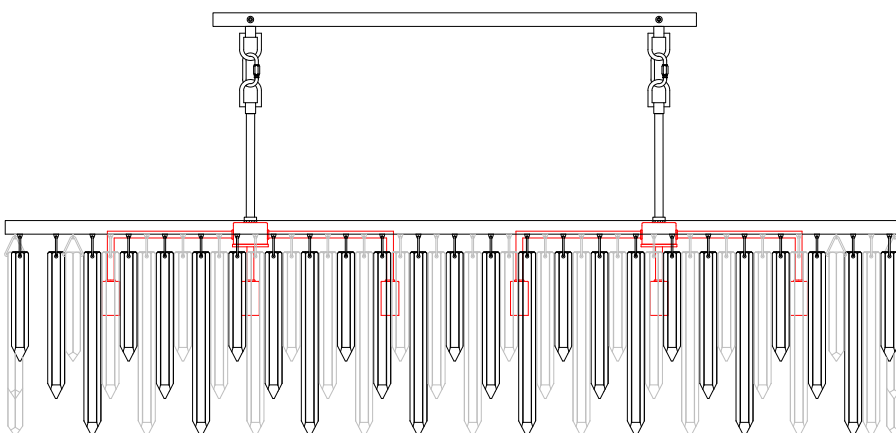

Crystal Rod:

- A  32 Pieces 160mm C  34 Pieces 270mm
- B  34 Pieces 215mm

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov.


CRYSTORAMA LIGHTING




PART NUMBER MODEL #GEM-7007-MG-SS

Part Number

- A. (1) - Mounting Hardware
- B. (1) - Canopy(L28",W4.75",H0.8") #XRE7007MGCAN28IN
- C. (4) - Fixture Loop
- D. (4) - Quick Link
- E. (2) - Hanging Chain(each 72", 5.0mm) #XRE7007MGCHA5MM
- F. (2) - Hanging Stem(6", 12.7mm) #XRE7007MGSTEM6IN
- G. (100) - Cap nut

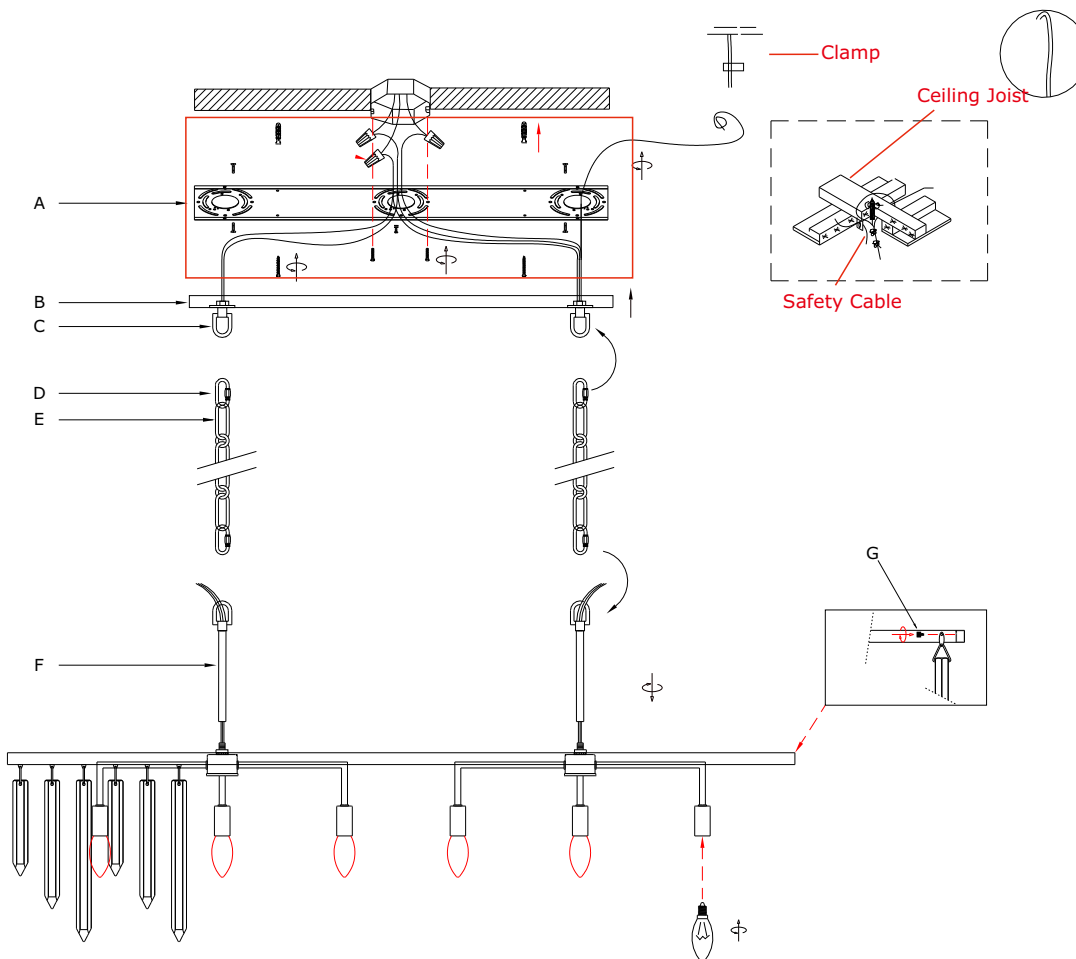

SAFETY CABLE INSTALLATION INSTRUCTIONS

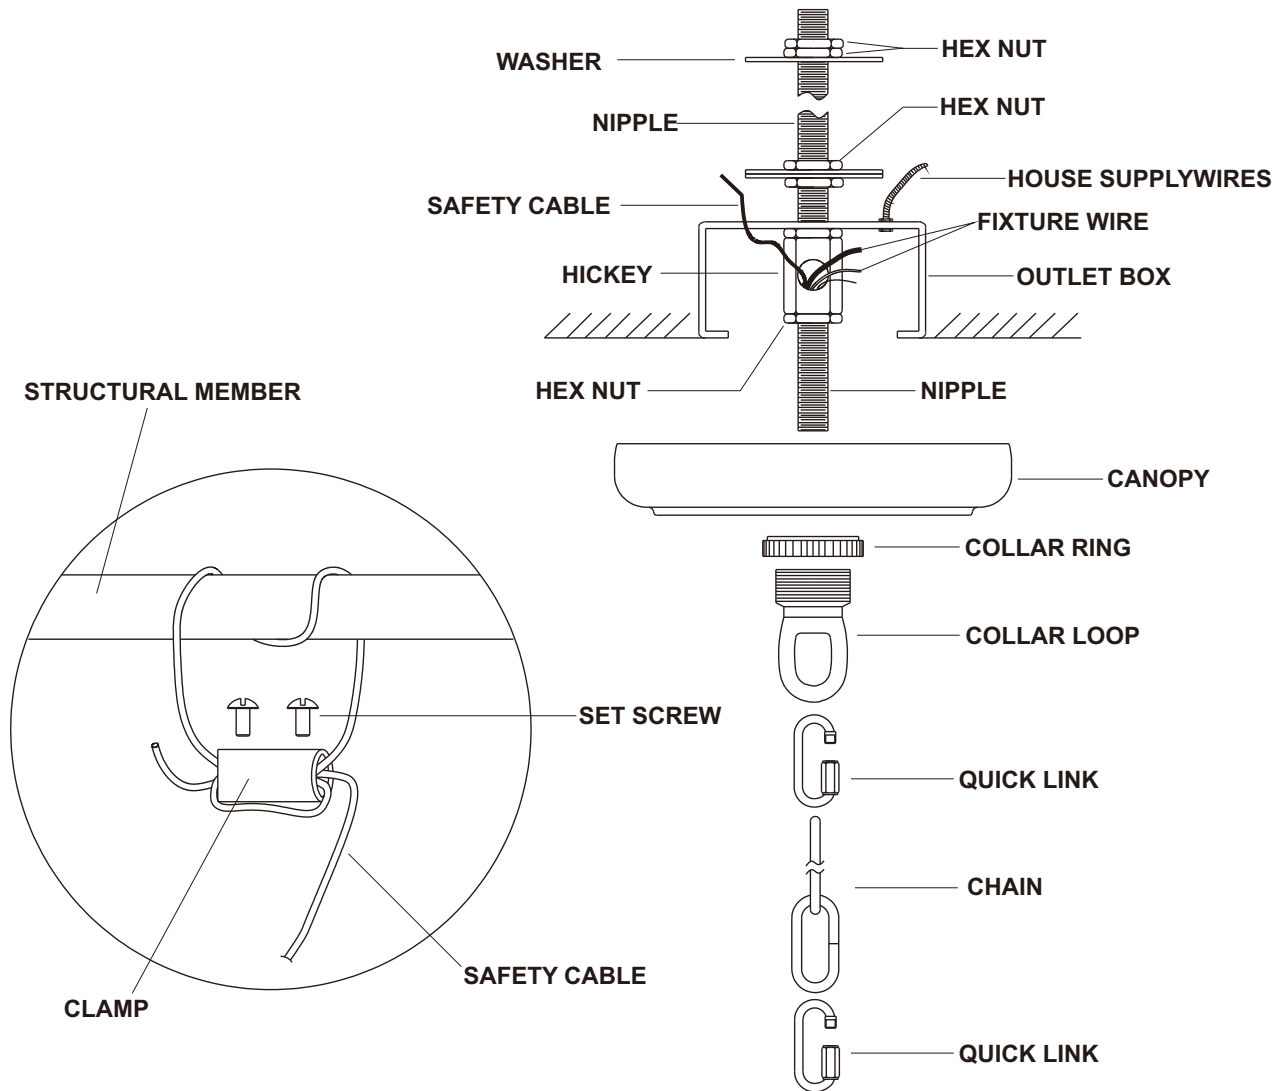


IMPORTANT:

FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX.

SUGGESTED INSTALLATION:

1. Provide a 1/4 IPS pipe with one end securely mounted to a beam or a structural member. The other end should protrude through the center of the outlet, as shown.
2. Assemble the screw collar loop, nipple, hex nuts and hickey to center 1/4IPS support pipe and adjust overall length to allow the collar ring to hold the canopy flush to the ceiling. When the adjustments have been completed secure the hex nut, as show
3. Use one quick link to connect fixture loop and the bottom of chain. Slide the screw collar ring over the upper end of the chain, through the (Finished side down). Then use another quick link to connect collar loop and the top of chain.
4. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop, exiting through the side of HICKEY. Proceed to attach the FIXTURE GROUND WIRE to HOUSE GROUND WIRE using wire connector. Using wire connectors, connect the HOUSE WHITE WIRE to the FIXTURE SUPPLYWIRE(WHITE OR RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLYWIRE (BLACK or SMOOTH SIDE). Wrap all connectors with approved electrical tape. Wrap safety cable around o utlet box brace and pull cable taut. Secure cable with the clamp and (2) set screws provided, as shown.
5. Push the CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.

* * * ATTENTION-If the use of the Mounting Bracket in the installation method being done, you will need an outlet box (not supplied) rated for 100lbs or more * * *

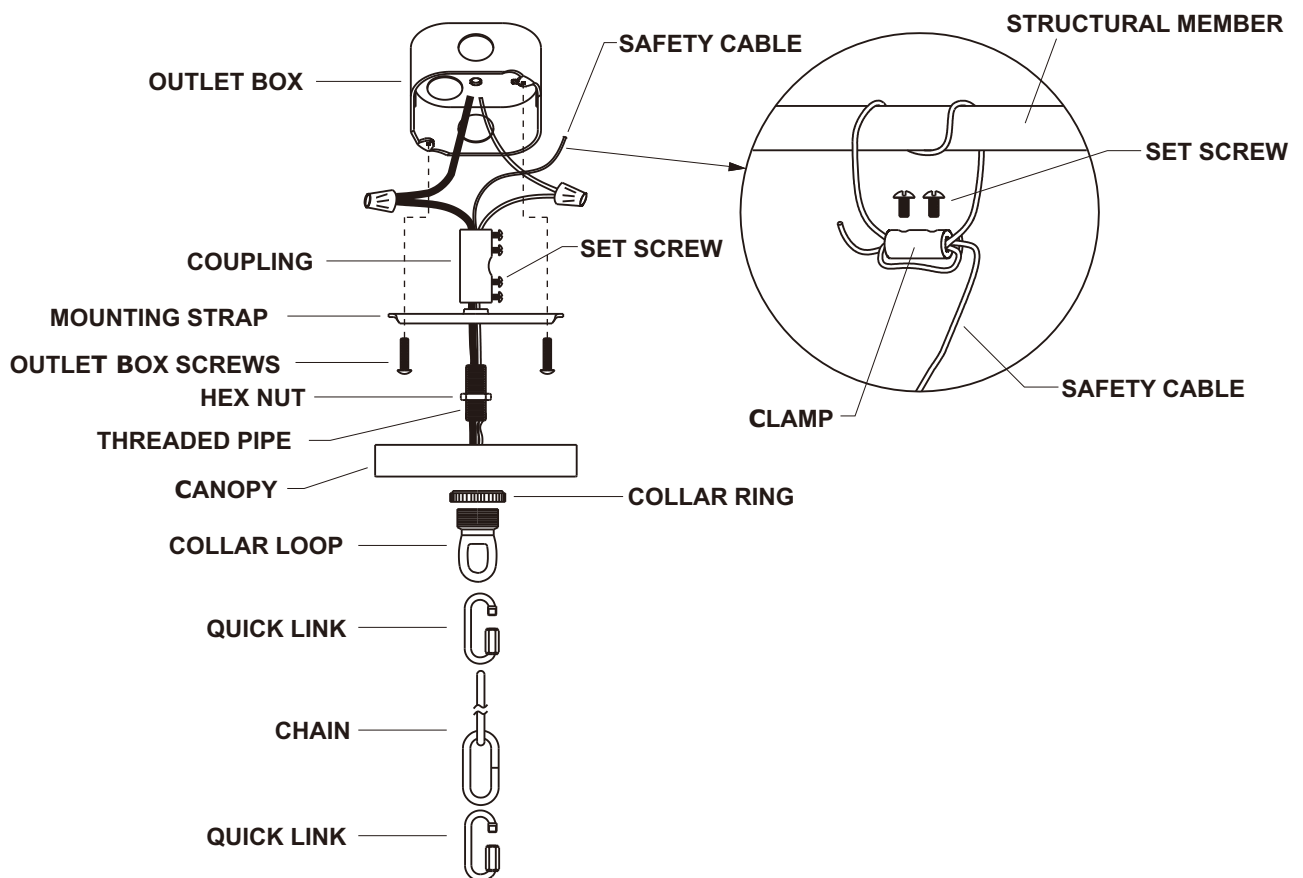

NOTE: NEC CODE (314.24) requires that ceiling outlet boxes in the United States support up to 50 lbs. This fixture exceeds 50 lbs. and must be installed using an outlet box approved for up to 100 lbs. or independently of the existing outlet box. Installation hardware and instructions are provided for both.

MOUNTING TO A 100 lb. MAX. APPROVED OUTLET BOX.

1. Feed the Support cable from the fixture through the outlet box. Drill 3/16 " diameter hole in outlet box if no other holes are available. Wrap safety cable around the structural member and pull cable taut. Secure cable with the clamp and (2) set screws provided.
2. Screw the threaded rod into the coupling until the threaded rod is flush with top of the coupling. Secure in place by tightening the set screw.
3. Pass the threaded pipe through the mounting strap.
4. Thread screw collar loop onto the threaded rod until the threaded rod is flush with hole on lower side of screw collar loop.
5. Secure screw collar loop in place by tightening the hex nut.
6. Assemble the mounting strap to outlet box using screws provided with outlet box.
7. Use one quick link to connect fixture loop and the bottom of chain. Slide the screw collar ring over the upper end of the chain, through the (Finished side down). Then use another quick link to connect collar loop and the top of chain.
8. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop. Proceed to attach the **FIXTURE GROUND WIRE** to **HOUSE GROUND WIRE** using wire connector. Using wire connectors, connect the **HOUSE WHITE WIRE** to the **FIXTURE SUPPLY WIRE (WHITE OR RIBBED SIDE)**; connect the **HOUSE BLACK (or RED) WIRE** to the **FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE)**. Wrap all connectors with approved electrical tape.
9. Push the **CANOPY** upward over the **OUTLET BOX**. Be sure that all wires are carefully tucked into the **OUTLET BOX** cavity. Secure canopy against ceiling by threading **CANOPY LOCK RING** onto the **CANOPY LOOP**. Tighten until snug.